

INSTALLATION INSTRUCTIONS

ROLLER SHADES



Open Roll Shades

Continuous Loop Control | Cordless | Automation

1. Install the Brackets

Important: Make sure the mounting surface is level. Brackets must be in line and level for shade to operate properly. Shim brackets if necessary.



1a. Open Roll Tubes 1½" to 2½"

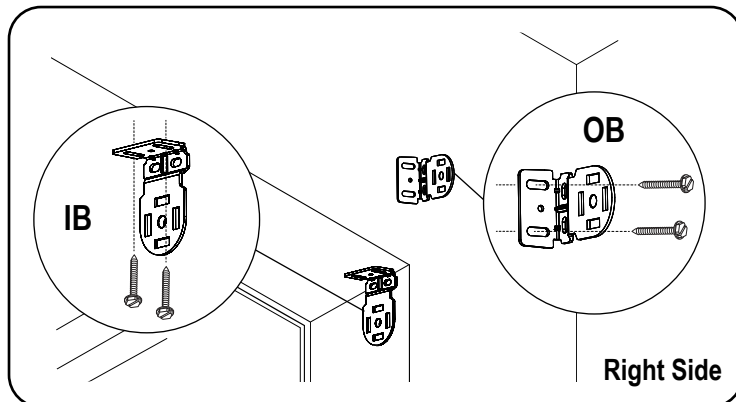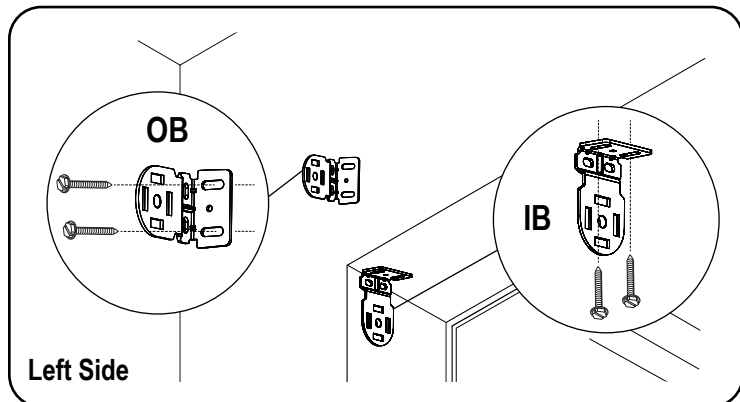

Inside Mount (IB): Install each bracket with two screws either through the side or up through the top. Make sure all brackets are leveled and aligned.



Outside Mount (OB): Secure each bracket with two screws through the side of the bracket. Make sure all brackets are level. Minimum 1¾" mounting surface height requirement.

1b. Double Brackets (Only 1½" Tubes)

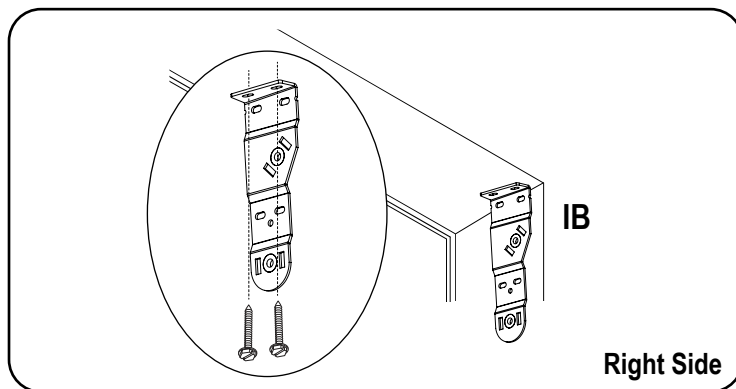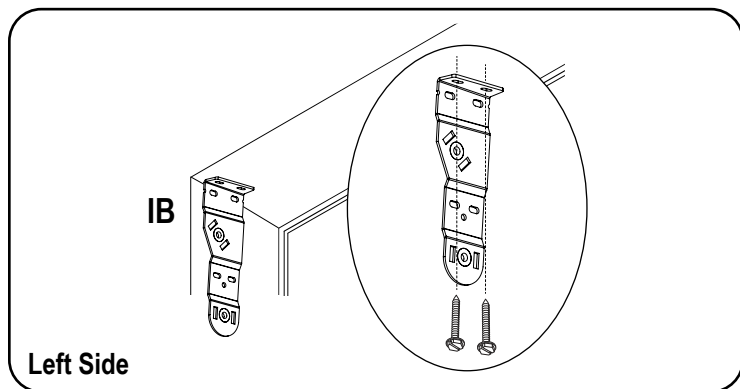

Inside Mount Only (IB): Install each bracket with two screws through the top. Make sure brackets are leveled and aligned. Minimum 1¾" mounting depth requirement. 2⅛" to 4" flush mount depth requirement (depends on roll diameter).

1c. Open Roll Tubes 3¼" and Hardwired Motorization

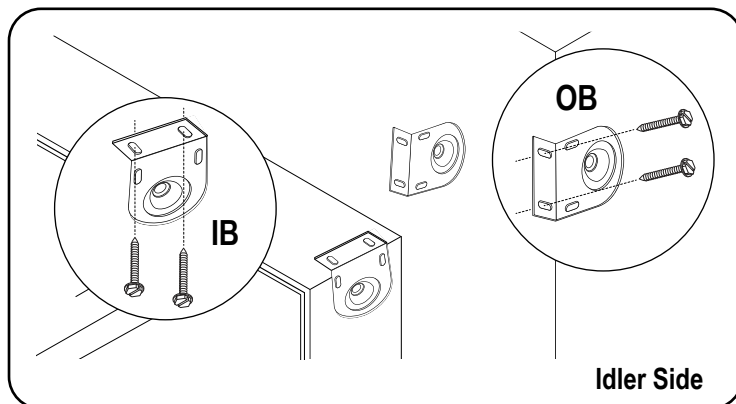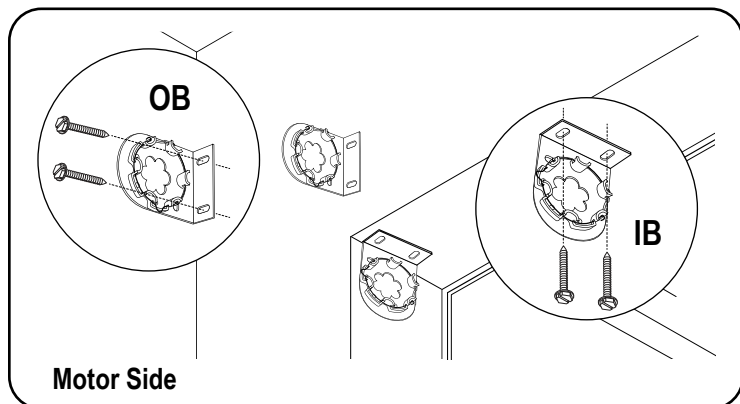


Inside Mount (IB): Install the brackets level and aligned to each other. Use the screws provided to screw through the top. Minimum 3" mounting depth requirement. 2⅛" to 4" flush mount depth requirement (depends on roll diameter).

Outside Mount (OB): Secure each bracket with two screws through the side. Make sure all brackets are level. Minimum 3" mounting surface height requirement.

INSTALLATION INSTRUCTIONS


2. Install the Shade

2a. Continuous Loop Control

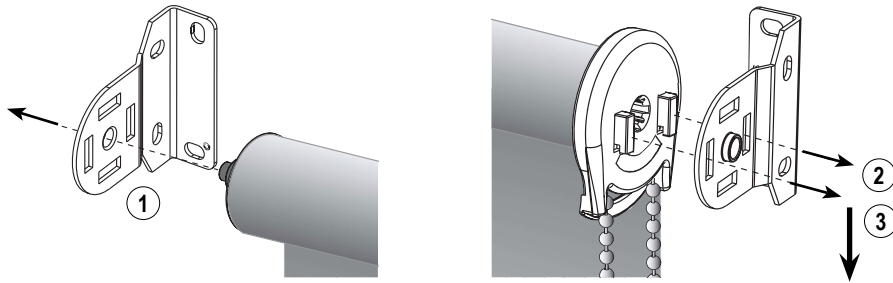

1. Place the spring loaded pin end into the round hole of the bracket. Then, keeping the pin end secure in its bracket.
2. Insert the hooks on the clutch straight into the two slots in the bracket. Once the two hooks are through the slots
3. Gently pull downward on the hook side until the hooks have locked securely onto the bracket. The bottom of the clutch with chain loop should point straight down.


2b. Motorization (Open Roll Tubes 1½" to 2½")

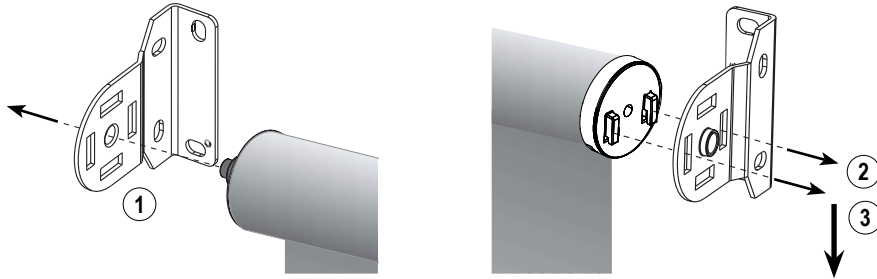

1. Place the spring loaded pin end into the round hole of the bracket. Then, keeping the pin end secure in its bracket
2. Insert the hooks on the motor head straight into the two slots in the bracket. Once the two hooks are through the slots
3. Gently pull downward on the motor until the hooks have locked securely to the bracket. The reset button of the motor should be facing down.

INSTALLATION INSTRUCTIONS

2c. Cordless Lift

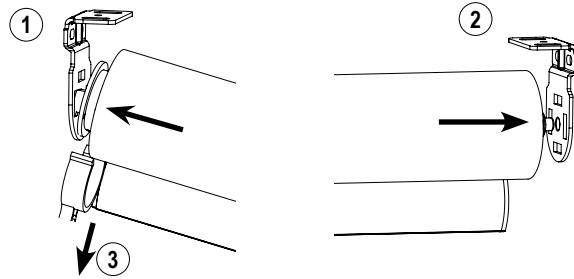


Important: Do not remove the yellow lock until the shade is fully installed and securely attached to both open roll brackets.

1. Position the shade so the end with the yellow lock and wheel aligns with the open roll bracket. Insert the hooks into the openings in the open-roll bracket & push the shade down to secure it into the bracket. Do not remove the yellow lock at this time.
2. With the wheel side securely attached, install the opposite end of the shade by compressing the spring-loaded pin and inserting it into the round hole in the open-roll bracket. Keep the yellow lock in position on the wheel.
3. Confirm that both ends of the shade are fully seated and securely engaged in their brackets before removing the yellow lock.


Note: Store the yellow lock in a safe location for future use. The yellow lock is required to secure the spring tension if the shade must be removed for reasons other than tension adjustment. The lock does not need to be reinserted when performing tension adjustments using the wheel.

2d. TouchLift™

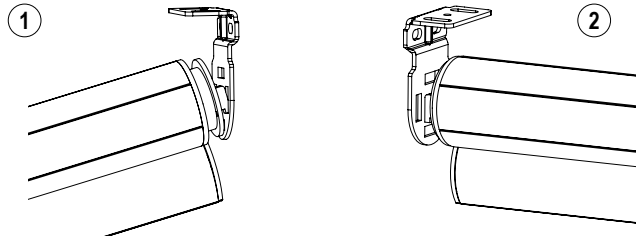

1. Place the idler pin end into the two vertical slots on the bracket. Keeping the idler pin end secure in its bracket
2. Insert the hooks on the spring head straight into the two slots in the other bracket. Once the two hooks are through the slots, gently pull downward until the hooks have locked securely to the bracket.

2e. Open Roll Tubes 3 1/4" and Hardwired Motorization

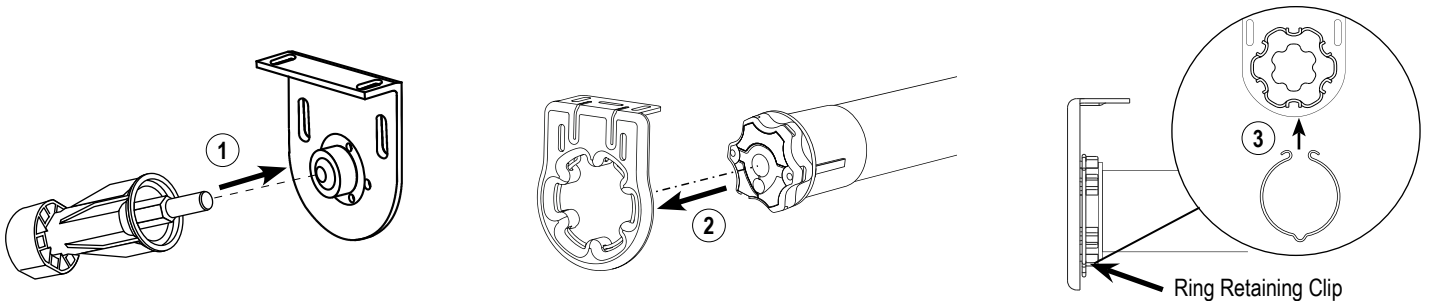


Rotate the roll to ensure reset button of the motor is facing down.


1. Place the spring loaded pin end into the round hole of the Idler bracket. Keeping the pin end secure in its bracket
2. Align and insert the motor head into the slots in the motor bracket. Once the motor is complete security into the motor bracket
3. Snap the ring retaining clip in place, locking the motor in position.

INSTALLATION INSTRUCTIONS

3. Install the End Caps (Open Roll Tubes 1½" to 2½")

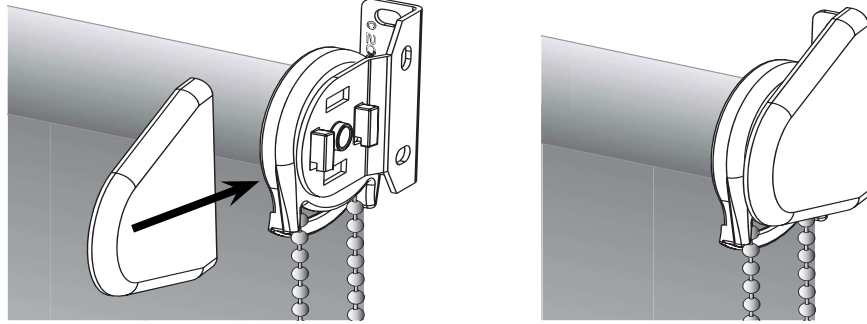

4. Attaching the Beaded Cord Tensioner

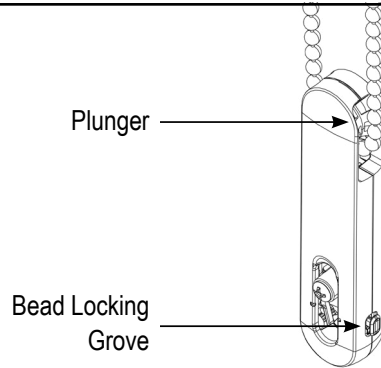

NOTE: For the shade to operate properly, the tensioner must be correctly mounted and secured.


[Click this link](#) to refer to the Installation Instructions for the Bead Chain Loop, Universal Cord Tensioner

4

5. Adding Optional Top Treatment to Open Roll

Please refer to *Roller Shades - Skyline Fabric Cornice installation instructions*.

6a. Removing the Shade (Only if Necessary — Tubes 1½" to 2½", Continuous Loop Control, Automation and TouchLift™)

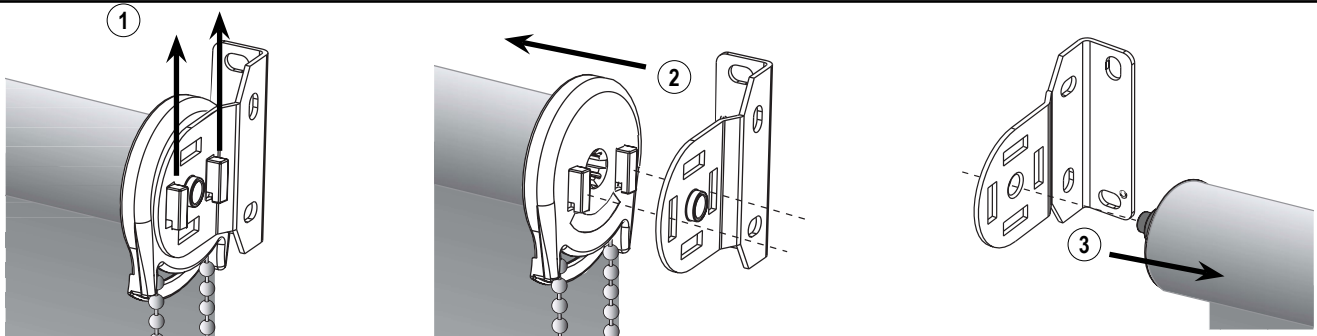


First, raise the shade.

1. To disengage, gently lift up the control side (hook end) until the hooks touch the top part of the bracket slot.
2. Slide the roll towards the idler pin end (Spring Idler end for TouchLift™ shades) until the hooks are completely out of the bracket slots.
3. Remove the spring loaded pin end from the Idler bracket.

4

INSTALLATION INSTRUCTIONS

6b. Removing the Shade (Only if necessary — Cordless Lift)

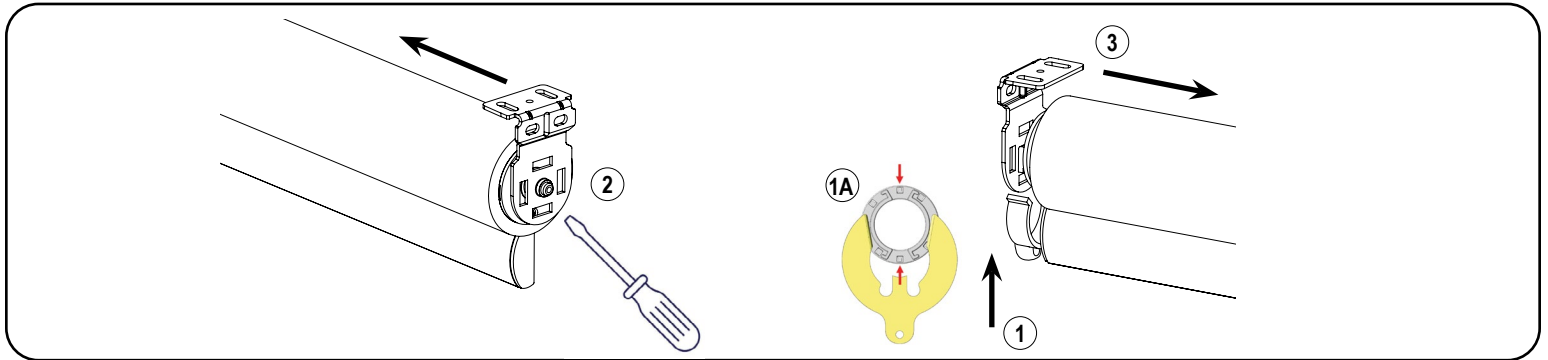


Before removing the shade, have the yellow lock provided with the shade and a screwdriver or other pointed tool available. Raise the shade to the fully open position.

1. Insert the yellow lock into the spring head, located on the wheel end of the shade, to lock the spring tension. See Image 1A.
2. Using the screwdriver or other pointed tool, push the idler pin inward to disengage that end of the shade from the open roll bracket.
3. While supporting the shade, lift the wheel end upward to disengage the hooks from the open-roll bracket. Carefully remove the shade, ensuring the yellow lock remains securely inserted throughout removal and handling.

Note: Keep the yellow lock inserted until the shade is reinstalled.

6c. Removing the Shade (Only if Necessary — Open Roll Tubes 3¼" and Hardwired Motorization)

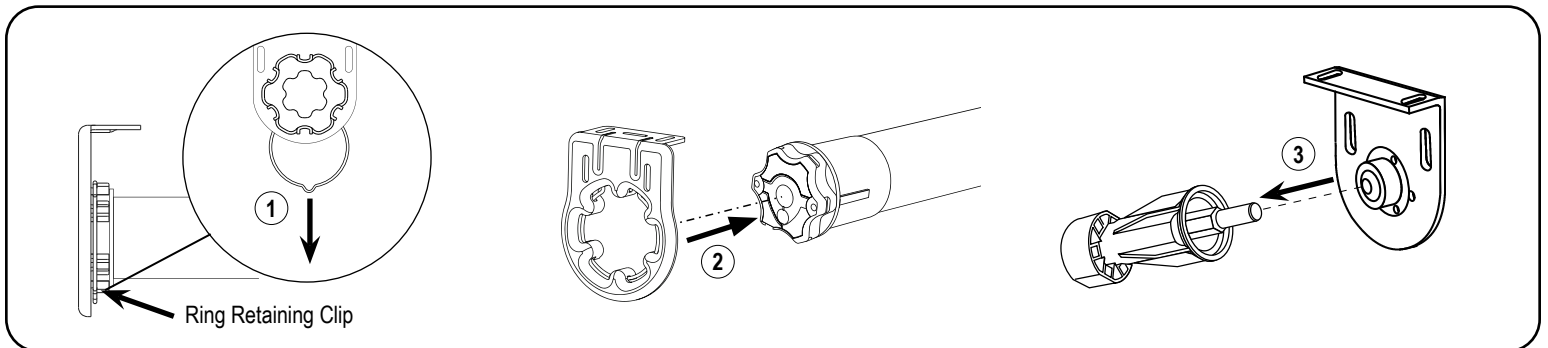

First, raise the shade.

1. Remove the ring retaining clip in place from the motor.
2. Slide the roll towards the spring loaded pin end until the motor head is completely out of the motor head slots.
3. Remove the spring loaded pin end from the idler bracket.

ADJUSTMENT TIPS

Tension Adjustment for Cordless Lift

If needed, with the shade installed and the wheel facing inside the room, turn the wheel to fine-tune the balance and tension of the shade.



Tension Adjustment For TouchLift™

Inside Mount IB: Follow instruction on Step 6 to remove the shade from the installation bracket before adjusting the tension.

Outside Mount OB: Do not need to remove the shade from the installation bracket, follow the steps below to adjust the tension

1. Use 5mm Allen wrench to turn the spring head (left side for standard roll and right side for reverse roll):
 - Turn clockwise to add/increase tension.
 - Turn counterclockwise to decrease/reduce tension.
2. After the additional turns for tension adjustment have been completed and with the Allen wrench still inserted inside the spring head, push the Allen wrench in to activate the inner break lock before removing the Allen wrench.
3. Reinstall the shade (and end cap if OB) after tension adjustment is complete.



Upper Limit Adjustment For TouchLift™

Inside Mount IB: Follow instruction on Step 6 to remove the shade from the installation bracket.

Outside Mount OB: Do not need to remove the shade from the installation bracket, follow the steps below to adjust the upper limit.

1. Use 5mm Allen wrench to turn the idle end (right side for standard roll and left side for reverse roll):
 - Turn clockwise to lower the upper limit.
 - Turn counterclockwise to raise the upper limit.
2. Reinstall the shade (and end cap if OB) after adjustment is complete.

Child Safety

Young children can **STRANGLE** in cord loops and in the loop above the cord stop. They can also wrap cords around their necks and **STRANGLE**.

- Always keep cords out of children's reach.
- Move cribs, playpens and other furniture away from cords.
Children can climb furniture to get to cords.
- Do not tie cords together.
- Make sure cords do not twist together and create a loop.

⚠ WARNING
⚠ ADVERTENCIA

Window Blind Cord Strangulation Risk
Window Blinds with a damaged or loose tension device or retractable cord that fails to fully retract pose a strangulation risk to children. To avoid this potential strangulation risk, consider purchasing cordless products or products with inaccessible cords.

Riesgo de Estrangulamiento en Cuerdas de Persianas
Las persianas con un dispositivo tensor suelto o dañado o con una cuerda retractable que no se ajusta completamente representan un riesgo de estrangulación para los niños. Para evitar un posible riesgo de estrangulamiento, considere comprar productos inalámbricos o productos con cuerdas inaccessibles.



1030880