 



Click2Fit Total Blackout Roller Shades

Install Guide

PARTS INCLUDED




Headrail Light
Blocking Covers

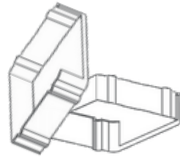

End Caps



Side Tracks

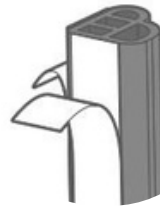


Light Sealing Strip




This is a Level 2 Install.

Installation

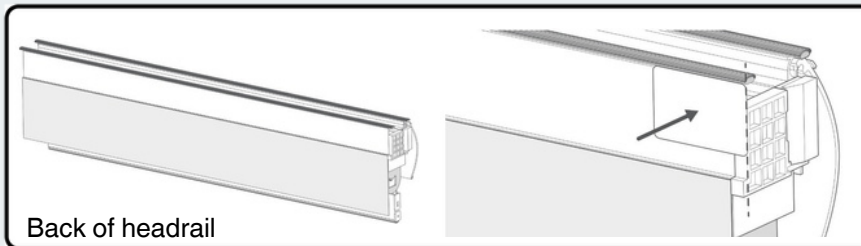


Back of headrail


Start by turning the headrail around and attaching the Headrail Light Blocking Covers.

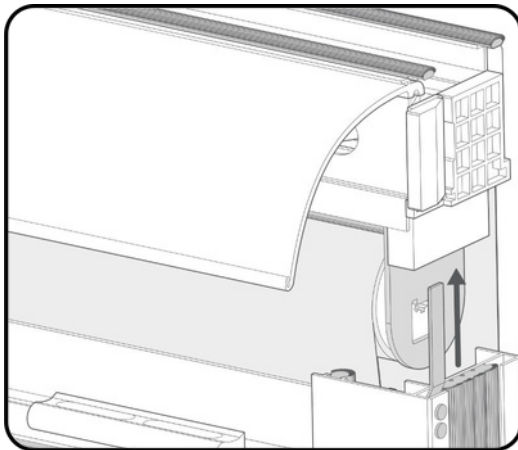


Attach the side rails to the channels on each side of the headrail.

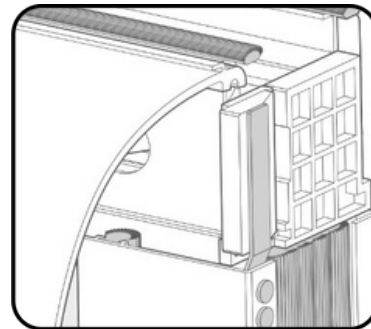

Make sure the support rod is on the outside of the headrail boot.

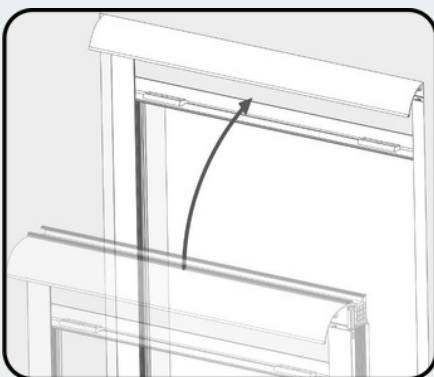

With both rails attached, lift the full assembly into the window.

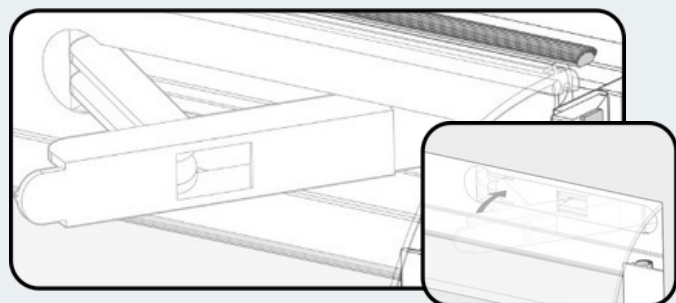


Make sure the lever is not pressed in during installation so the headrail will fit into the opening. Push the lever to click in place while holding the headrail up to the top of the window opening.

Click2Fit Total Blackout Roller Shades

Install Guide



Attach the bottom cap to each of the side tracks to ensure there is no damage to the bottom of the window opening.

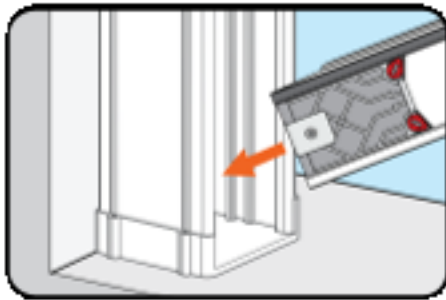


Make sure the side track is set slightly back in the window, about 1/4". Insert the bottom Click2Fit rail with the flange in the front, then rotate it towards you so the bottom lies flat on the bottom of the window sill.



Push the lever down and lock it in place.

Test out the shade and adjust as needed for smooth operation.

Congratulations! You've just installed your Click2Fit Total Blackout Roller Shades!
Optional Installation

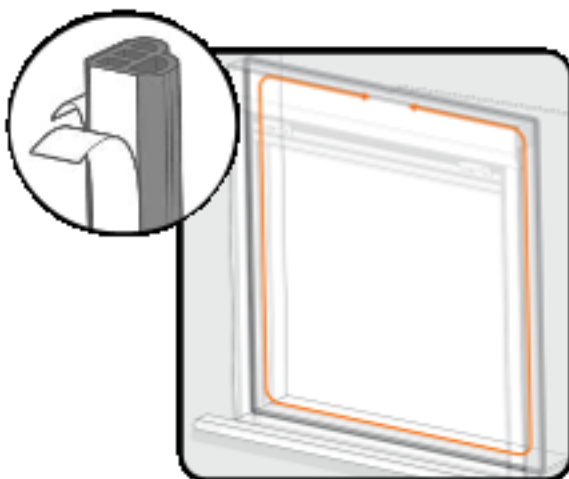

If you have gaps, add the included Light Sealing Strip to the outside edge of the side tracks to block additional light.



Peel the adhesive strip on the back of the side channels and attach the blackout skirt to block additional light.

Cleaning: To clean the shade fabric, use a feather duster or vacuum lightly using a soft brush attachment.

PROGRAMMING AND USING YOUR REMOTE


IMPORTANT: THEMOTORIZED SHADES WEREPROGRAMMEDAND IN SLEEP MODE, PLEASE WAKE UP THE MOTORS BEFORE USING. TO DO THIS, PRESS AND HOLD THE SETTING BUTTON FOR 6 SECONDS UNTIL YOU HEAR THE MOTORS SOUND AND THE LEDS FLASH RED FOUR TIMES.

REMOTE CONTROLLER TECHNICAL DATA

• Channels	5+all (RW5-G2) 14+all (RW14-G2)	• Operation Temp	-20 ... 55°C
• Max. blinds	16 per channel	• Frequency Indoor	ASK 433.92 MHZ
• Supply voltage	3V, CR2350 Coin Cell	• Range*	35m
• Protect Rate	lp20	Dimensions(W x H x D)	46 x 122 x 12.4 mm
		Weight**	56 grams

NOTE :

- * The indoor range is typically 35m but can vary based on the thickness and material of the walls.
- ** Including battery.


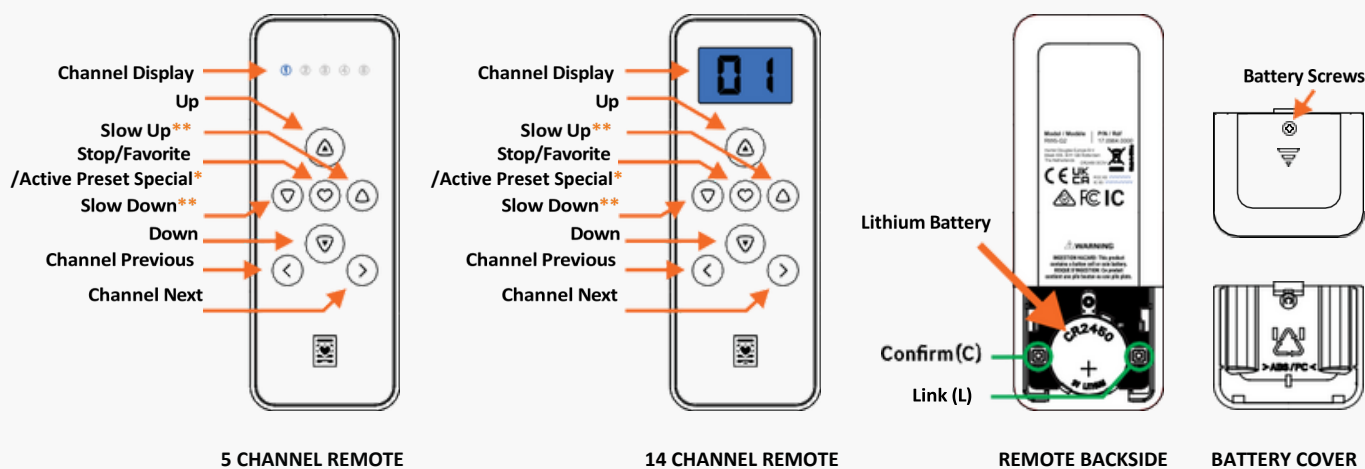


NOTE :

- * Only for certain products
- ** To active the preset special function, hold 2 seconds and then release.


PAIR A SINGLE SHADE TO A CHANNEL

1. Select the desired shade **channel** (channel backlight will turn off after 4 secs).
2. Remove the battery cover to access the 'C' button.
3. Hold the setting button until the shade **jogs** and the motor's **green** LED blinks.
4. Hold the setting button again until the shade **beeps** and the motor's **red** LED blinks steadily.
5. While the motor beeps (max. 15 secs), press the 'C' button. The shade will **jog**, and the **green** LED will flash to confirm successful pairing.

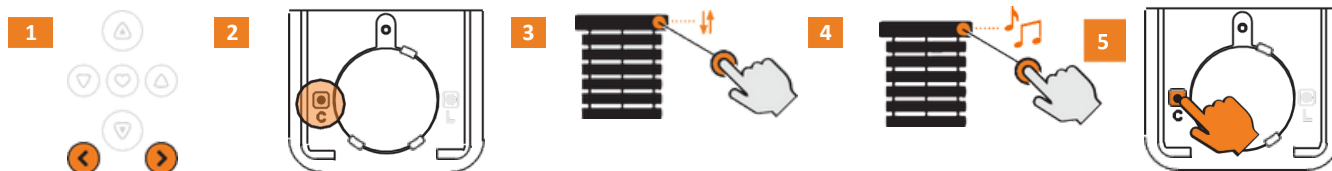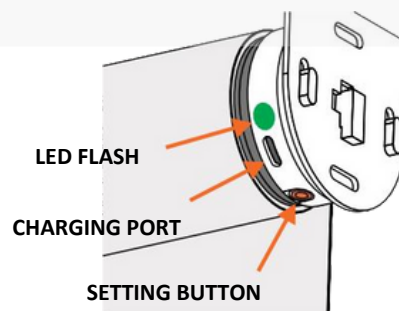


DELETE A SHADE FROM REMOTE

1. Select the desired shade **channel** (channel backlight will turn off after 4 secs).
2. Remove the battery cover to access the 'C' button.
3. Press the 'C' button three times within 2 seconds. The shade will jog, and the **green** LED will flash to confirm deletion.

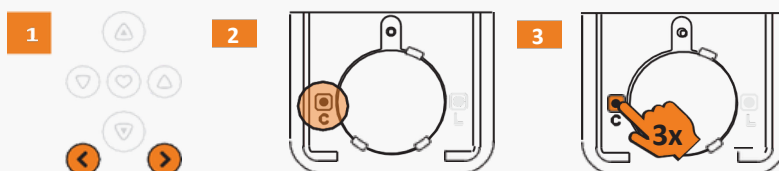


SET THE FAVOURITE POSITION

1. Send the shade to the desired favourite position.
2. Remove the battery cover to access the 'L' button.
3. Hold the 'L' button first, then quickly hold the **Heart** button until the shade beeps and the **green** LED blinks to set the favorite position.

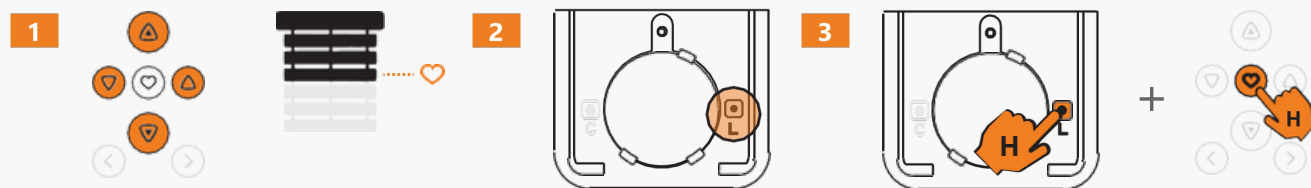

DETELE THE FAVOURITE POSITION

1. Press **Heart** to send the shade to its favourite position.
2. Remove the battery cover to access the 'L' button.
3. Hold the 'L' button first, then quickly hold the **Heart** button until the shade beeps and the **green** LED blinks to delete the favorite position.

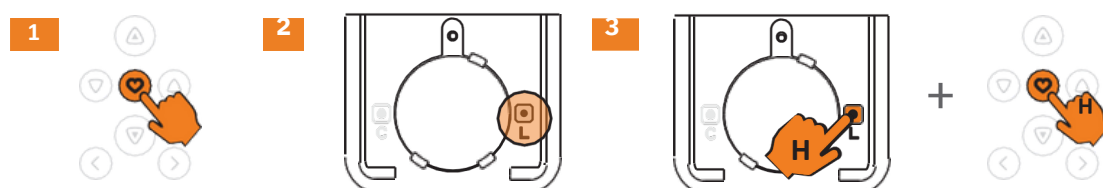


CHANGING THE MOTOR SPEED

A shade offers three speed levels: **Standard** (default), **Comfort**, and **Slow**. Changing the speed cycles to the next available level

1. Make sure the desired shade channel is active.
2. Hold **Heart** first, then quickly hold the **Up** button until the shade beeps and the **green** LED blinks to change the speed.

Note:


All shades on the same group channel will have their speed

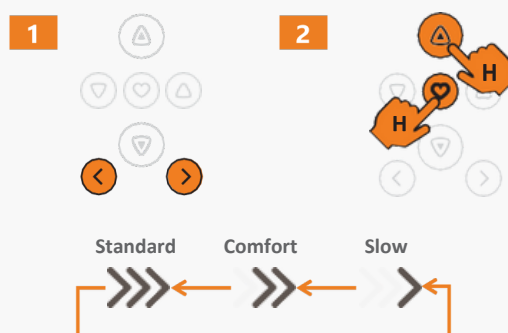

INSTALL/ REPLACE THE REMOTE BATTERY

If the group channel number no longer lights up or the controlled product stops responding, it's time to replace the battery


1. Use the included Philips screwdriver to turn the captive screw counter clockwise until it loosens but remains attached to the cover.
2. Slide the battery cover off gently to access the battery compartment.
3. Carefully remove the old battery and align the battery with the + symbol facing upward. Place it into the socket, ensuring it is seated securely and held in place by the plastic snap legs.
4. Securely slide the battery cover back into position and tighten the captive screw.

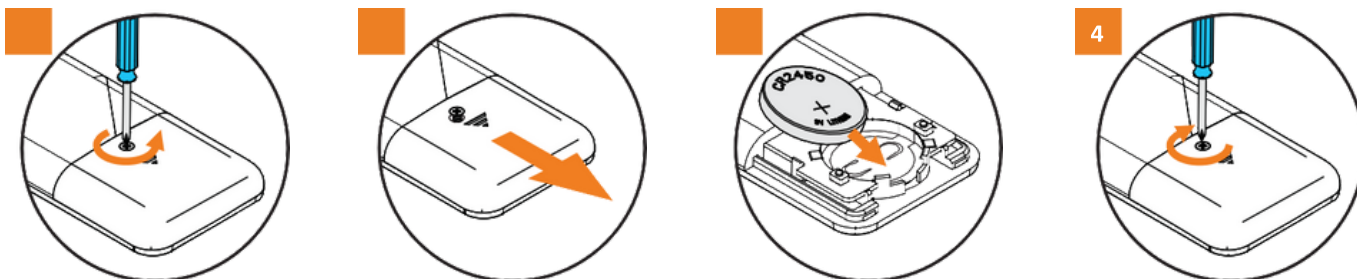

MOUNT THE REMOTE HOLDER

NOTE: A wall mount remote holder is included with your remote, but it is optional to install it.

1. Determine where you'd like to place your remote carrier in the room. It is common to place it near a light switch, or on the wall next to the window.
2. With the holder in the upright position, insert the provided screws to secure it to our mounting surface.
3. After the screws are attached to the wall, insert the screws cap cover to the desired position in the remote holder.

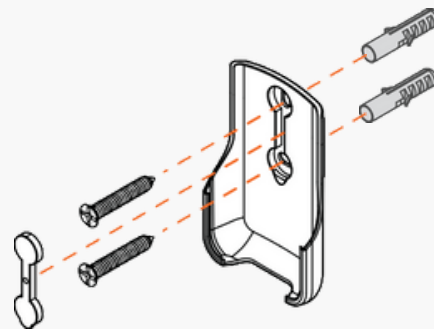

TROUBLESHOOTING

QUESTION	ANSWER
None of the backlit buttons illuminate on my remote when I press the buttons?	Check if the battery needs replacement or is inserted properly and not damaged.
When I try to add a blind to the app or remote, there's no response?	1. Blind has no power. Make sure the motor is awake and not in deep sleep 2. Make sure the integrated Li-ion battery of the blind is charged. 3. Check if the correct group channel has been selected.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER
My shades are not responding to the remote control?	1. Check battery has been inserted correctly into remote control. 2. Check blinds have been added to the remote control. 3. Check battery level of the blind, via the app. Go to: Settings > Blind Status, then press 'Connect'. 4. If battery level of the blind is good, replace remote control battery.
Can I add blinds to a remote control without using the app?	Yes. A remote control can be paired to a shade without using the app. To do this: 1. Choose the group number on the remote control that you want to add the blind to. 2. Remove the battery cover on the back of the remote control and locate the button marked 'C'. 3. Press and hold the manual push button on the blind until it jogs. Repeat the process until it jogs a 2nd time and persists making audible sound. 4. Press the 'C' button on the remote within 15 seconds until the blind jogs. Blind is now paired to the remote control.
Can I copy the same information from one remote control to another?	No, it is not possible to copy stored information from one remote control to another.
Do I need a remote control to work my blinds?	For maximum flexibility and operation, one remote control per room, is recommended.
Can I assign more than one remote control to an individual blind?	Yes, it is possible to assign up to a max. of 10 remotes to an individual shade. Repeat the following steps for each remote: 1. Choose the group number on the remote control that you want to add the blind to. 2. Remove the battery cover on the back of the remote control and locate the button marked 'C'. 3. Press and hold the manual push button on the blind until it jogs. Repeat the process until it jogs a 2nd time and persists makes audible sound. 4. Press the 'C' button on the remote within 15 seconds until the blind jogs. 5. Press and hold the 'C' button on the remote control until the blind jogs. The shade is now paired to the remote control.
How many blinds can the remote control operate?	For model 5 channels remote: • 1 remote control has 5 groups to choose from. • The maximum number of blinds that can be assigned to each group, is 16. For model 14 channels remote: • 1 remote control has 14 groups to choose from. • The maximum number of blinds that can be assigned to each group, is 16.
Which battery type is used for the remote control?	The remote control will require a single 3V CR2450 coin / button cell battery.
Will the remote control work fresh out-of-the-box?	No. The remote control will need to be assigned either directly to the shade or via the SmartView app.

SAFETY INSTRUCTIONS

WARNING: IMPORTANT SAFETY INSTRUCTIONS

Follow all instructions carefully, as incorrect installation or handling can lead to severe injury.

Do not ingest the battery. This device contains a lithium coin/button cell battery. Swallowing the battery can cause severe internal burns within 2 hours and may lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely (or lacks a captive screw), stop using the product immediately and keep it out of reach of children. If a battery is swallowed or placed inside any part of the body, seek immediate medical attention.

Replacing the battery with an incorrect type may compromise safety features.

Do not dispose of batteries in fire, hot ovens, or crush them, as this can lead to explosions or leakage of flammable liquids or gases. Avoid exposing batteries to extremely high temperatures or low air pressure, as this may cause explosions or leakage. Keep the device dry and do not paint it. Do not drop, knock, or shake the device, as rough handling can damage internal circuit boards. Ensure the shade can move freely without obstruction from objects.



Do not drill in to the device!



Do not immerse into a liquid



Never drop the device!



Avoid direct sunlight!

- Do not allow children to play with the remote control

BATTERY RECYCLING INSTRUCTIONS

1. To responsibly dispose of the coin cell battery in your remote control:
2. **Do Not Discard in Regular Trash:** Coin cell batteries contain hazardous materials and must not be disposed of in household waste. Improper disposal can harm the environment.
3. **Locate a Recycling Center:**
 - In the **United States**, visit [Call2Recycle](#) to find a nearby battery recycling drop-off location. Many retail stores, including home improvement and electronics stores, accept used batteries for recycling.
 - In **Canada**, check with local recycling programs or visit [Call2Recycle Canada](#) to locate a drop-off site.
4. **Prepare the Battery for Recycling:** Before recycling, tape over the positive (+) terminal of the battery with clear or electrical tape to prevent accidental discharge or short-circuiting.
5. **Follow Local Guidelines:** Some municipalities may have additional guidelines for battery disposal. Always adhere to your local regulations to ensure safe handling and recycling.
6. By recycling your coin cell battery, you help protect the environment and comply with regulations in the US and Canada.



LEGAL INFORMATION

CE Statement

Hunter Douglas hereby declares that the RW5-G2 and RW14-G2 Remote Controls are in compliance with the basic requirements and other relevant provisions of the Electromagnetic Compatibility (EMC) Directive 2014/30/EU, Radio Equipment Directive (RED) 2014/53/EU and Low Voltage Directive (LVD) 2014/35/EU. The full text of the EC declaration of conformity can be obtained online: www.tuiss.com/certifications



UK Statement

Hunter Douglas hereby declares that the RW5-G2 and RW14-G2 Remote Controls are in compliance with the basic requirements and other relevant provisions of the Electromagnetic Compatibility Regulations 2016, Radio Equipment Regulations 2017 and Electrical Equipment (Safety) Regulations 2016. The full text of the UK declaration of conformity can be obtained online: www.tuiss.com/certifications



FCC Statement

FCC ID: 2BMQ2RW5RW14

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Innovation, Science and Economic Development Canada ICES-003 Compliance

IC: 33385-RW5RW14

CAN ICES-3 (B)/NMB-3(B)

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

QUICK START GUIDE OF THE TUISS SMARTVIEW APP

The full app guide is available at <https://cdn.selectblinds.com/documents/smartview-motorization-guide.pdf>

Here are quick steps to start the app:

Step 1: Download the App.

Search 'Tuiss SmartView' on the App Store or Google Play Store.

Or simply use your phone camera to scan the QR code on the front of your blind's swing label to download the App.




Open the App.

Press the 'Create account' button to create your account.

Enter a valid email address, create a password and accept the Terms of Use. Tap 'Sign Up'.

A confirmation message will appear stating the account was successfully created. Tap 'Continue'.

When you first open the App, you will be asked for permission for SmartView to use your phone's Bluetooth. Select 'Continue'.

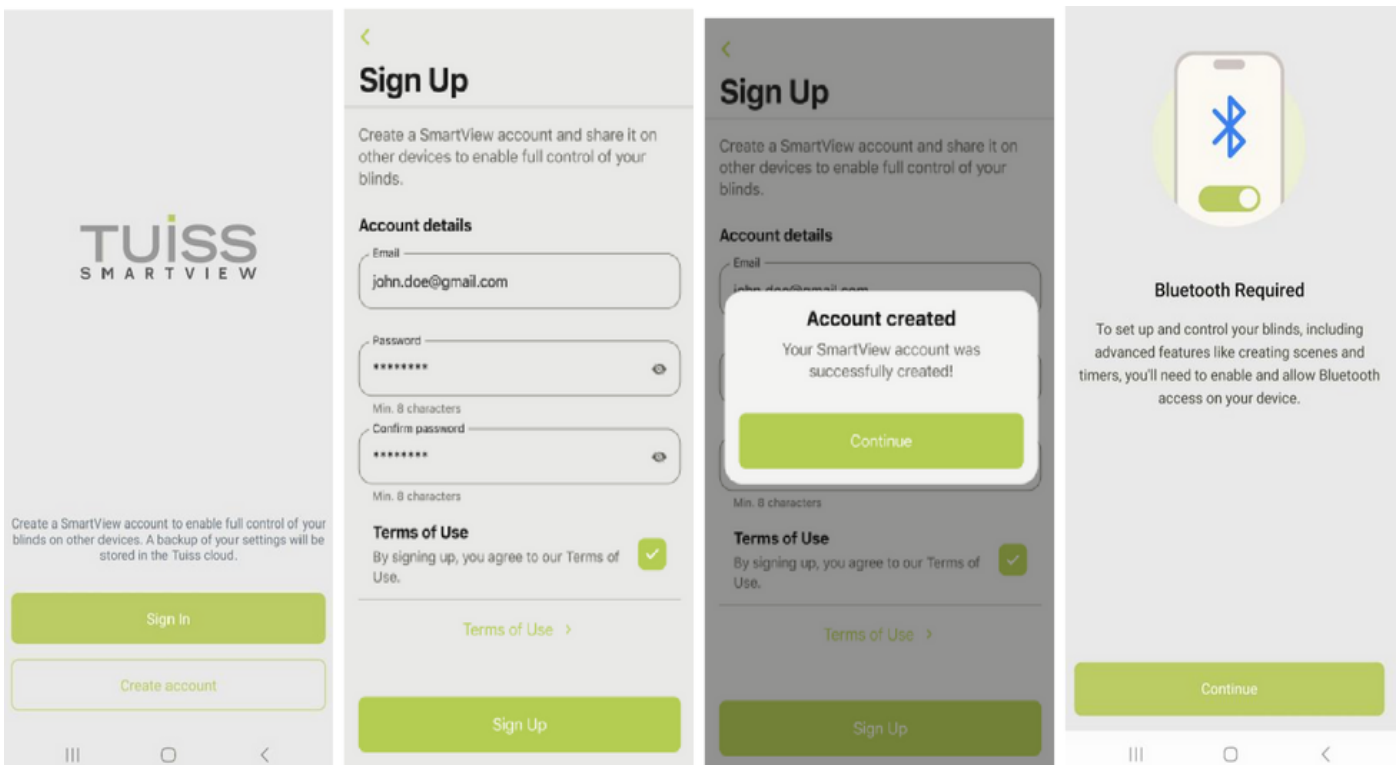

Step 2: Wake up the motor.

Wake up the motor by pressing and holding the setting button at the motor head for 6 seconds until the motor sounds and LED flashes red 4x.

If you already woke up the motor, please ignore this step.



Step 3: Scan to add blind.



Select the option 'Add my first blind'.

Adding a blind is as simple as scanning the QR code on the back of your swing label.

You may be asked by your phone to give permission for SmartView to access your camera, make sure you allow it - you only have to do this once.


After scanning the QR code, your blind will move up and down briefly. The App will ask for confirmation.

Press 'Found it!' to continue or select 'Jog to identify' so that you can recognize the blind by briefly moving it up and down again.

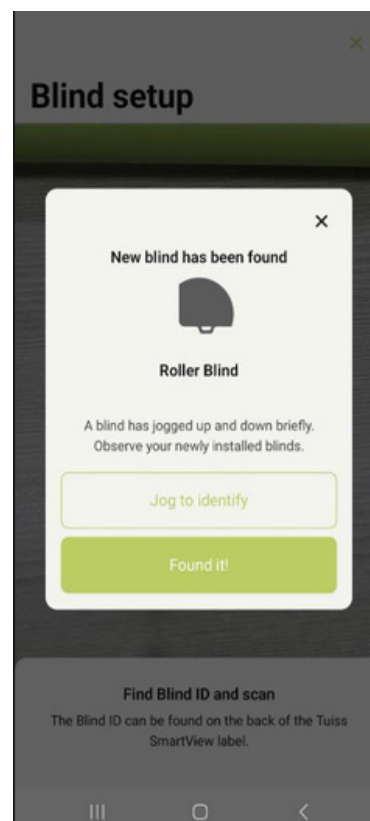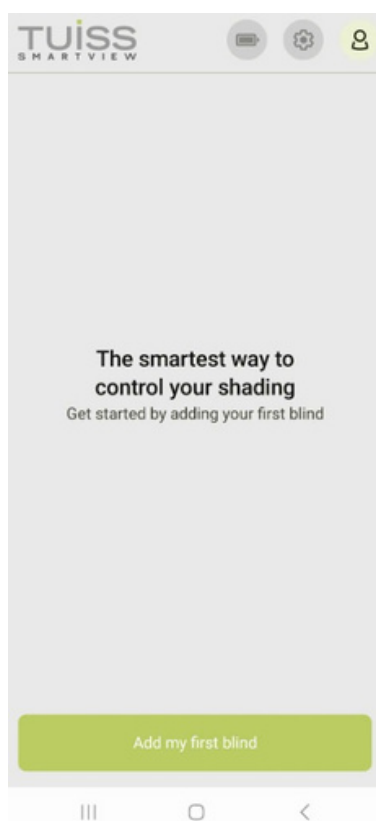

Name the blind and choose the room where your blind is located (create a new room or select an already existing room).

Press 'Save' then 'Done' if you do not need add another blind; press 'Add new blind' if you need to add another blind.

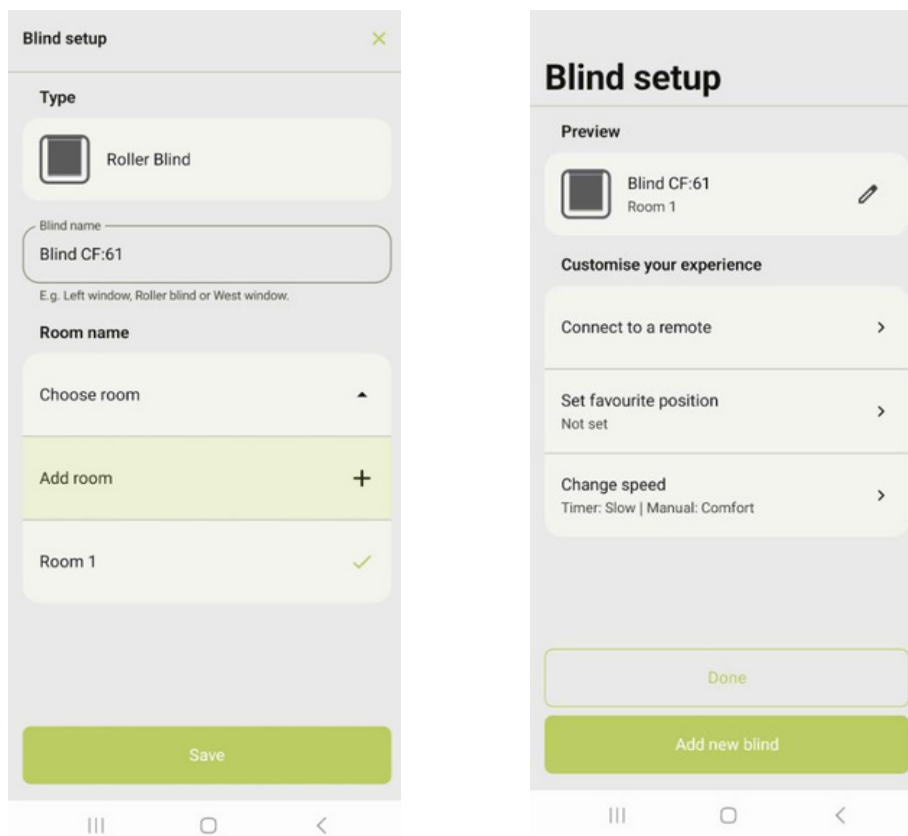

Step 4: Ready to use.

You can now use the 'Open' and 'Close' buttons to move the blind to its top or bottom limit positions with a touch.

These Open and Close buttons will move all blinds assigned to the same room simultaneously.

To move individual blinds, press the 'Select blinds', then tick the box for the blind you want to move and hit 'Next'.

You can then drag the blind up or down to a precise position of your choosing.

