


ROLLER SHADE

INSTALLATION GUIDE

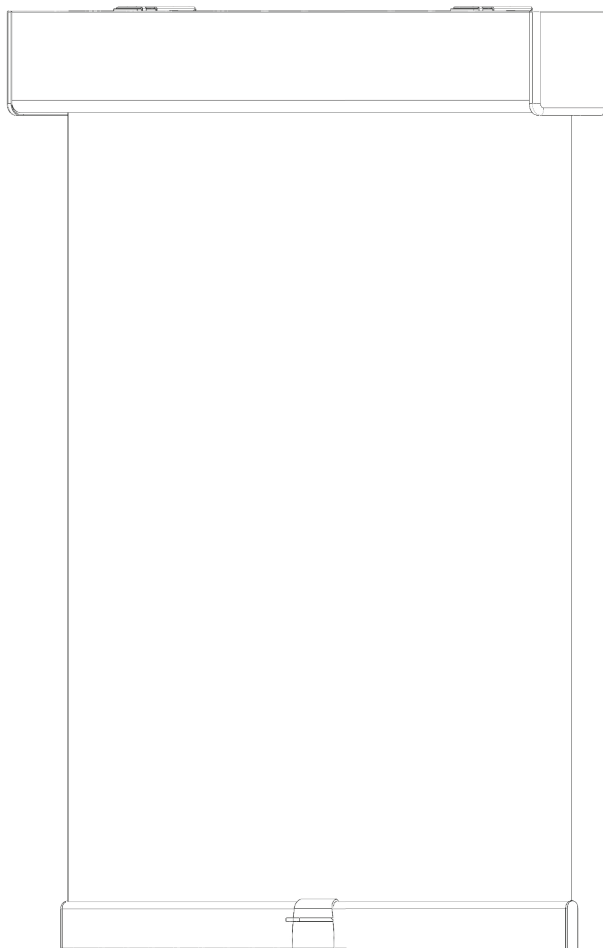

Lift Control:

CORDLESS



ROLLER SHADE

Lift Control: --- CORDLESS

L I M I T E D 3 Y E A R W A R R A N T Y

The Manufacturers Collection will be free from defects in materials and workmanship for as long as the original purchaser owns the product, provided that the product was installed properly. The limited 3 year warranty is extended to the original purchaser only, in the original window for which it was intended.

The warranty does not include any condition or damage resulting from accidents, alterations, misuse, failure to install properly, or others instances outside of Manufacturers control. This warranty also does not apply to conditions resulting from normal wear and tear.

To obtain service, contact the dealer from whom you purchased the product. Manufacturer will repair or replace defective parts or components at no charge.

This warranty is exclusive and in lieu of all other obligations, liabilities or warranties. In no event shall Manufacturers be liable for incidental or consequential damages, or for any other damage, loss or expense, cost or fees associated with such damage. In some states, exclusion for incidental or consequential damages are not allowable.

This warranty does not cover any transport, removal, or re-installation charges which may occur as a result of defects in materials or workmanship.

This warranty gives you specific legal rights, and may also have other rights, which vary from state to state.

CONTENTS

INCLUDED IN YOUR PACKAGE	1
SUGGESTED TOOLS (NOT INCLUDED)	2
MOUNTING OPTIONS	3
MOUNTING BRACKETS	4
INSTALLING THE SHADE	5
OPERATING THE SHADE	6
CARE AND CLEANING	7
WARNING EMERGENCY / FIRST AID	8

Thank you for Choosing our Roller Shade for your Residential or Commercial Property.

We are confident that you will find our Roller Shade to be of superior quality and value, compared to other shades available.

In this guide, you will find useful information about installation, child safety, cleaning, and warranty when using your shade.

READ ALL INSTALLATION INSTRUCTIONS BEFORE INSTALLING


CONTACTING US:

Contact your Dealer regarding any question or concerns about your product.

PLEASE KEEP FOR FUTURE REFERENCE / TROUBLESHOOTING

INCLUDED IN YOUR PACKAGE

ROLLER SHADE - SQUARE HEADRAIL- CORDLESS

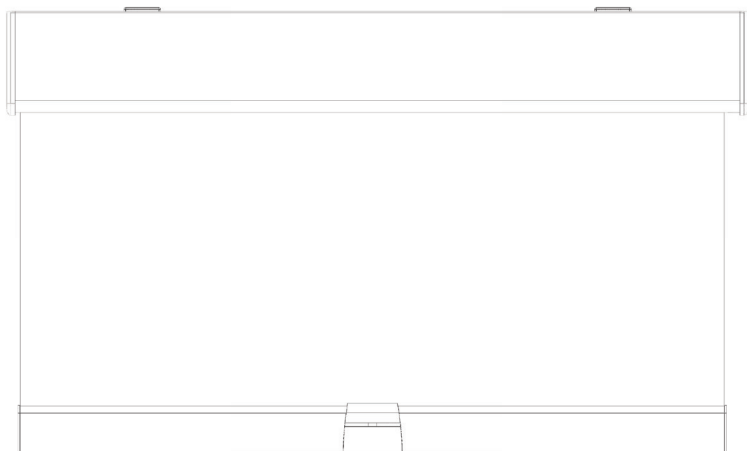

SCREWS


Quantity: 4 per packet



BRACKETS

Quantity: 2

The wider the blinds the more brackets provided - see chart below

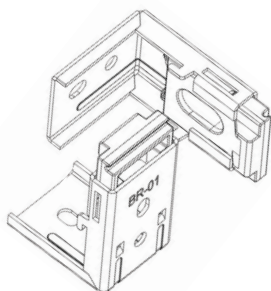


INSTALLATION BRACKET REQUIREMENT CHART

Blinds Width	Brackets Required
39" or smaller	2
40" to 59"	3
60" to 78"	4
79" to 98"	5

OPTIONAL PARTS: (supplied upon request)

Spacer Blocks (Not Provided)

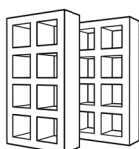

Use for shades that need more space between the wall.


Wall anchors (Not Provided).



Wall Anchor
(Not Provided)


If mounting into drywall, you will need wall anchors to ensure a secure installation.

SUGGESTED TOOLS (NOT INCLUDED)

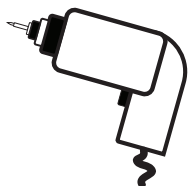

DRILL

 *1/16" drill bit,
and 1/4"
hex driver*



LEVEL




PENCIL




SCREWDRIVER

*Flat blade, Phillips, or
1/4" hex driver*

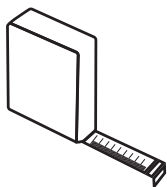

TAPE MEASURE

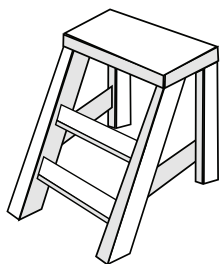

LADDER



MOUNTING OPTIONS

Your new shade is custom made to your specifications from the finest fabrics available. The installation should be easy and your shade will look elegant.

MOUNTING OPTIONS:



Inside mount (IB):

The shade is mounted inside to the top of the window frame.

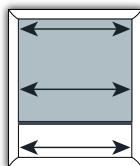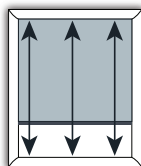

Outside mount (OB):

The shade is mounted either on or outside the window frame.

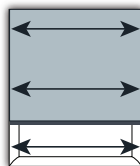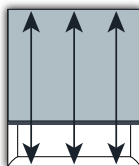

Mounting NOTES:

Mounting screws provided are suitable for most mounting surfaces. See below for additional suggestions.



- For wallboard or plaster: Use hollow wall anchors for added support. (not included)
- For concrete, stone, brick or tile: Use an appropriate drill and appropriate anchors before fastening the screws. (not included)
- For metal surfaces: Pre-drill holes and use appropriate anchors before fastening the screws. (not included)

TROUBLE SHOOTING TIPS

Dry-Fit Bracket into Headrail Cassette: Prior to installing your shade, dry-fit the Bracket into the Headrail Cassette to verify how the bracket will snap into place.

Installing Brackets:



Inside mount: Use the stickers on the headrail to find the bracket center for each bracket. The bracket is able to move within the 2" area shown on the sticker.

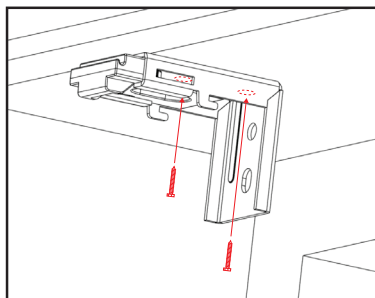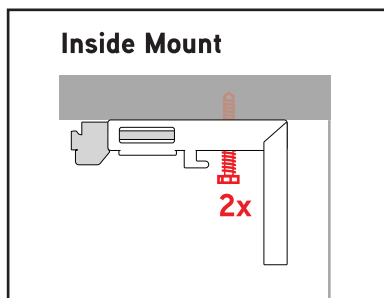

- Hold the headrail up inside the window frame and mark center based of the provided sticker on the headrail.
- Align brackets to the marked positions and secure through two holes, ensuring that the bracket tops are aligned and level to one another. Use wall anchors for a secure hold.

Outside Mount: Outside edge of the brackets should be positioned at a minimum of 2" from the outside of the headrail cassette, note the sticker on the headrail cassette. Use wall anchors for a secure hold. Mark the position of the bracket as illustrated.


- Hold the headrail up above outside the window frame and mark center based of the provided sticker on the headrail.
- Align brackets to the marked positions and secure through two holes, ensuring that the bracket tops are aligned and level to one another. Use wall anchors for a secure hold.

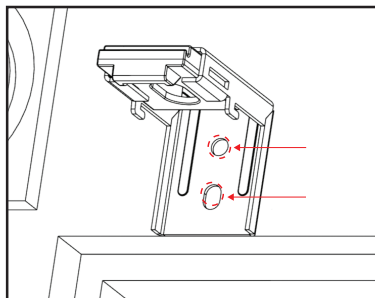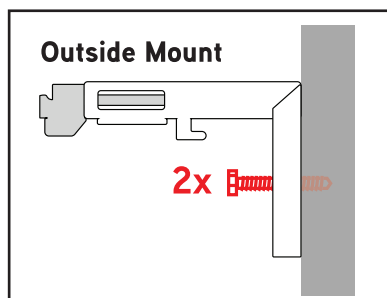


Spacer blocks (optional) will be attached to the end of each bracket. Ensure screws are long enough to secure brackets with spacer blocks. Do not use more than three spacer blocks per bracket. If installing extension brackets, do not use spacer blocks.

2 INSTALLING THE SHADE


1. Lift the head rail into position.

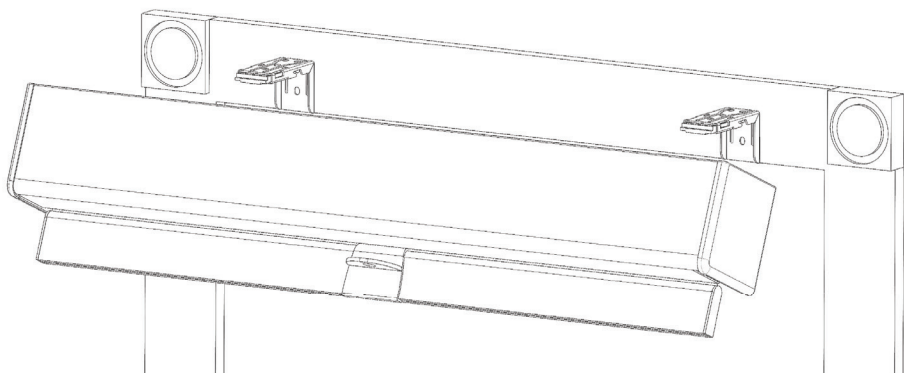

2. Slide the headrail into the brackets and rotate it down until it snaps into place.

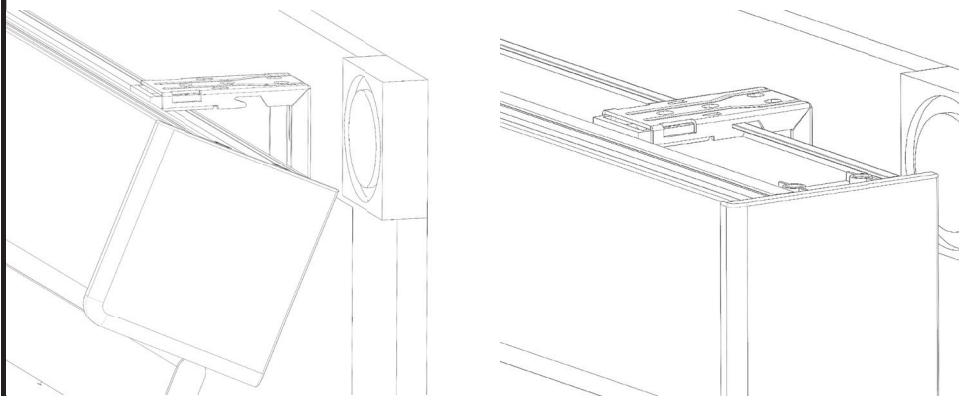

The top of the shade should look like the referenced image below.

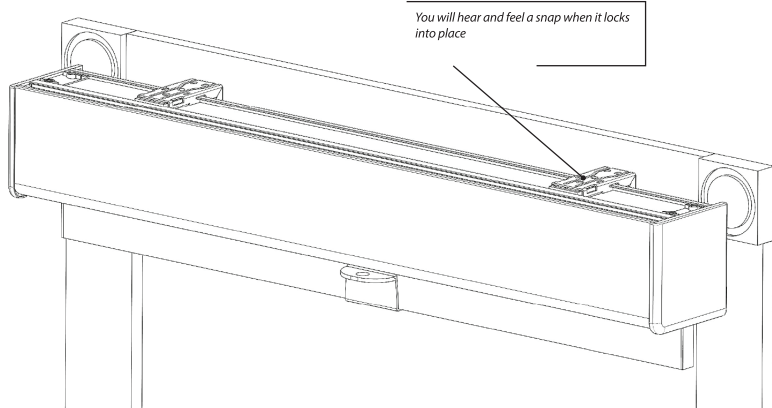

OPERATING THE SHADE

- To close the shade, gently pull the bottom rail down to the desired height.
- To open shade, gently push bottom rail all the way to the headrail or to desired height.



CARE AND CLEANING

The soft, delicate feel of woven fabric with the durability of wood materials. It is made from a sturdy, woven fabric and wood slats which can be feather dusted or vacuumed on a low setting. Spots or stains can be lightly rubbed clean with a damp sponge and mild soap. To avoid discoloration of the material, we recommend against the use of chemical cleaners. The woven fabric may also be ultrasonically cleaned.

Remove The Shade

- Fully raise the shade.
- While holding the headrail, remove each wing nut from all screws on the brackets.
- If required, pull the micropleat opacity liner free from the mounting clips by releasing the latch.

Cleaning Procedures

For most fabrics, the following options are available if your shade needs cleaning.

Dust Removal

In most cases, just use a feather duster to gently dust off regularly

Vacuuming

Use a low-suction hand-held vacuum cleaner to remove dust more thoroughly

Hair Dryer

Use a hair dryer to turn on the cold air to blow away the dirt and debris between the blades.

Spot Cleaning

- Prepare a solution of warm water and a mild detergent.
- Dampen a clean cloth in the solution and wring out.
- Dab the spot with the dampened cloth until it is gone. Do not rub the fabric.
- Allow the shade to dry in the completely lowered position.

NOTE:

The Warning labels on the bottom-rails of corded window coverings contain important safety information. These warning labels are designed to be permanent, in accordance with the industry's safety standards, and must not be removed.



Window Blind Cord Strangulation Risk

A damaged, loose, or missing tension device poses a strangulation risk to children. Remove from use and repair or replace if tension device is damaged, loose, or missing

IMPORTANT SAFETY WARNING:

Window cords can pose a potential strangulation hazard to young children. According to the U.S. Consumer Product Safety Commission, corded window coverings are among the top five hidden hazards in American homes. Check your window coverings for exposed or dangling cords and retrofit or replace them with today's safer products.

Never place a crib, playpen, bed or any type of low-standing furniture near a window. In exploring their surroundings, young children can accidentally fall through an open window or window screen, or become tragically entangled in a nearby window cord. Whenever possible, place cribs and furniture on a non-windowed wall.

Dangling or accessible cords on window coverings can pose an accidental strangulation hazard to infants and young children. For your safety, replace older corded window coverings with today's safer products.

The Window Covering Safety Council (WCSC) and government safety officials recommend that you only use cordless window products in homes with young children.

CHOKING HAZARD:



- Keep cord out of reach from children.
- Remove objects below window.
- Do not tie cords together.
- Make sure safety cords are located 1-2 inches below the headrail.
- Please reference all warning tags in the instructions and on the shade.
- Please keep cords out of children and pets reach, a cord cleat or a cord tensioner device can be found at a local window covering store.



EMERGENCY / FIRST AID


- Remove cord from child's neck
- Call 911 or an Emergency Call Center
- Clear the throat
- Check breathing and heartbeat
- Begin CPR if trained

THIS PRODUCT IS...



ROLLER SHADE

INSTALLATION GUIDE

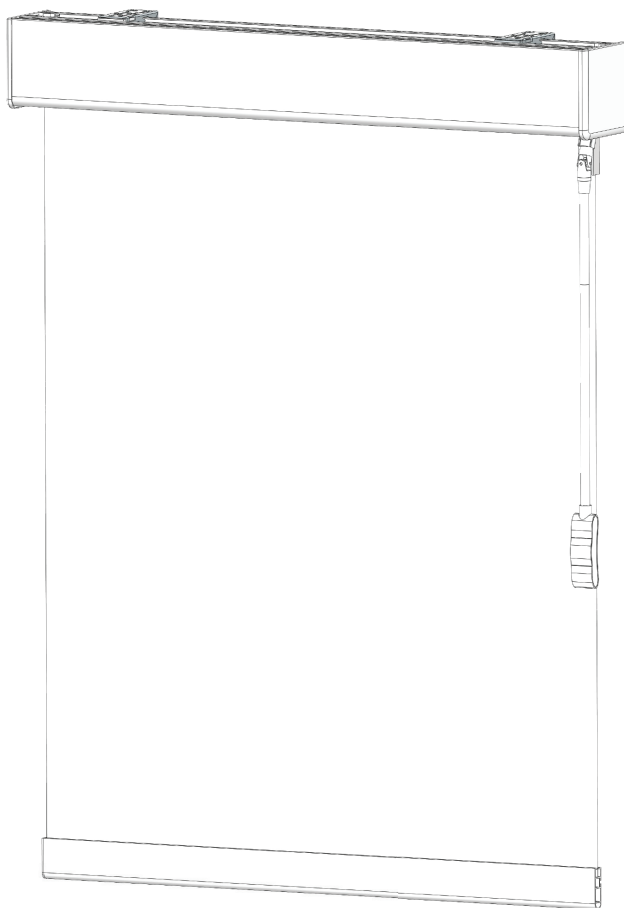

Lift Control:

MOTORIZED



ROLLER SHADE

Lift Control: Motorized

M O T O R I Z E D W A R R A N T Y

We offer a 3-year warranty on the Motorized E Series motor and controls. Specifically, we warrant the the Fabric E Series rod motor and control are free from defects in material and workmanship under normal use and suitable for a period of 3 years from the date indicated on each product. If the product fails within this 3 year period, we will repair or replace it free of charge through your final supplier. Batteries are not covered by warranty.

L I M I T E D 3 Y E A R W A R R A N T Y

The Manufacturers Collection will be free from defects in materials and workmanship for as long as the original purchaser owns the product, provided that the product was installed properly. The limited 3 year warranty is extended to the original purchaser only, in the original window for which it was intended.

The warranty does not include any condition or damage resulting from accidents, alterations, misuse, failure to install properly, or others instances outside of Manufacturers control. This warranty also does not apply to conditions resulting from normal wear and tear.

To obtain service, contact the dealer from whom you purchased the product. Manufacturer will repair or replace defective parts or components at no charge.

This warranty is exclusive and in lieu of all other obligations, liabilities or warranties. In no event shall Manufacturers be liable for incidental or consequential damages, or for any other damage, loss or expense, cost or fees associated with such damage. In some states, exclusion for incidental or consequential damages are not allowable.

This warranty does not cover any transport, removal, or re-installation charges which may occur as a result of defects in materials or workmanship.

This warranty gives you specific legal rights, and may also have other rights, which vary from state to state.

CONTENTS

INCLUDED IN YOUR PACKAGE	1
SUGGESTED TOOLS (NOT INCLUDED)	2
MOUNTING OPTIONS	3
MOUNTING BRACKETS	4
INSTALLING THE SHADE	5
WAND AND REMOTE OPERATION	6-14
CARE AND CLEANING	15
WARNING EMERGENCY / FIRST AID	16

Thank you for Choosing our Roller Shade for your Residential or Commercial Property.

We are confident that you will find our Roller Shade to be of superior quality and value, compared to other shades available.

In this guide, you will find useful information about installation, child safety, cleaning, and warranty when using your shade.

READ ALL INSTALLATION INSTRUCTIONS BEFORE INSTALLING


CONTACTING US:

Contact your Dealer regarding any question or concerns about your product.

PLEASE KEEP FOR FUTURE REFERENCE / TROUBLESHOOTING


INCLUDED IN YOUR PACKAGE

Motorized - Roller Shade - Square

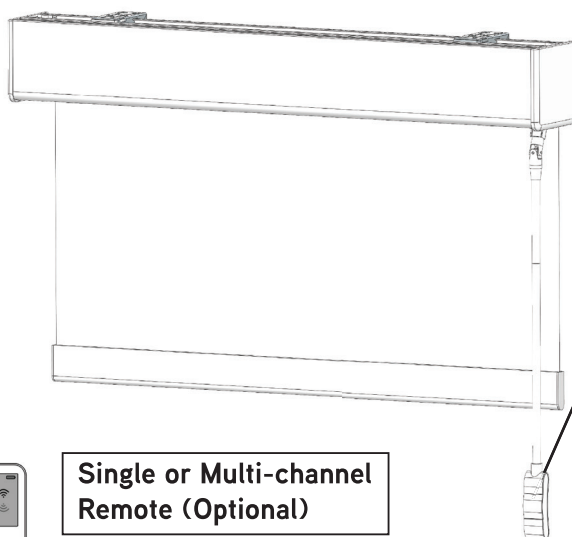


**MOTORIZED
WAND**

**Single or Multi-channel
Remote (Optional)**

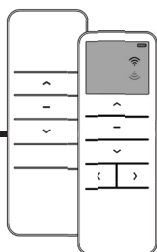

CHARGING BRICK / MICRO USB

 
Quantity: 1 (10' cable provided) per blind



BRACKETS

Quantity: 2

The wider the blinds the more brackets provided - see chart below

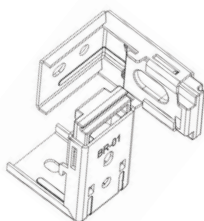

SCREWS

Quantity: 4 per packet



INSTALLATION BRACKET REQUIREMENT CHART

Blinds Width	Brackets Required
39" or smaller	2
40" to 59"	3
60" to 78"	4
79" to 98"	5

OPTIONAL PARTS:

(supplied upon request)

Spacer Blocks (Not Provided)



Use for shades that need more space between the wall.


Wall anchors (Not Provided).



Wall Anchor
(Not Provided)


If mounting into drywall, you will need wall anchors to ensure a secure installation.

SUGGESTED TOOLS (NOT INCLUDED)

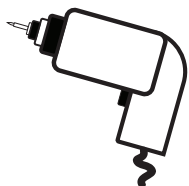

DRILL

 *1/16" drill bit,
and 1/4"
hex driver*



LEVEL




PENCIL




SCREWDRIVER

*Flat blade, Phillips, or
1/4" hex driver*

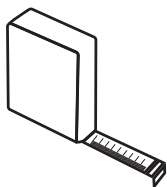

TAPE MEASURE

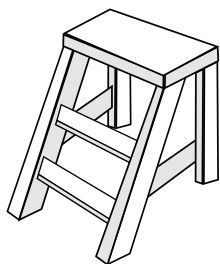

LADDER



MOUNTING OPTIONS

Your new shade is custom made to your specifications from the finest fabrics available. The installation should be easy and your shade will look elegant.

MOUNTING OPTIONS:



Inside mount (IB):

The shade is mounted inside to the top of the window frame.

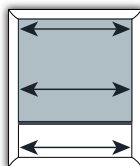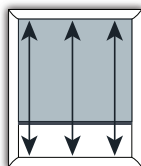

Outside mount (OB):

The shade is mounted either on or outside the window frame.

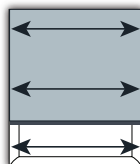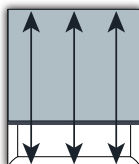

Mounting NOTES:

Mounting screws provided are suitable for most mounting surfaces. See below for additional suggestions.



- For wallboard or plaster: Use hollow wall anchors for added support. (not included)
- For concrete, stone, brick or tile: Use an appropriate drill and appropriate anchors before fastening the screws. (not included)
- For metal surfaces: Pre-drill holes and use appropriate anchors before fastening the screws. (not included)

TROUBLE SHOOTING TIPS

Dry-Fit Bracket into Headrail Cassette: Prior to installing your shade, dry-fit the Bracket into the Headrail Cassette to verify how the bracket will snap into place.

Installing Brackets:



Inside mount: Use the stickers on the headrail to find the bracket center for each bracket. The bracket is able to move within the 2" area shown on the sticker.

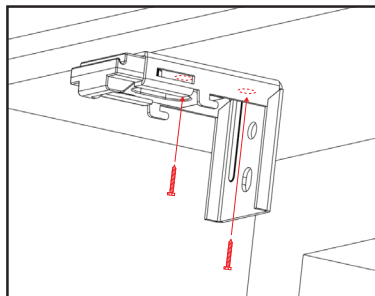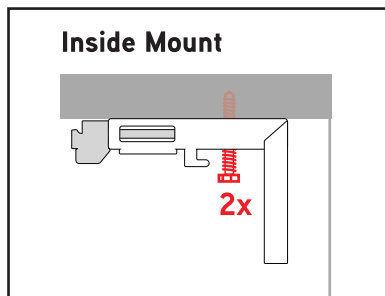

- Hold the headrail up inside the window frame and mark center based of the provided sticker on the headrail.
- Align brackets to the marked positions and secure through two holes, ensuring that the bracket tops are aligned and level to one another. Use wall anchors for a secure hold.

Outside Mount: Outside edge of the brackets should be positioned at a minimum of 2" from the outside of the headrail cassette, note the sticker on the headrail cassette. Use wall anchors for a secure hold. Mark the position of the bracket as illustrated.


- Hold the headrail up above outside the window frame and mark center based of the provided sticker on the headrail.
- Align brackets to the marked positions and secure through two holes, ensuring that the bracket tops are aligned and level to one another. Use wall anchors for a secure hold.

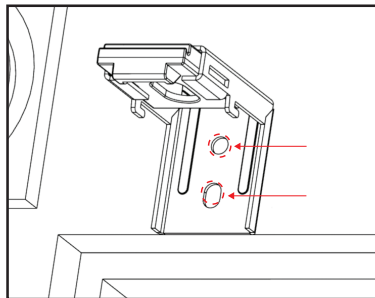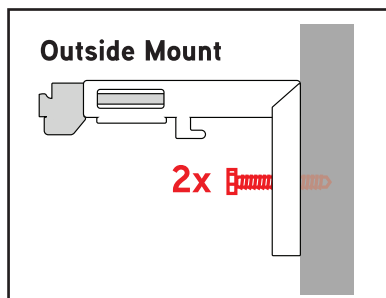



Spacer blocks (optional) will be attached to the end of each bracket. Ensure screws are long enough to secure brackets with spacer blocks. Do not use more than three spacer blocks per bracket. If installing extension brackets, do not use spacer blocks.

2 INSTALLING THE SHADE


1. Lift the head rail into position.

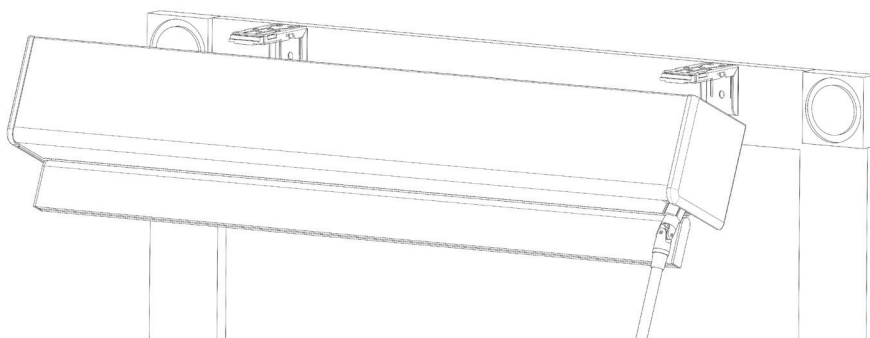


2. Slide the headrail into the brackets and rotate it down until it snaps into place.

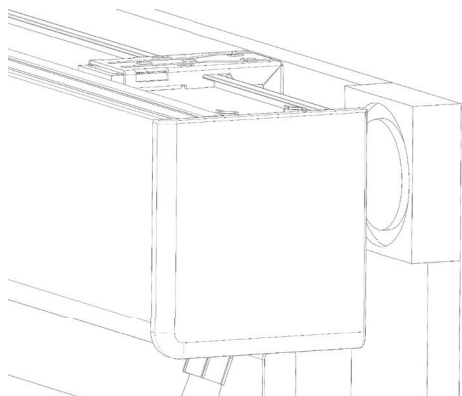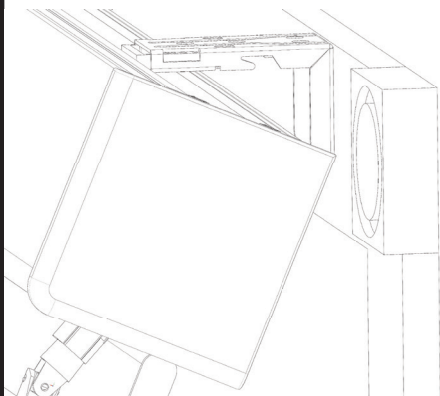


The top of the shade should look like the referenced image below.

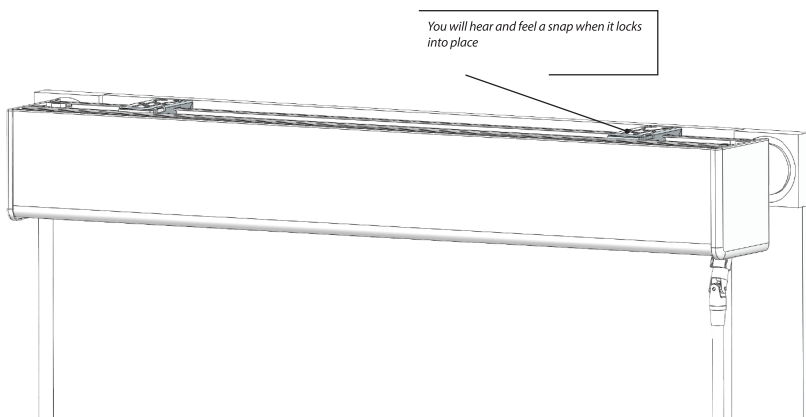

PRODUCT BUTTON DIAGRAM:

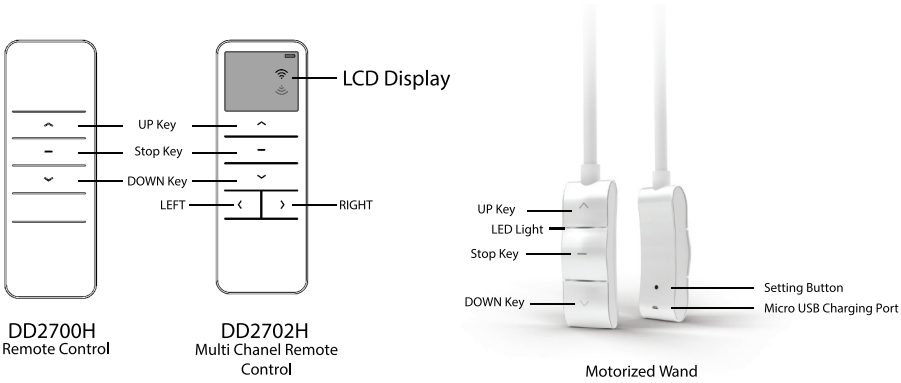


HEADRAIL DIAGRAM:

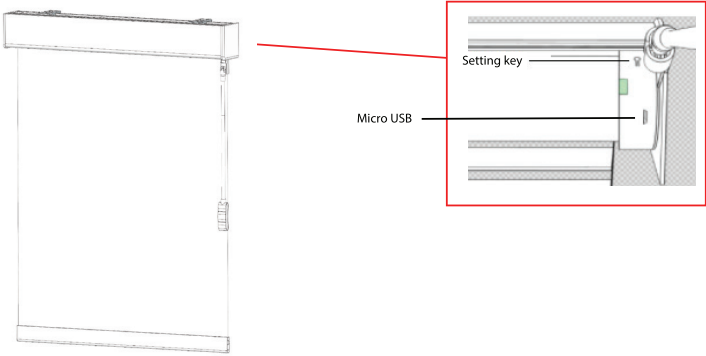


Headrail setting key location: inside the side cover on the left or right side of the shade. Above Micro USB interface


REPLACEMENT BATTERY:

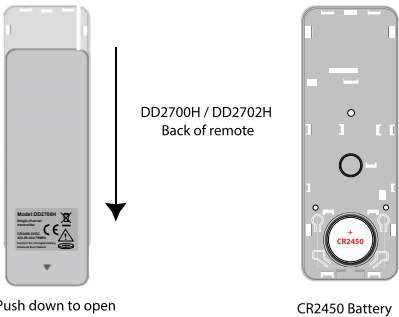


DD2702H MULTICHANNEL REMOTE INSTRUCTIONS

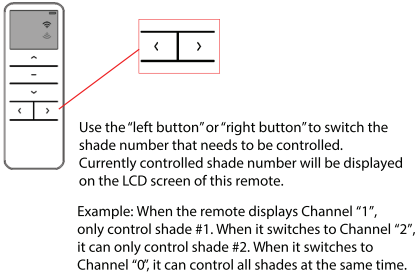

CHARGING THE MOTORIZED WAND

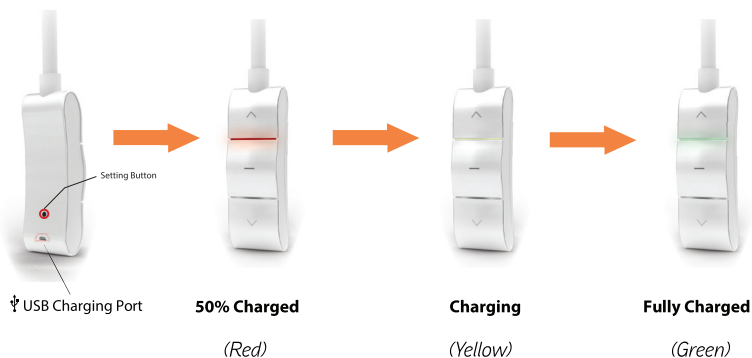

ENTERING THE USER MODE - WAND:

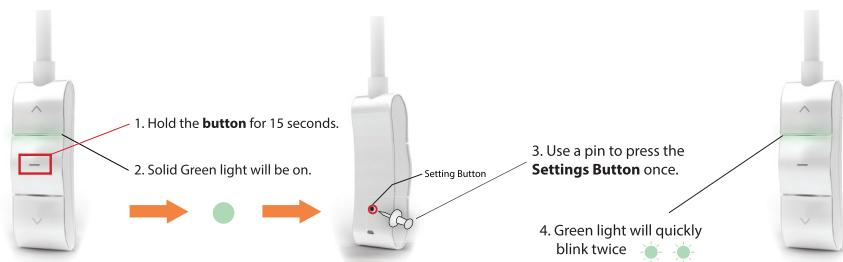


User Mode: In this mode, the shades key combination debugging function is unlocked.

You have now entered User Mode.


ENTERING THE USER MODE - REMOTE:

Use Remote Control Settings (Single Frequency Remote control)

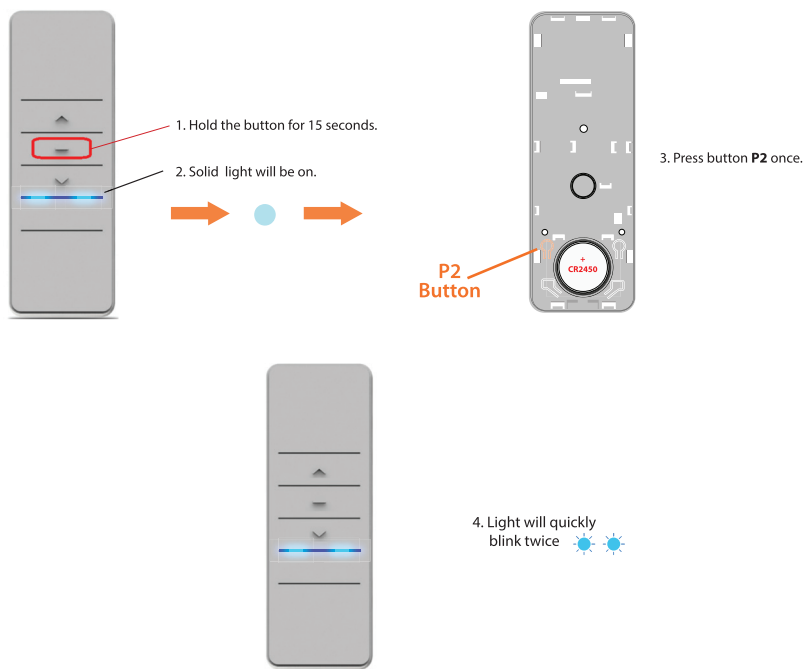


ENTERING THE USER MODE - REMOTE:

Use Remote Control Settings (Multi-Channel Remote Control)

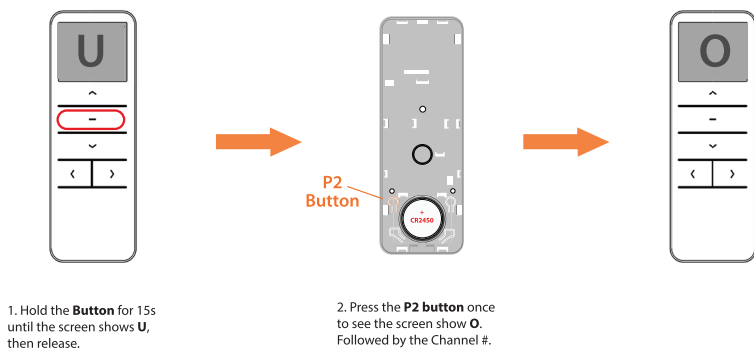


A. SETTING THE TOP LIMIT - USING THE MOTORIZED WAND

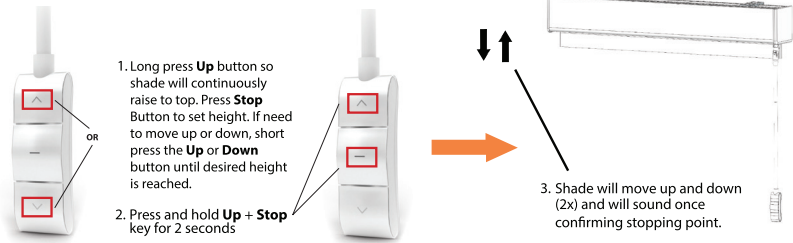


You have now set your Top Limit. Now you are ready to go to B. Setting the Bottom Limit

A. SETTING SHADE INTO DESIRED POSITION.

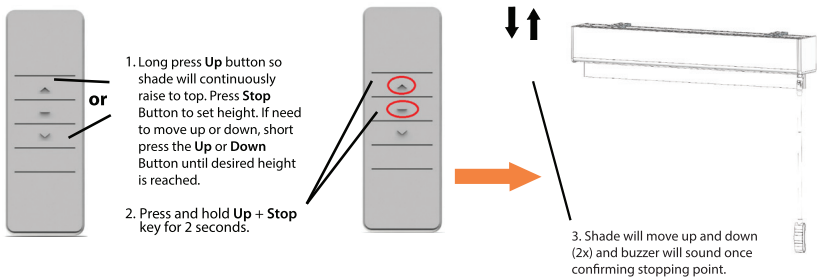


You have now set your Top Limit. Now you are ready to go to B. Setting the Bottom Limit.

B. SETTING THE BOTTOM LIMIT - USING THE MOTORIZED WAND

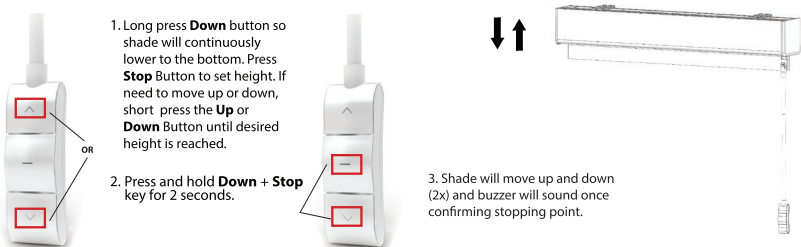


You have now set your Bottom Limit. Now you are ready to Exit User Mode

B. SETTING THE BOTTOM LIMIT - USING THE REMOTE CONTROL

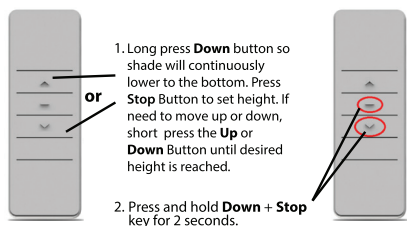

3. Shade will move up and down (2x) and buzzer will sound once confirming stopping point.

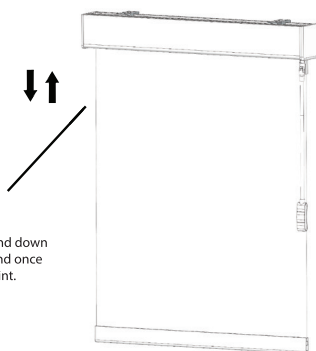

You have now set your Bottom Limit. Now you are ready to Exit User Mode

SWITCHING BETWEEN SHORT MOVEMENT / CONTINUOUS MOVEMENT MODE

USING THE REMOTE CONTROL



Press and hold the **UP** key and **Down** key on the remote control at the same time for 2 seconds. The motor will rotate once and will beep three times, indicating that the short movement / continuous movement mode switch is successful.


USING THE MOTORIZED WAND

-OR-



Press and hold the **UP** key and **Down** key on the motorized wand at the same time for 2 seconds. The motor will rotate once and will beep three times, indicating that the short movement / continuous movement mode switching is successful.

EXITING THE USER MODE (WAND)

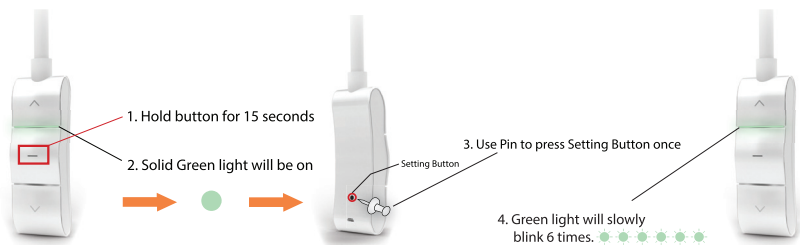


You are now exited User Mode. Please move on to A. Setting the Top Limit or B. Setting the Bottom Limit

EXITING THE USER MODE - REMOTE


User Mode: In this mode, the shades key combination debugging function is locked to avoid mis-operation by the user.

Note: The remote control and motorized wand user modes are independent as needed during debugging. For example: if you unlock the remote control, you can set it with the remote control.

EXITING THE USER MODE (SINGLE CHANNEL REMOTE)

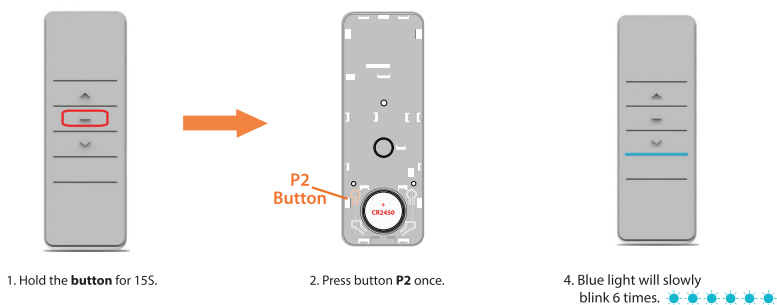


EXITING THE USER MODE (MULTI-CHANNEL REMOTE)

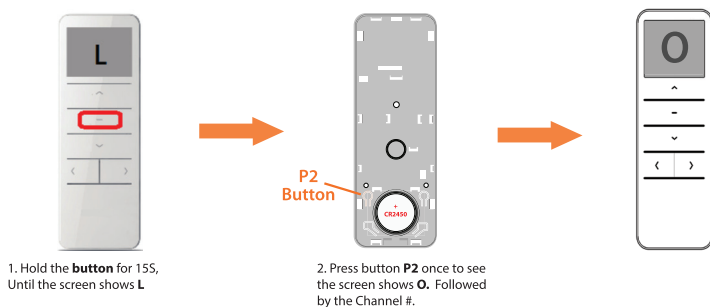


Note: The user mode only locks the combination key function, that is, the stroke setting of the combination key, inching linkage switching and other functions are limited, and does not affect the motor speed adjustment, code deletion and other functions.


ADDING THE REMOTE CONTROL - USING THE MOTORIZED WAND

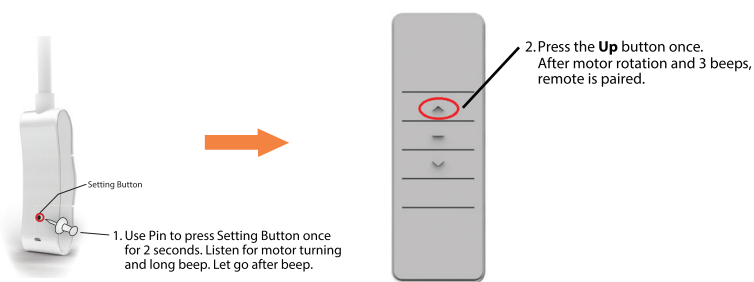


ADDING THE REMOTE CONTROL - USING THE HEADRAIL MOTOR CONTROL

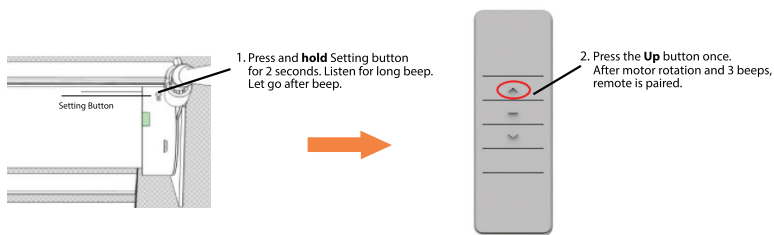


DELETING THE REMOTE CONTROL - USING THE SHADE MOTOR

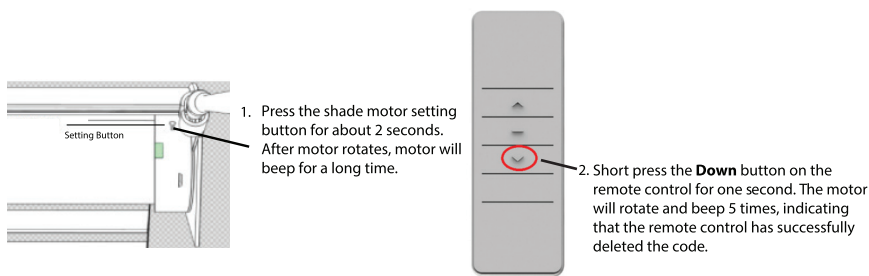

DELETING A REMOTE CONTROL - USING MULTIPLE REMOTE CONTROLS

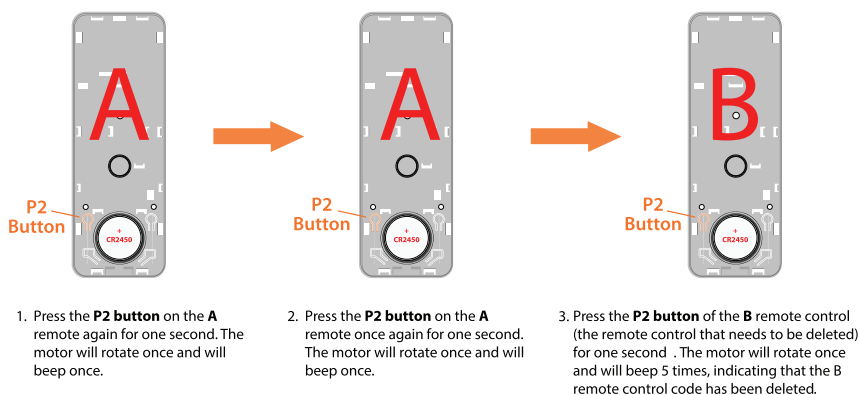


DELETING ALL REMOTE CONTROLS

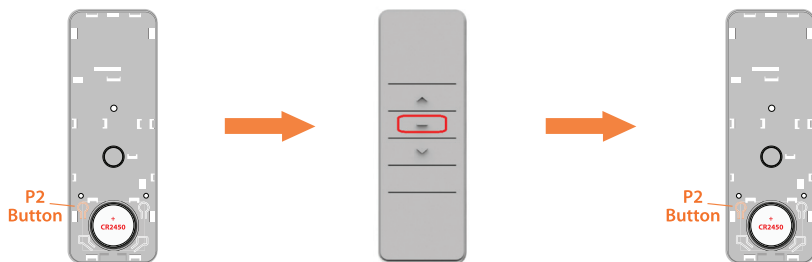

1. Press the **P2 button** on the remote control once, the motor will rotate once and will beep once.
2. Press the **Stop** button on the remote control again, the motor will rotate once and will beep once.
3. Press the **P2 button** on the remote control once again, the motor will rotate once and will beep 5 times, indicating that the code has been successfully deleted


DELETING THE STOPPING POINTS

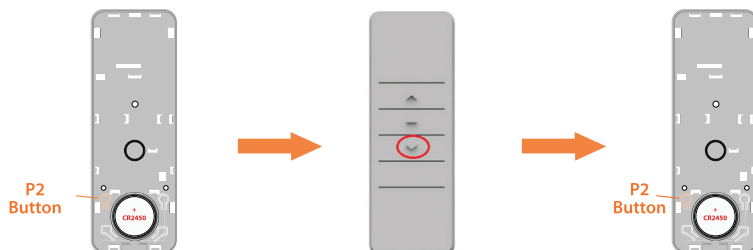

1. Press the **P2 button** on the remote control once, the motor will rotate and will beep once.
2. Press the **Down** button on the remote control once. The motor will rotate once and will beep once.
3. Press the **P2 button** on the remote control once again, the motor will rotate once and will beep 4 times, indicating that all stopping points have been deleted successfully.


SHADE LIFTING SPEED ADJUSTMENT - INCREASE SHADE LIFTING SPEED

THERE ARE THREE SHADE SPEEDS: 34R/MIN; 28R/MIN; 20R/MIN

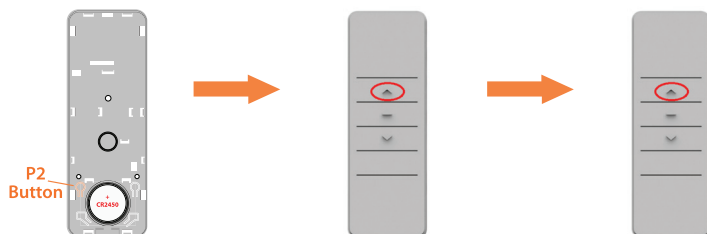

1. Press the **P2 button** on the remote control. The motor will rotate and will beep once.
2. Short press the **Up** button on the remote control for one second. The motor will rotate and will beep once.
3. Short press the **Up** button on the remote control for one second. The motor will rotate twice, and will beep once, and the motor speed will increase by one gear.
(If there is no rotation prompt, it means that the maximum gear has been reached)

REDUCE SHADE LIFTING SPEED

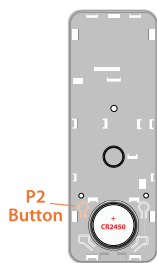

1. Short press the **P2 button** on the remote control for one second. The motor will rotate and will beep once.




2. Short press the **Down button** on the remote control for one second. The motor will rotate and will beep once.



3. Then short press the **Down button** on the remote control for one second. The motor will rotate twice and will beep once, and the motor speed will decrease by one gear. (If there is no rotation prompt, it means that the low gear has been reached.)


SHADE REVERSAL

USE THE MOTORIZED WAND TO SET

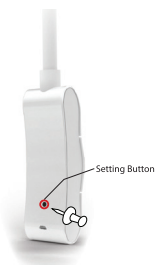

Using a pin, press and **hold** the setting button on the back of the motorized wand for more than 6 seconds. After the rotation prompts twice during this process, release the button and will beep 3 times; indicating that the motor direction is successfully switched.


-OR-

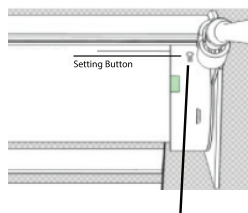

Press and **hold** the setting button of the shade motor for more than 6 seconds. After the rotation prompts three times during this process, release the button and will beep 3 times; indicating that the motor direction is successfully switched.


RESTORING FACTORY SETTINGS

USE THE MOTORIZED WAND TO SET

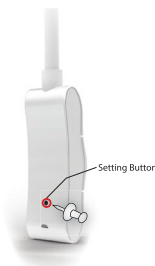

Using a pin, press and **hold** the handle setting button for more than 10 seconds; during this process, the motor beeps 4 times after rotating the prompt three times; indicating that the motor has been restored to factory settings; all previous system function settings and remote control codes have been deleted.

-OR-

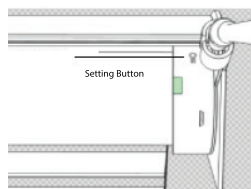

Press and **hold** the shade motor setting button for more than 10 seconds; during this process, the motor beeps 4 times after the rotation prompts four times; it means that the motor has been restored to factory settings; all previous system function settings and remote control codes have been deleted.

CARE AND CLEANING

The soft, delicate feel of woven fabric with the durability of wood materials. It is made from a sturdy, woven fabric and wood slats which can be feather dusted or vacuumed on a low setting. Spots or stains can be lightly rubbed clean with a damp sponge and mild soap. To avoid discoloration of the material, we recommend against the use of chemical cleaners. The woven fabric may also be ultrasonically cleaned.

Remove The Shade

- Fully raise the shade.
- While holding the headrail, remove each wing nut from all screws on the brackets.
- If required, pull the micropleat opacity liner free from the mounting clips by releasing the latch.

Cleaning Procedures

For most fabrics, the following options are available if your shade needs cleaning.

Dust Removal

In most cases, just use a feather duster to gently dust off regularly

Vacuuming

Use a low-suction hand-held vacuum cleaner to remove dust more thoroughly

Hair Dryer

Use a hair dryer to turn on the cold air to blow away the dirt and debris between the blades.

Spot Cleaning

- Prepare a solution of warm water and a mild detergent.
- Dampen a clean cloth in the solution and wring out.
- Dab the spot with the dampened cloth until it is gone. Do not rub the fabric.
- Allow the shade to dry in the completely lowered position.

NOTE:

The Warning labels on the bottom-rails of corded window coverings contain important safety information. These warning labels are designed to be permanent, in accordance with the industry's safety standards, and must not be removed.



Window Blind Cord Strangulation Risk

A damaged, loose, or missing tension device poses a strangulation risk to children. Remove from use and repair or replace if tension device is damaged, loose, or missing

IMPORTANT SAFETY WARNING:

Window cords can pose a potential strangulation hazard to young children. According to the U.S. Consumer Product Safety Commission, corded window coverings are among the top five hidden hazards in American homes. Check your window coverings for exposed or dangling cords and retrofit or replace them with today's safer products.

Never place a crib, playpen, bed or any type of low-standing furniture near a window. In exploring their surroundings, young children can accidentally fall through an open window or window screen, or become tragically entangled in a nearby window cord. Whenever possible, place cribs and furniture on a non-windowed wall.

Dangling or accessible cords on window coverings can pose an accidental strangulation hazard to infants and young children. For your safety, replace older corded window coverings with today's safer products.

The Window Covering Safety Council (WCSC) and government safety officials recommend that you only use cordless window products in homes with young children.

CHOKING HAZARD:



- Keep cord out of reach from children.
- Remove objects below window.
- Do not tie cords together.
- Make sure safety cords are located 1-2 inches below the headrail.
- Please reference all warning tags in the instructions and on the shade.
- Please keep cords out of children and pets reach, a cord cleat or a cord tensioner device can be found at a local window covering store.

REESE'S LAW

These products are designed and manufactured in compliance with Reese's Law (P.L. 117-171), including the safety standard for button cell and coin batteries (16 CFR Part 1263), which incorporates by reference UL 4200A-2023.

⚠️ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



EMERGENCY / FIRST AID


- Remove cord from child's neck
- Call 911 or an Emergency Call Center
- Clear the throat
- Check breathing and heartbeat
- Begin CPR if trained

THIS PRODUCT IS...



ROLLER SHADE

INSTALLATION GUIDE

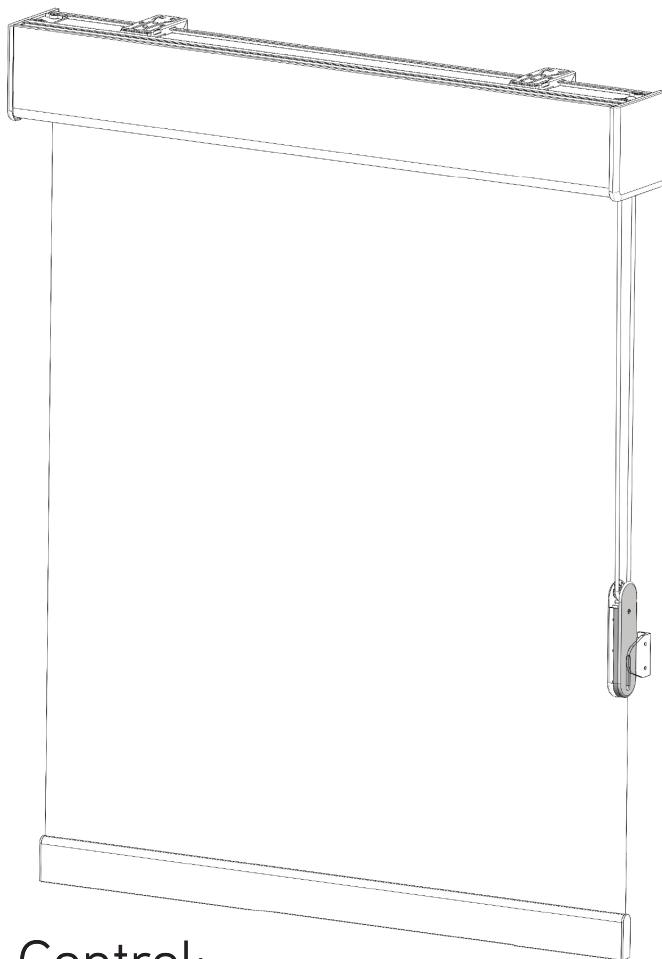

Lift Control:

**Continuous
Cord Loop**



ROLLER SHADE

Lift Control:

CONTINUOUS CORD LOOP

L I M I T E D 3 Y E A R W A R R A N T Y

The Manufacturers Collection will be free from defects in materials and workmanship for as long as the original purchaser owns the product, provided that the product was installed properly. The limited 3 year warranty is extended to the original purchaser only, in the original window for which it was intended.

The warranty does not include any condition or damage resulting from accidents, alterations, misuse, failure to install properly, or others instances outside of Manufacturers control. This warranty also does not apply to conditions resulting from normal wear and tear.

To obtain service, contact the dealer from whom you purchased the product. Manufacturer will repair or replace defective parts or components at no charge.

This warranty is exclusive and in lieu of all other obligations, liabilities or warranties. In no event shall Manufacturers be liable for incidental or consequential damages, or for any other damage, loss or expense, cost or fees associated with such damage. In some states, exclusion for incidental or consequential damages are not allowable.

This warranty does not cover any transport, removal, or re-installation charges which may occur as a result of defects in materials or workmanship.

This warranty gives you specific legal rights, and may also have other rights, which vary from state to state.

CONTENTS

INCLUDED IN YOUR PACKAGE	1
SUGGESTED TOOLS (NOT INCLUDED)	2
MOUNTING OPTIONS	3
MOUNTING BRACKETS	4
INSTALLING THE SHADE	5
SAFETY TENSION DEVICE INSTALLATION	6-8
SAFETY TENSION DEVICE OPERATION	9-10
CARE AND CLEANING	11
WARNING EMERGENCY / FIRST AID	12

Thank you for Choosing our Roller Shade for your Residential or Commercial Property.

We are confident that you will find our Roller Shade to be of superior quality and value, compared to other shades available.

In this guide, you will find useful information about installation, child safety, cleaning, and warranty when using your shade.

READ ALL INSTALLATION INSTRUCTIONS BEFORE INSTALLING


CONTACTING US:

Contact your Dealer regarding any question or concerns about your product.

PLEASE KEEP FOR FUTURE REFERENCE / TROUBLESHOOTING

INCLUDED IN YOUR PACKAGE

Roller Shade - Continuous Cord Loop

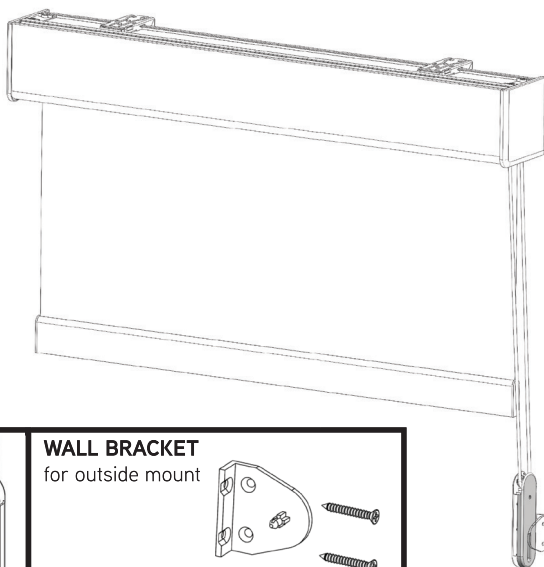


CORD TENSIONER

Cord Tension (Optional)



 
WALL BRACKET for outside mount



BRACKETS

Quantity: 2

The wider the blinds the more brackets provided - see chart below

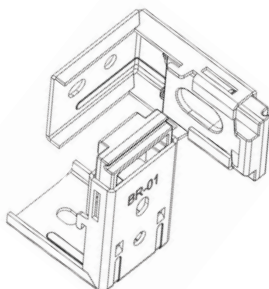

SCREWS

Quantity: 4 per packet




INSTALLATION BRACKET REQUIREMENT CHART

Blinds Width	Brackets Required
39" or smaller	2
40" to 59"	3
60" to 78"	4
79" to 98"	5

OPTIONAL PARTS: (supplied upon request)

Spacer Blocks (Not Provided)

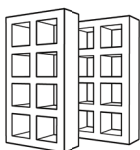

Use for blinds that need more space between the wall.


Wall anchors (Not Provided).



Wall Anchor (Not Provided)


If mounting into drywall, you will need wall anchors to ensure a secure installation.

SUGGESTED TOOLS (NOT INCLUDED)

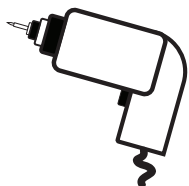

DRILL

 *1/16" drill bit,
and 1/4"
hex driver*



LEVEL




PENCIL




SCREWDRIVER

*Flat blade, Phillips, or
1/4" hex driver*

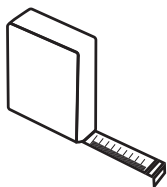

TAPE MEASURE

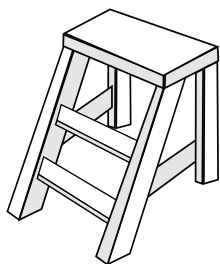

LADDER



MOUNTING OPTIONS

Your new shade is custom made to your specifications from the finest fabrics available. The installation should be easy and your shade will look elegant.

MOUNTING OPTIONS:



Inside mount (IB):

The shade is mounted inside to the top of the window frame.

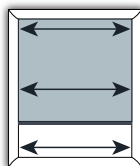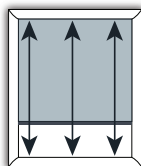

Outside mount (OB):

The shade is mounted either on or outside the window frame.

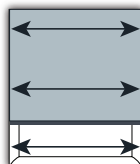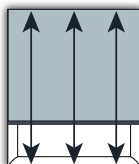

Mounting NOTES:

Mounting screws provided are suitable for most mounting surfaces. See below for additional suggestions.



- For wallboard or plaster: Use hollow wall anchors for added support. (not included)
- For concrete, stone, brick or tile: Use an appropriate drill and appropriate anchors before fastening the screws. (not included)
- For metal surfaces: Pre-drill holes and use appropriate anchors before fastening the screws. (not included)

TROUBLE SHOOTING TIPS

Dry-Fit Bracket into Headrail Cassette: Prior to installing your shade, dry-fit the Bracket into the Headrail Cassette to verify how the bracket will snap into place.

Installing Brackets:



Inside mount: Use the stickers on the headrail to find the bracket center for each bracket. The bracket is able to move within the 2" area shown on the sticker.

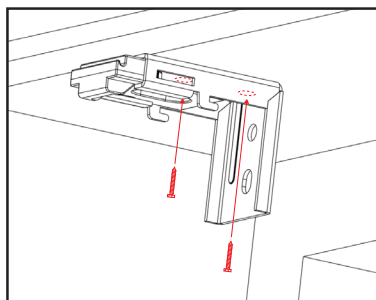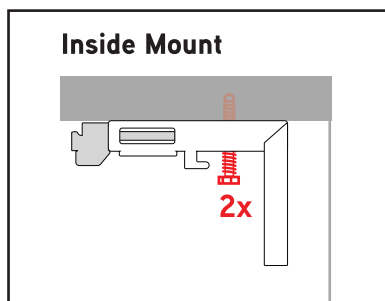

- Hold the headrail up inside the window frame and mark center based of the provided sticker on the headrail.
- Align brackets to the marked positions and secure through two holes, ensuring that the bracket tops are aligned and level to one another. Use wall anchors for a secure hold.

Outside Mount: Outside edge of the brackets should be positioned at a minimum of 2" from the outside of the headrail cassette, note the sticker on the headrail cassette. Use wall anchors for a secure hold. Mark the position of the bracket as illustrated.


- Hold the headrail up above outside the window frame and mark center based of the provided sticker on the headrail.
- Align brackets to the marked positions and secure through two holes, ensuring that the bracket tops are aligned and level to one another. Use wall anchors for a secure hold.

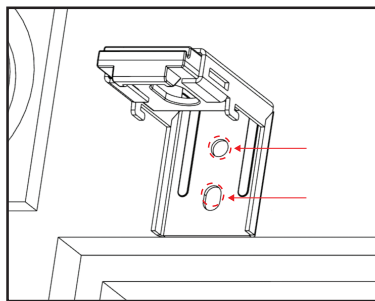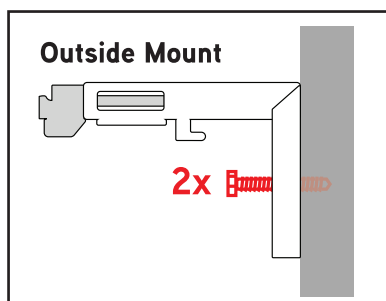


Spacer blocks (optional) will be attached to the end of each bracket. Ensure screws are long enough to secure brackets with spacer blocks. Do not use more than three spacer blocks per bracket. If installing extension brackets, do not use spacer blocks.

2 INSTALLING THE SHADE


1. Lift the head rail into position.

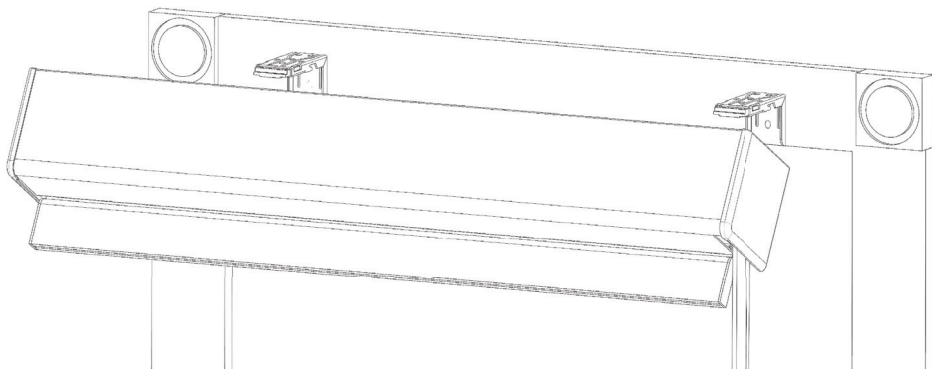


2. Slide the headrail into the brackets and rotate it down until it snaps into place.

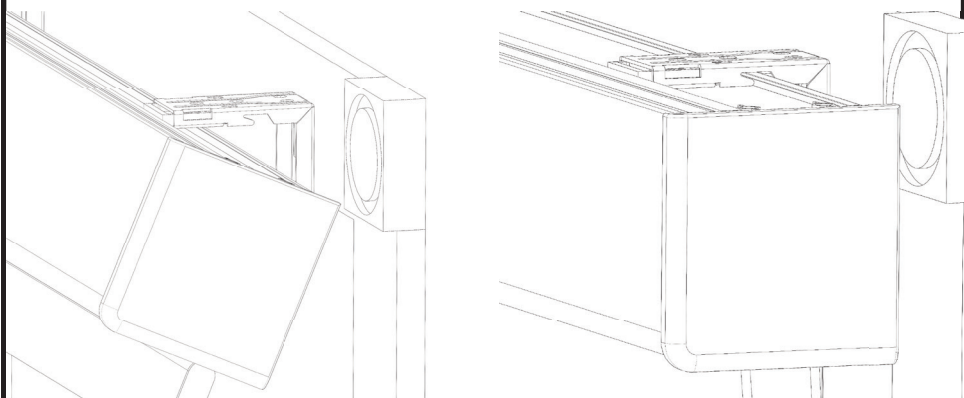


The top of the shade should look like the referenced image below.

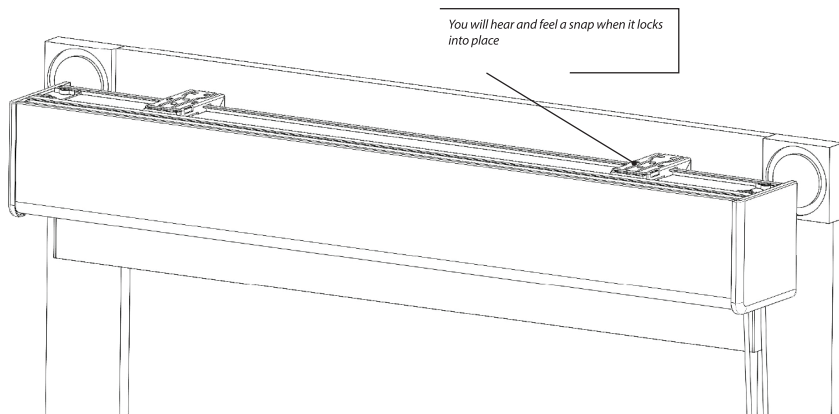


SAFETY TENSION INSTALLATION

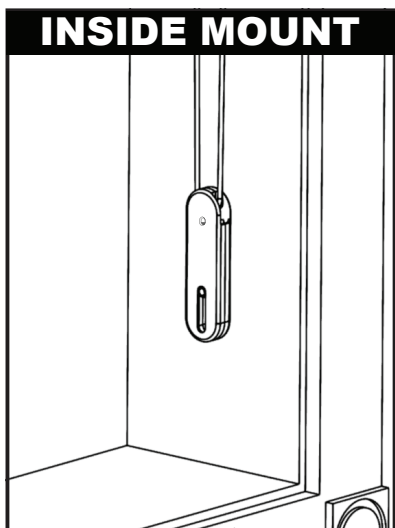


PLACE DEVICE **INSIDE** WINDOW FRAME.

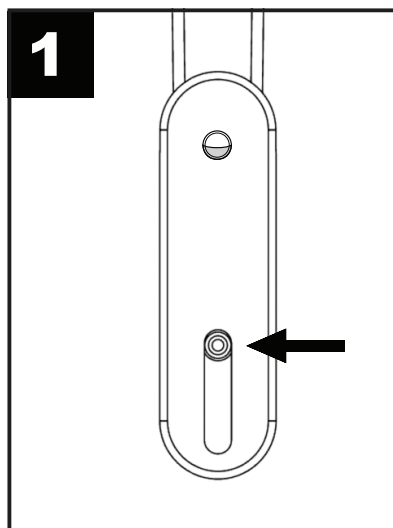

THIS IS THE HOLE FOR
MOUNTING THE SCREW.

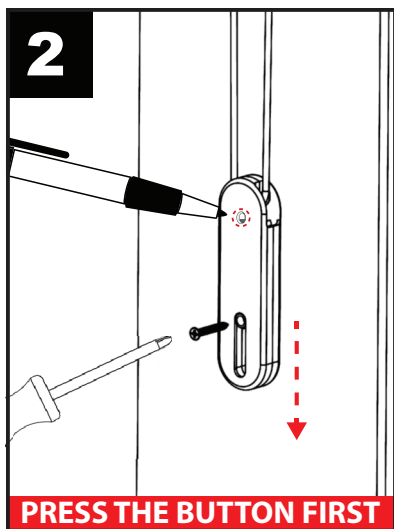


PRESS THE BUTTON WITH A PEN OR PENCIL.
THEN INSERT THE SCREW AND PULL DOWN.

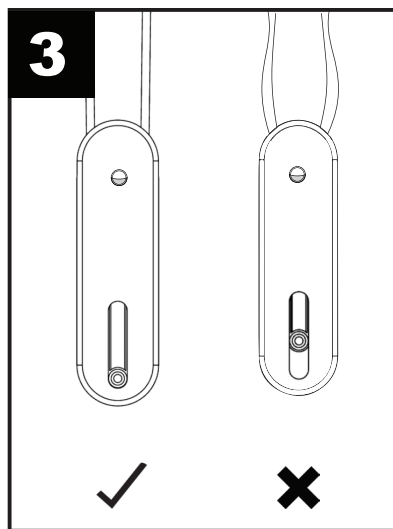


MAKE SURE THERE IS NO SLACK
AND TIGHTEN THE SCREW SECURELY.


OUTSIDE MOUNT

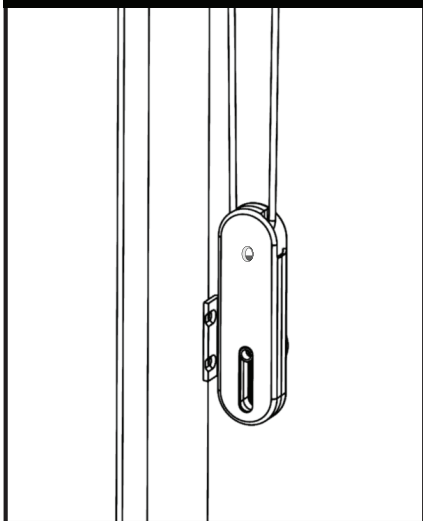


PLACE DEVICE AND WALL BRACKET
OUTSIDE WINDOW FRAME.

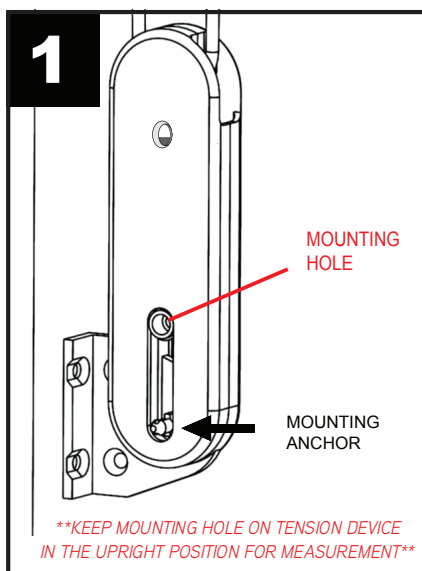


ENSURE THE TENSION IS TIGHT AND
THE **MOUNTING ANCHOR** IS AT
THE BOTTOM OF THE DEVICE.

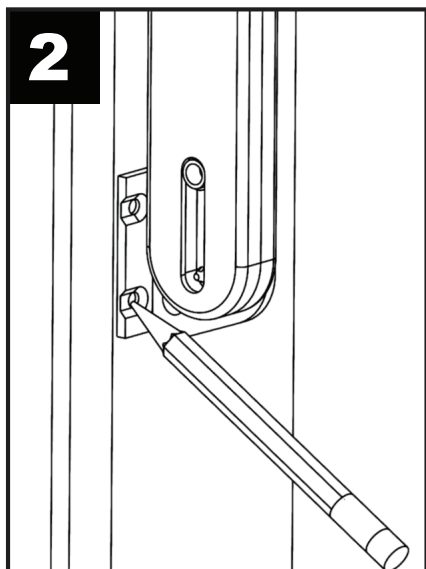


MARK THE PILOT HOLES
WITH A PEN OR PENCIL.

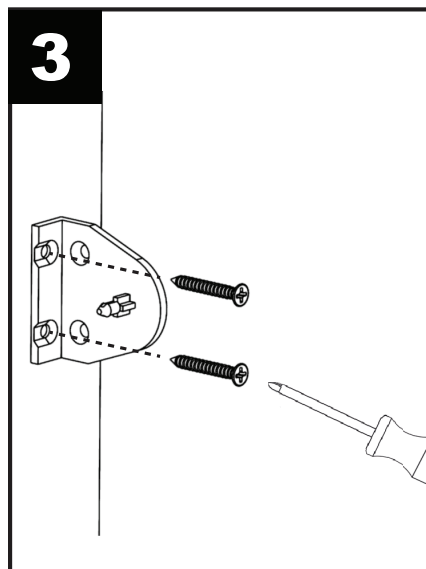


SCREW THE BRACKET INTO THE
WALL USING YOUR MARKS.

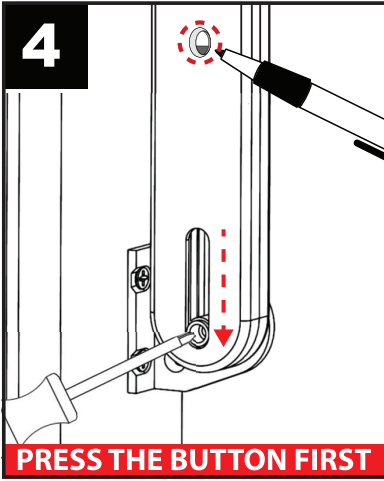

PULLDOWN THE **MOUNTING HOLE**
TO MATCH THE **MOUNTING ANCHOR**.

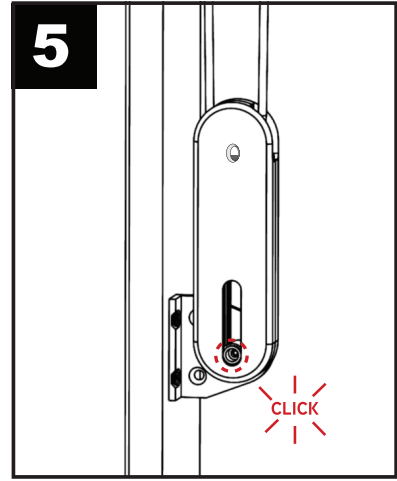

INSERT **ANCHOR** INTO **MOUNTING HOLE**
ON TENSION DEVICE UNTIL YOU HEAR A **CLICK**.

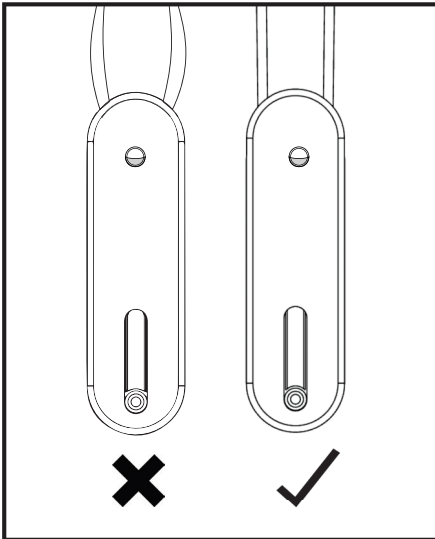

YOUR TENSION DEVICE CORD
SHOULD BE TIGHT AND NOT LOOSE.

****DISCLAIMER****


ONCE SECURED ON THE WALL MOUNT,
TENSION DEVICE WILL BE DIFFICULT TO REMOVE.
IF YOU TRY TO REMOVE,
THIS MIGHT CAUSE THE TENSION DEVICE OR WALL
MOUNT TO SNAP OR BREAK.

OPERATING THE SAFETY TENSION DEVICE

Keep cord straight do not pull outward this will engage the pinchers locking the cord in place.

Pull down on the **right (front) cord** to have
your shade go **up**.

(Shade Up)

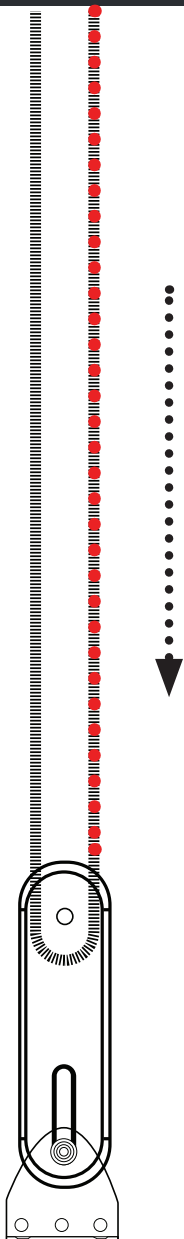


OPERATING THE SAFETY TENSION DEVICE

Keep cord straight do not pull outward this will engage the pinchers locking the cord in place.

Pull down on the **left (back)** cord to have your shade go **down**.

(Shade Down)

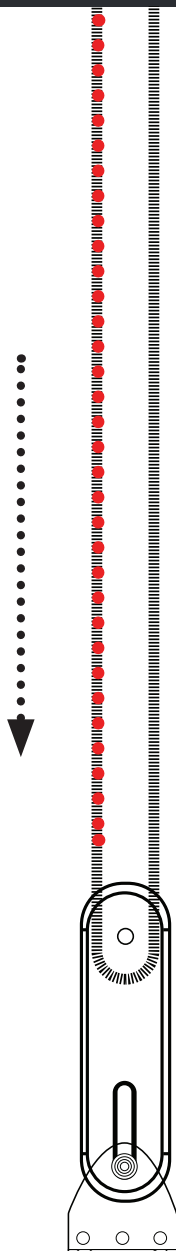

CARE AND CLEANING

The soft, delicate feel of woven fabric with the durability of wood materials. It is made from a sturdy, woven fabric and wood slats which can be feather dusted or vacuumed on a low setting. Spots or stains can be lightly rubbed clean with a damp sponge and mild soap. To avoid discoloration of the material, we recommend against the use of chemical cleaners. The woven fabric may also be ultrasonically cleaned.

Remove The Shade

- Fully raise the shade.
- While holding the headrail, remove each wing nut from all screws on the brackets.
- If required, pull the micropleat opacity liner free from the mounting clips by releasing the latch.

Cleaning Procedures

For most fabrics, the following options are available if your shade needs cleaning.

Dust Removal

In most cases, just use a feather duster to gently dust off regularly

Vacuuming

Use a low-suction hand-held vacuum cleaner to remove dust more thoroughly

Hair Dryer

Use a hair dryer to turn on the cold air to blow away the dirt and debris between the blades.

Spot Cleaning

- Prepare a solution of warm water and a mild detergent.
- Dampen a clean cloth in the solution and wring out.
- Dab the spot with the dampened cloth until it is gone. Do not rub the fabric.
- Allow the shade to dry in the completely lowered position.

NOTE:

The Warning labels on the bottom-rails of corded window coverings contain important safety information. These warning labels are designed to be permanent, in accordance with the industry's safety standards, and must not be removed.



Window Blind Cord Strangulation Risk

A damaged, loose, or missing tension device poses a strangulation risk to children. Remove from use and repair or replace if tension device is damaged, loose, or missing

IMPORTANT SAFETY WARNING:

Window cords can pose a potential strangulation hazard to young children. According to the U.S. Consumer Product Safety Commission, corded window coverings are among the top five hidden hazards in American homes. Check your window coverings for exposed or dangling cords and retrofit or replace them with today's safer products.

Never place a crib, playpen, bed or any type of low-standing furniture near a window. In exploring their surroundings, young children can accidentally fall through an open window or window screen, or become tragically entangled in a nearby window cord. Whenever possible, place cribs and furniture on a non-windowed wall.

Dangling or accessible cords on window coverings can pose an accidental strangulation hazard to infants and young children. For your safety, replace older corded window coverings with today's safer products.

The Window Covering Safety Council (WCSC) and government safety officials recommend that you only use cordless window products in homes with young children.

CHOKING HAZARD:



- Keep cord out of reach from children.
- Remove objects below window.
- Do not tie cords together.
- Make sure safety cords are located 1-2 inches below the headrail.
- Please reference all warning tags in the instructions and on the shade.
- Please keep cords out of children and pets reach, a cord cleat or a cord tensioner device can be found at a local window covering store.



EMERGENCY / FIRST AID

- Remove cord from child's neck
- Call 911 or an Emergency Call Center
- Clear the throat
- Check breathing and heartbeat
- Begin CPR if trained

THIS PRODUCT IS...



ROLLER SHADE

INSTALLATION GUIDE



Lift Control:

NO DRILL
CORDLESS



ROLLER SHADE

Lift Control:

**NO-DRILL
CORDLESS**

CONTENTS

Getting Started

- Included in Package-----1
- Installing No Drill Roller Shade-----2-3

Roller Shade Operation Information:

- Shade Operation-----4
- Cleaning and Care-----5

Child Safety

- Warning / Warranty-----6-8

Thank you for Choosing our Roller Shade for your Residential or Commercial Property.

We are confident that you will find our Roller Shade to be of superior quality and value, compared to other shades available.

In this guide, you will find useful information about installation, child safety, cleaning, and warranty when using your shade.

**READ ALL INSTALLATION INSTRUCTIONS BEFORE INSTALLING.
PLEASE KEEP FOR FUTURE REFERENCE / TROUBLESHOOTING.**

INCLUDED IN YOUR PACKAGE

ROLLER SHADE - CORDLESS- NO DRILL



Pull Clip

Quantity: 1

 
Used to pull and push the shade up and down.



Allen Wrench

Quantity: 1

Used to pull and push the shade up and down.



THINGS TO CONSIDER BEFORE YOU BEGIN YOUR INSTALLATION


Your new blinds are custom made to your specifications from the finest materials available. The installation should be easy and your blinds will look elegant.

Mounting

Inside mount only: Blinds are mounted inside to the top of the window frame.

Installation

Install the plunger side (left) first.

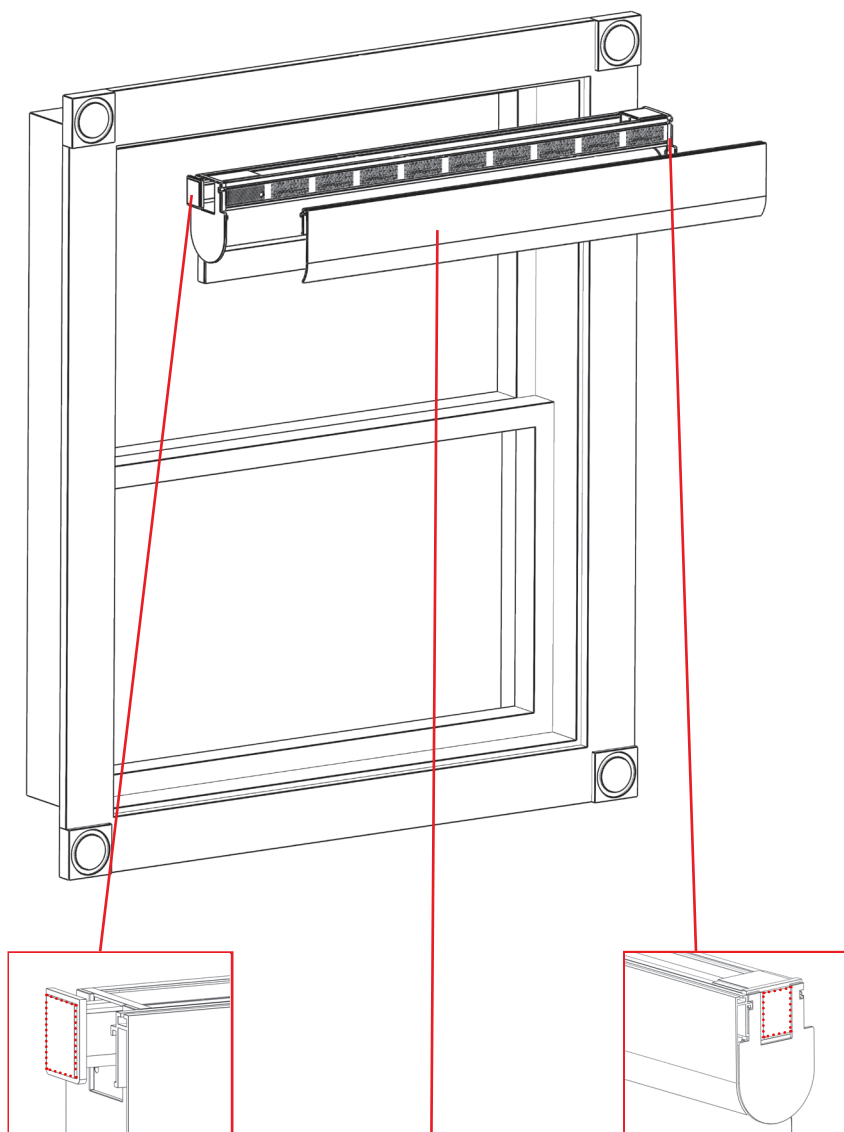


End Cap Plunger
(left)


Valance

End Cap Grip
(right)


1. Push the plunger in firmly so the End Cap Grip (right) of the Shade fits into the window frame.

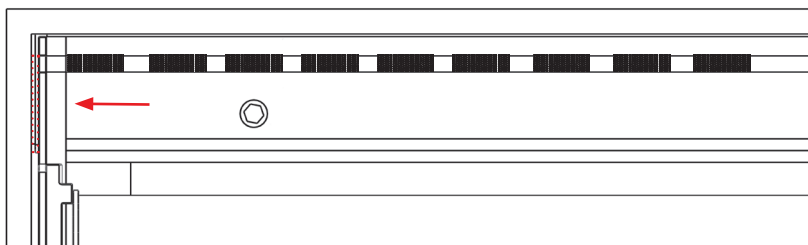


2. Allow the plunger to extend so the shade is flush with the top edge of the window.

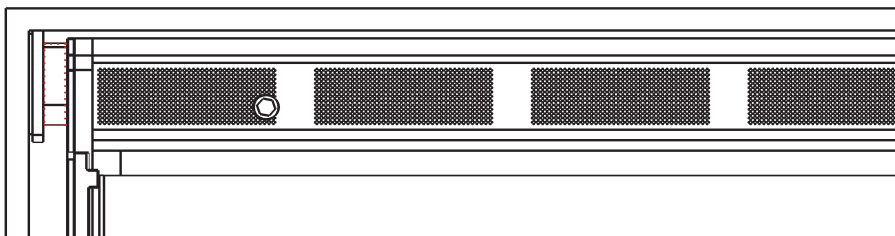

3. Now tighten the plunger clockwise using the provided Allen wrench to keep the shade in place.

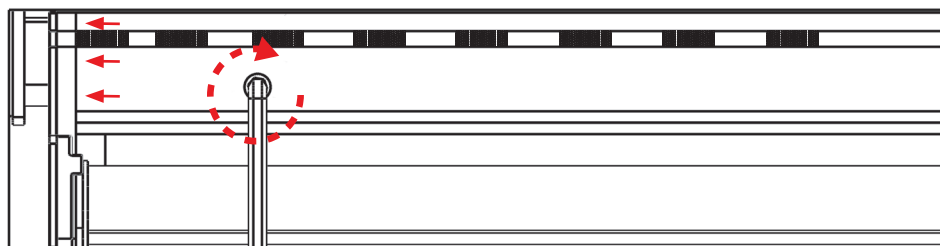

4. Attach the valance to cover the Allen Key hole. Press firmly until it snaps into the channel and the Velcro is secured.

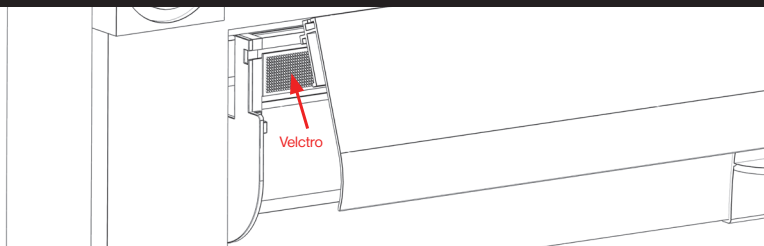

ROLLER SHADE OPERATION

Cordless Lift System

To raise the shade, gently lift the center of the bottom rail upward to the desired height.

To lower the shade, pull down evenly on the center of the bottom rail until the desired position is reached.



CARE AND CLEANING

The Roller Shade is made from a durable woven fabric designed for easy maintenance and long-lasting performance. Regular light cleaning will help keep your shade looking its best. The fabric can be feather dusted or vacuumed on a low setting using a soft brush attachment. Spots or stains can be gently cleaned with a damp sponge and mild soap. To avoid discoloration or damage to the fabric, we recommend against the use of chemical cleaners. Allow the shade to air dry completely before raising.

Remove The Shade

Turn the key counterclockwise to unlock and release the tension until the blind is no longer firmly compressed against the window frame. You may hear clicking as the mechanism releases.

Cleaning Procedures

For most fabrics, the following options are available if your shade needs cleaning.

Dust Removal

In most cases, just use a feather duster to gently dust off regularly

Vacuuming

Use a low-suction hand-held vacuum cleaner to remove dust more thoroughly

Hair Dryer

Use a hair dryer to turn on the cold air to blow away the dirt and debris between the blades.

Spot Cleaning

- Prepare a solution of warm water and a mild detergent.
- Dampen a clean cloth in the solution and wring out.
- Dab the spot with the dampened cloth until it is gone. Do not rub the fabric.
- Allow the shade to dry in the completely lowered position.



Window Blind Cord Strangulation Risk

A damaged, loose, or missing tension device poses a strangulation risk to children. Remove from use and repair or replace if tension device is damaged, loose, or missing

IMPORTANT SAFETY WARNING:

Window cords can pose a potential strangulation hazard to young children. According to the U.S. Consumer Product Safety Commission, corded window coverings are among the top five hidden hazards in American homes. Check your window coverings for exposed or dangling cords and retrofit or replace them with today's safer products.

Never place a crib, playpen, bed or any type of low-standing furniture near a window. In exploring their surroundings, young children can accidentally fall through an open window or window screen, or become tragically entangled in a nearby window cord. Whenever possible, place cribs and furniture on a non-windowed wall.

Dangling or accessible cords on window coverings can pose an accidental strangulation hazard to infants and young children. For your safety, replace older corded window coverings with today's safer products.

The Window Covering Safety Council (WCSC) and government safety officials recommend that you only use cordless window products in homes with young children.

CHOKING HAZARD:



- Keep cord out of reach from children.
- Remove objects below window.
- Do not tie cords together.
- Make sure safety cords are located 1-2 inches below the headrail.
- Please reference all warning tags in the instructions and on the shade.
- Please keep cords out of children and pets reach, a cord cleat or a cord tensioner device can be found at a local window covering store.



EMERGENCY / FIRST AID

- Remove cord from child's neck
- Call 911 or an Emergency Call Center
- Clear the throat
- Check breathing and heartbeat
- Begin CPR if trained

THIS PRODUCT IS...



LANTEX USA, INC. LIMITED WARRANTY

Effective Date: June 1, 2026

(Products purchased prior to this date remain subject to the warranty terms in effect at the time of original purchase.)

1. Limited Warranty Coverage

Lantex USA, Inc. ("Lantex USA") warrants to the original purchaser that its blinds and shades, including, without limitation, Wood Woven Shades, Fabric Horizontal Blinds, Sheer Vertical and Horizontal Shades, Roman Shades, Zebra Shades, Cellular Shades, Aluminum Blinds, Pleated Shades, and painted or stained valances (collectively, the "Products"), shall be free from defects in materials and workmanship under normal residential use and service during the warranty periods set forth herein. For purposes of this Limited Warranty, "normal residential use" shall mean ordinary indoor residential use by the original purchaser in accordance with Lantex USA's written instructions, specifications, and operating recommendations.

Coverage under this Limited Warranty applies only where:

- The Product was properly measured, installed, operated, and maintained in accordance with Lantex USA instructions and specifications;
- The Product was manufactured or assembled by Lantex USA or its authorized manufacturing partners using approved materials and components; and
- The Product has not been subjected to misuse, abuse, neglect, accident, alteration, improper installation, improper maintenance, or abnormal environmental conditions.

Residential Warranty Periods

- Hardware and mechanical components: three (3) years from date of purchase;
- Fabric materials: three (3) years from date of purchase; and
- Motorized components: five (5) years from date of purchase.

Motorized Components

Motorized Products are programmed at the factory. Lantex USA shall not be responsible for malfunctions, operational failures, or damage resulting from unauthorized programming, reprogramming, resetting, modification, tampering, or use of non-approved third-party control systems, accessories, or software. Unauthorized modifications or alterations may void warranty coverage applicable to motorized components.

Commercial Installations

For Products installed in commercial or non-residential applications, warranty coverage shall be limited to three (3) years from the original date of purchase, regardless of Product type or component. Commercial applications include, without limitation, offices, retail establishments, hospitality venues, schools, medical facilities, rental properties, and multi-unit common areas.

2. Warranty Eligibility and Limitations

This Limited Warranty extends solely to the original purchaser and is non-transferable. Proof of original purchase shall be required in connection with any warranty claim.

Lantex USA's obligations under this Limited Warranty are expressly limited, at its sole option and discretion, to repair of the defective Product or component, replacement of the defective Product or component with the same or a substantially similar Product or component, or refund of the original purchase price paid for the defective Product or component.

Replacement Products or components may contain similar or equivalent materials, parts, or features and may differ from discontinued or obsolete Products.

Any repaired or replaced Product or component shall remain subject only to the original applicable warranty period and shall not extend, renew, or restart the original warranty term.

Lantex USA reserves the right to inspect any allegedly defective Product prior to approving any repair, replacement, or refund request.

Lantex USA shall not be responsible for:

- Shipping, freight, delivery, or transportation charges;
- Labor costs associated with removal, reinstallation, adjustment, measuring, or service calls;
- Damage resulting from improper measurements or installation performed by dealers, installers, contractors, or other third parties;
- The acts, omissions, workmanship, or services of independent dealers, installers, contractors, or other third parties;
- Replacement of discontinued Products or components where substantially similar substitutes are reasonably available; or
- Delays or inability to perform resulting from causes beyond Lantex USA's reasonable control.

Shipping Damage Claims

Claims relating to shipping damage, shortages, or transit-related defects must be reported in writing within ten (10) days following delivery. Failure to provide timely written notice may result in denial of the claim.

Required documentation shall include:

- Photographs depicting the damaged Product and interior packaging materials;
- A close-up photograph of the shipping label and tracking information;
- Photographs of the exterior packaging showing visible damage; and
- Such additional documentation as may reasonably be requested by Lantex USA or the applicable shipping carrier.

3. Warranty Service Procedure

To obtain warranty service under this Limited Warranty, the purchaser shall:

1. Contact Lantex USA Customer Service at 1-302-294-6552 or email customerservice@lantexusa.com;
2. Provide proof of original purchase together with a written description of the alleged defect;
3. Submit photographs, videos, or other supporting documentation reasonably requested by Lantex USA; and
4. Retain the Product, packaging materials, shipping documentation, and related correspondence pending resolution of the

LANTEX USA, INC. LIMITED WARRANTY

claim.

No Product may be returned without prior written authorization from Lantex USA. Products returned without a valid Return Authorization ("RA") may be refused or returned to sender at the sender's expense.

Updated WCMA safety standards and regulations may limit replacement options for certain corded products, including certain horizontal blinds and cord control lift ("CCL") systems. Where applicable, Lantex USA may, in its discretion:

- Repair and update the existing Product;
- Provide replacement parts intended to restore functionality and regulatory compliance; or
- Provide a substantially similar compliant replacement solution.

Lantex USA shall not be obligated to replace Products that are no longer compliant with applicable safety standards or regulations.

4. Exclusions from Warranty Coverage

This Limited Warranty does not apply to, and expressly excludes:

- Damage caused by accident, misuse, abuse, negligence, vandalism, improper handling, improper installation, improper maintenance, alteration, or unauthorized repair;
- Damage resulting from environmental conditions, including excessive humidity, moisture, heat, salt air, water exposure, fire, smoke, pollutants, or prolonged exposure to sunlight;
- Normal wear and tear, including fading, discoloration, fraying, stretching, warping, cracking, denting, scratching, or deterioration over time;
- Natural variations in color, texture, grain, weave, or dye lots;
- Minor imperfections that do not materially impair Product functionality;
- Consumable items, including batteries and other replaceable components;
- Products used outdoors unless specifically designated for outdoor use by Lantex USA; and
- Products modified or repaired by persons not authorized by Lantex USA.

All fabrics, finishes, paints, stains, and materials are subject to normal fading, discoloration, and aging over time due to sunlight exposure and atmospheric conditions. Such conditions constitute normal wear and tear and are not covered under this Limited Warranty.

5. Disclaimer of Warranties

THIS LIMITED WARRANTY CONSTITUTES THE SOLE AND EXCLUSIVE WARRANTY PROVIDED BY LANTEX USA WITH RESPECT TO THE PRODUCTS.

EXCEPT AS EXPRESSLY SET FORTH HEREIN, LANTEX USA DISCLAIMS ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT, AS WELL AS ANY WARRANTIES ARISING FROM COURSE OF DEALING, COURSE OF PERFORMANCE, OR USAGE OF TRADE.

TO THE EXTENT ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED UNDER APPLICABLE LAW, SUCH IMPLIED WARRANTY SHALL BE LIMITED IN DURATION TO THE APPLICABLE EXPRESS WARRANTY PERIOD PROVIDED HEREIN.

6. Limitation of Liability

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, LANTEX USA, ITS AFFILIATES, OFFICERS, DIRECTORS, EMPLOYEES, AGENTS, SUPPLIERS, DISTRIBUTORS, AND DEALERS SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, EXEMPLARY, PUNITIVE, OR CONSEQUENTIAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOSS OF PROFITS, LOSS OF USE, LOSS OF REVENUE, DIMINUTION IN VALUE, OR COMMERCIAL LOSS, ARISING OUT OF OR RELATING TO THE PRODUCT OR THIS LIMITED WARRANTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

IN NO EVENT SHALL LANTEX USA'S AGGREGATE LIABILITY ARISING FROM OR RELATING TO THE PRODUCT OR THIS LIMITED WARRANTY EXCEED THE ORIGINAL PURCHASE PRICE PAID FOR THE PRODUCT GIVING RISE TO THE CLAIM.

Some states do not permit limitations on implied warranties or the exclusion or limitation of incidental or consequential damages. Accordingly, certain limitations contained herein may not apply.

7. Governing Law and Venue

This Limited Warranty shall be governed by and construed in accordance with the laws of the State of Delaware, without regard to conflict of law principles.

Any action or proceeding arising out of or relating to this Limited Warranty or the Products shall be brought exclusively in the state or federal courts located within the State of Delaware, and the parties irrevocably submit to the jurisdiction and venue of such courts.

8. Force Majeure

Lantex USA shall not be liable for delays, failures, or inability to perform its obligations under this Limited Warranty arising from causes beyond its reasonable control, including, without limitation, acts of God, natural disasters, labor disputes, transportation interruptions, supply chain disruptions, governmental actions, pandemics, material shortages, power outages, or other unforeseen events.

9. State Law Rights

This Limited Warranty gives you specific legal rights. You may also have other rights which vary from state to state.