

Installation Guide: Roller Shades

Cordless Lift | Premium Cordless Lift




Installation
Inside Mount




Installation
Outside Mount

HARDWARE AND PARTS INCLUDED

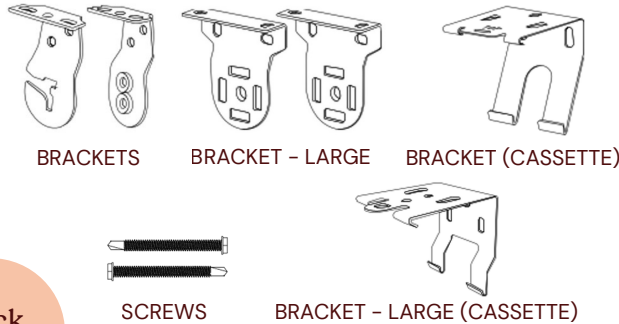


TOOLS REQUIRED

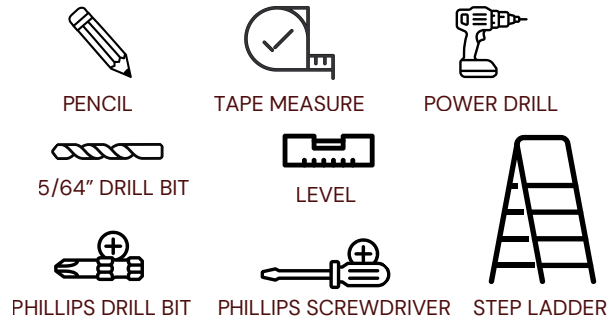


Quick pointers

- 1 If your shade is 72" or under, you'll receive the smaller brackets (A). If your shade is 72" or over, you'll get larger brackets (B).
- 2 For shades with a small bracket, the standard roll will have the Pin bracket (with two pin holes) on the right. The reverse roll will have it on the left.

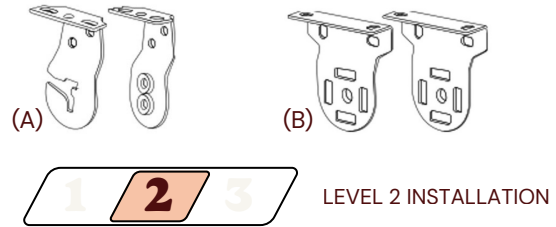

Exposed Roll Install

INSIDE MOUNT

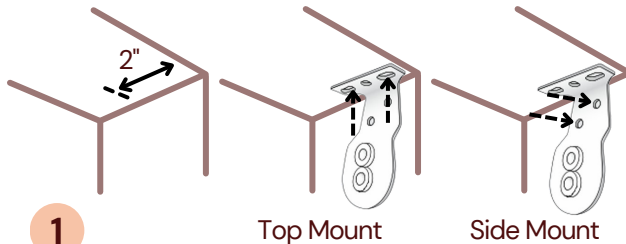


In the top right corner of your window, measure 2 1/4" back from the front of your window opening. Mark this with a pencil and do the same on the top left.

2 Set your right-side bracket so the back of it lines up with the mark made. Mark the holes either in the side (for side mount) or the top (for top mount).

3 Predrill holes with a 5/64" drill bit, then line the brackets up and install.

OUTSIDE MOUNT

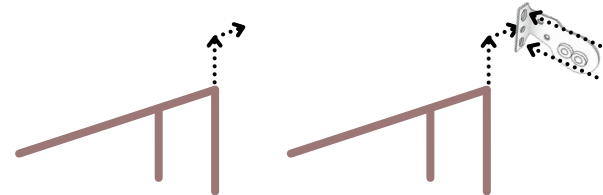


At the top left and right corners of the window, measure the height you'd wish to place your brackets (a minimum of 2" above the window opening) and mark it with a pencil.

2 Using the ordered width, subtract the width of the window from the width of your shade. Divide it in half and make a mark this distance away from your previous mark.


3 Set the bracket over the outer marks, then mark the holes for the screws. Predrill the holes with a 5/64" drill bit. Line the bracket up and install.

ATTACHING THE SHADE

(Exposed Roll under 72")

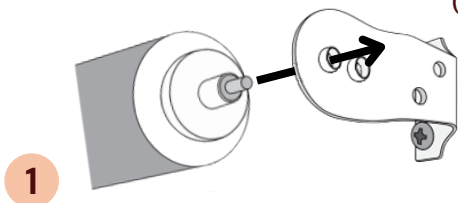


1 With the shade in hand, locate the compressible pin on the right side (Standard Roll). Set this pin into the front pin for Inside Mount. Use the back pin hole for Outside Mount.

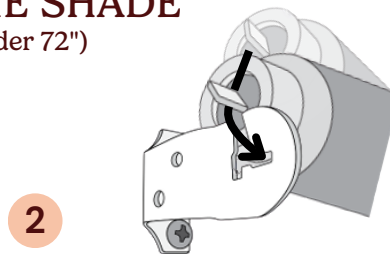


2 With the pin inserted and compressed, locate the tab on the opposite side, set the tab into the slot in the idle end (front for Inside Mount, back for Outside Mount).

(Exposed Roll 72" and up)

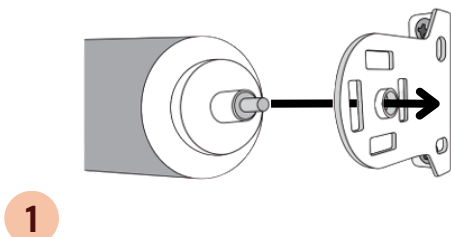


1 With the shade in hand, locate the compressible pin on the right side (Standard Roll). Set this pin into the middle pin hole.

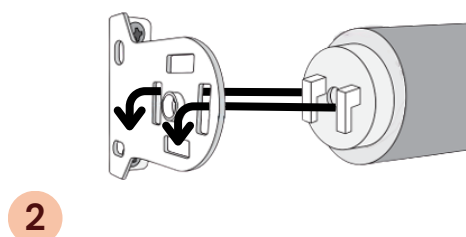

2 With the pin inserted and compressed, locate the two rectangular prongs on the opposite side of the shade. Slide these into the rectangular holes and pull them down to hook in place.

Cassette Install

INSIDE MOUNT

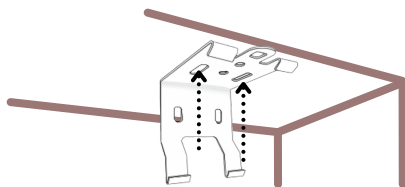


1 In the top right of your window, measure 2" each side of the window opening. Mark this with a pencil and do the same on the top left.

2 Set your bracket so the right side of the bracket will line up with the mark made, and the bracket is flush with the front of the window opening. Mark the holes for drilling. Evenly space additional brackets if needed.

3 Predrill holes with a 5/64" drill bit, then line the brackets up and install.

OUTSIDE MOUNT

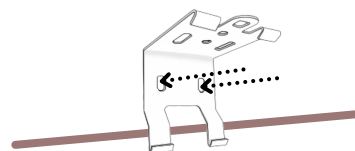


1 Just above the window opening, measure 1" back up and make a mark. Make sure this is at least 2" from the left and right edge of the window opening.

2 Set your bracket just below the mark. Mark the holes for drilling. Evenly space additional brackets if needed.


3 Predrill holes with a 5/64" drill bit, then line the brackets up and install.

ATTACHING THE SHADE

(Cassette)

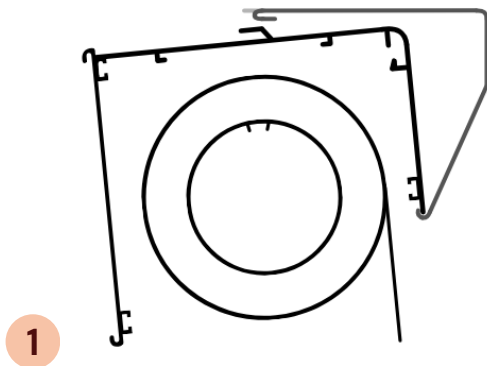


Hold the cassette up to the brackets, and place the back edge of the headrail on the bottom lip of each bracket. Adjust the shade to the left and right as needed to center the shade.

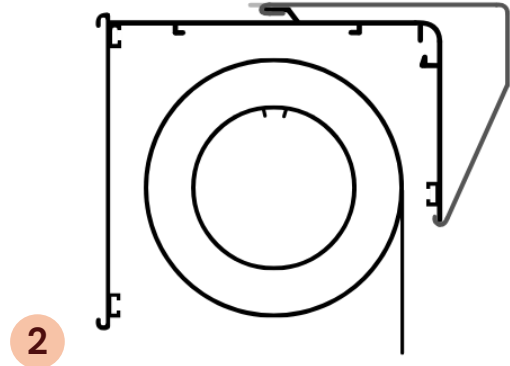

Push the headrail back until the top of each bracket snaps onto the hook on the top of the headrail.

ADDITIONAL INFO


Bracket covers are only provided for outside mount exposed roll shades with the large brackets. Slide a cover onto each bracket until you hear a snap in place.

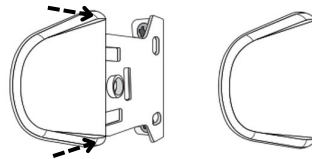

Standard Cordless Operation

Operate the shade with evenly spaced points on the hem bar. Gently pull the shade down to the desired position.


To raise the shade, gently tug down and then guide the shade up. Tug down one more time to lock it in place.

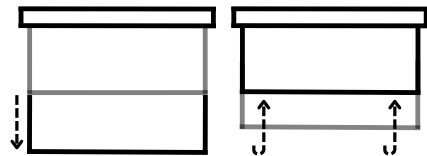

Premium Cordless Operation

Operate the shade with evenly spaced points on the hem bar. Gently pull the shade down to the desired position.

To raise the shade, gently guide the shade up to the desired position.

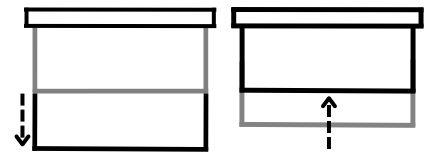

Tension Adjustment

These shades have adjustable tension. Repeat the steps below as needed to adjust the tension.

Add tension – Fully lower the shade, remove the shade from the brackets, and then roll it up. Reinstall and check the tension.

Lessen tension – Roll the shade all the way up, uninstall it, and then unroll it to its full length or extension. Install it back onto the brackets and test it out.

Installation Guide: Roller Shades

Continuous Cord Loop




Installation
Inside Mount




Installation
Outside Mount

HARDWARE AND PARTS INCLUDED

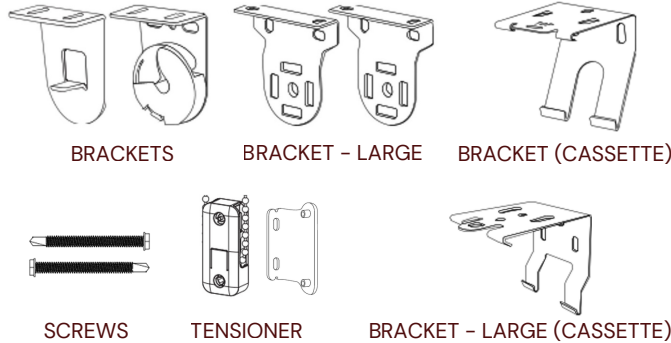

TOOLS REQUIRED

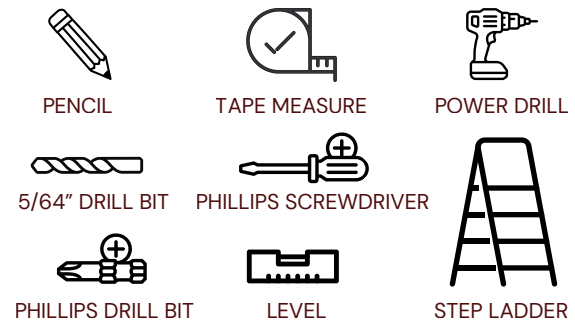

Quick pointers


- 1 If you use your own screws instead of those provided, be sure to pre-drill a small hole with a 5/64" drill bit before the final screws go in to attach brackets.
- 2 If you're using wall anchors, pre-drill with a 1/4" drill bit instead, then tap the wall anchors in place before drilling in the screws.



LEVEL 2 INSTALLATION

Exposed Roll Install

INSIDE MOUNT

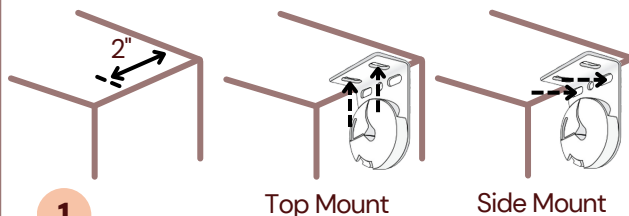

In the top right of your window, measure 2 1/4" back from the front of your window opening. Mark this with a pencil and do the same on the top left.


2

Set your right-side bracket so the back of it lines up with the mark made. Mark the holes either in the side (for side mount) or the top (for top mount).

3

Predrill holes with a 5/64" drill bit, then line the brackets up and install.

OUTSIDE MOUNT

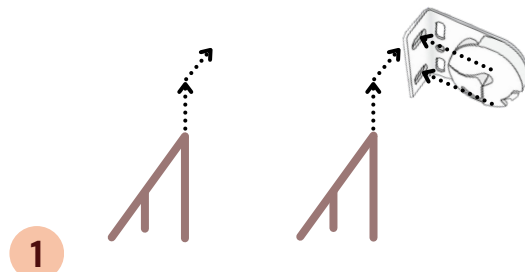

At the top left and right corners of the window, measure the height you'd wish to place your brackets (a minimum of 2" above the window opening) and mark it with a pencil.

2


Using the ordered width, subtract the width of the window from the width of your shade. Divide it in half and make a mark this distance away from your previous mark.

3

Set the bracket over the outer marks, then mark the holes for the screws. Predrill the holes with a 5/64" drill bit. Line the bracket up and install.


ATTACHING THE SHADE

(Exposed Roll under 72")

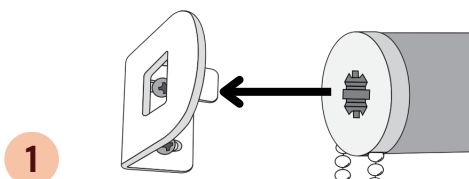

1


With the shade in hand, locate the slotted hole on the shade. Set this into the flat pin on the bracket

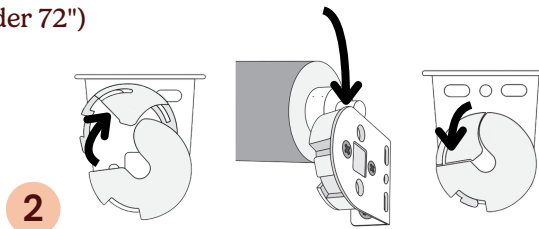

2


Unlatch the bracket on the opposite side and slide the pin end into the bracket. Close the latch on the bracket to lock it in place.

(Exposed Roll 72" and up)

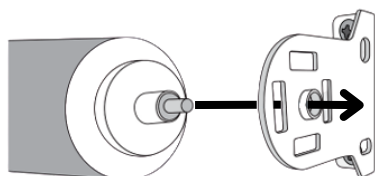

1

With the shade in hand, locate the compressible pin on the right side (Standard Roll). Set this pin into the middle pin hole.

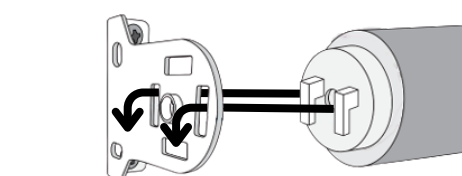


2

With the pin inserted and compressed, locate the two rectangular prongs on the opposite side of the shade. Slide these into the rectangular holes and pull them down to hook in place.

Cassette Install

INSIDE MOUNT

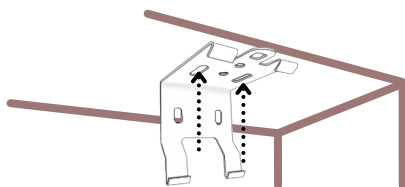

1

In the top right of your window, measure 2" each side of the window opening. Mark this with a pencil and do the same on the top left.


2

Set your bracket so the right side of the bracket will line up with the mark made, and the bracket is flush with the front of the window opening. Mark the holes for drilling. Evenly space additional brackets if needed.

3

Predrill holes with a 5/64" drill bit, then line the brackets up and install.

OUTSIDE MOUNT

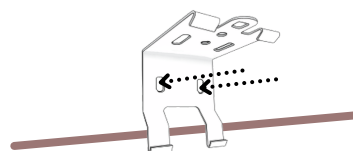

1

Just above the window opening, measure 1" back up and make a mark. Make sure this is at least 2" from the left and right edge of the window opening.

2


Set your bracket just below the mark. Mark the holes for drilling. Evenly space additional brackets if needed.

3


Predrill holes with a 5/64" drill bit, then line the brackets up and install.

ATTACHING THE SHADE

(Cassette)

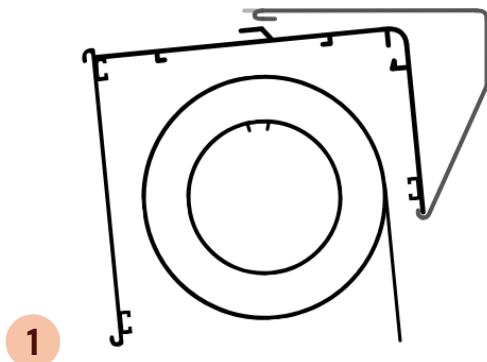


Hold the cassette up to the brackets, and place the back edge of the headrail on the bottom lip of each bracket. Adjust the shade to the left and right as needed to center the shade.

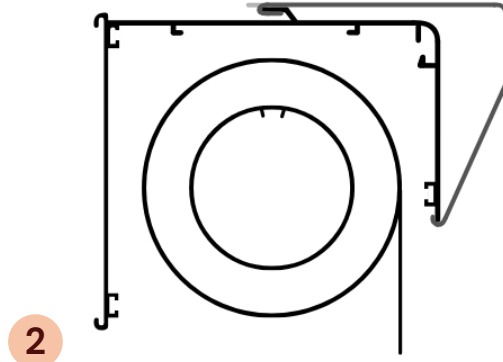

Push the headrail back until the top of each bracket snaps onto the hook on the top of the headrail.

INSTALLING THE TENSIONER

Continuous Cord Loop Only

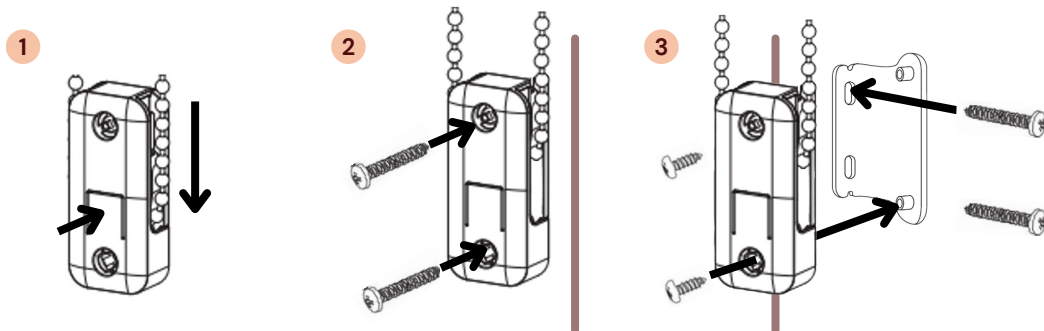


1 Pull the tensioner down to unlock the tensioner while simultaneously pulling the continuous cord loop taut. Follow step 2 for Inside Mount and step 3 for Outside Mount.

2 Hold the tensioner to the wall while keeping the cord taut, and screw in the long screws to secure it in place.

3 Keep the tensioner taut and attach it to the bracket. Mark a line on the wall above and below the bracket. Center the bracket between these lines and screw it into the wall. Then reattach the tensioner to the bracket with the screws.



 CHILD SAFETY WARNING

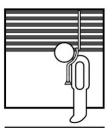

Corded window blinds and shades can be a strangulation risk or cause serious injury to young children and pets. When using corded window treatments, use the following tips to keep them safe:

● NEVER place a crib by a window!

● Move furniture that children can climb on away from the window.

● Always use cord cleats with corded products.

● Secure child-safe tensioners for continuous cord loop chains to the wall or window encasement.

● Keep cords up and away from your child's reach.

Installation Guide: Roller Shades

Motorization | Motorization Wand




Installation
Inside Mount




Installation
Outside Mount

HARDWARE AND PARTS INCLUDED

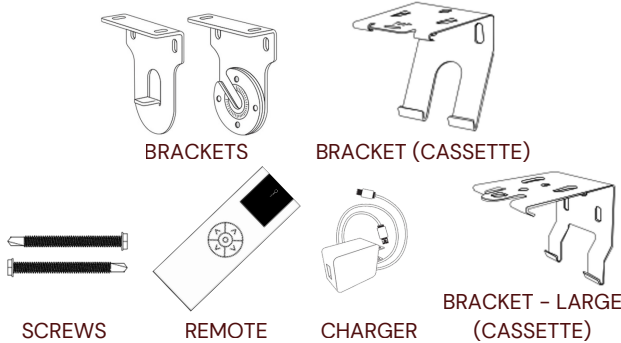

TOOLS REQUIRED

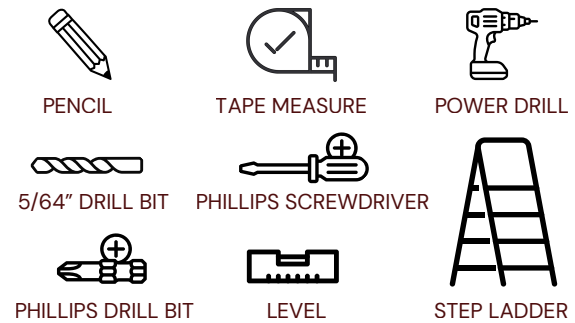

Quick pointers


- 1 If you use your own screws instead of those provided, be sure to pre-drill a small hole with a 5/64" drill bit before the final screws go in to attach brackets.
- 2 If you're using wall anchors, pre-drill with a 1/4" drill bit instead, then tap the wall anchors in place before drilling in the screws.



LEVEL 2 INSTALLATION

Exposed Roll Install

INSIDE MOUNT

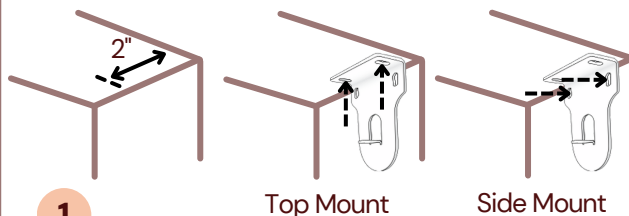

In the top right of your window, measure 2 1/4" back from the front of your window opening. Mark this with a pencil and do the same on the top left.


2

Set your right-side bracket so the back of it lines up with the mark made. Mark the holes either in the side (for side mount) or the top (for top mount).

3

Predrill holes with a 5/64" drill bit, then line the brackets up and install.

OUTSIDE MOUNT

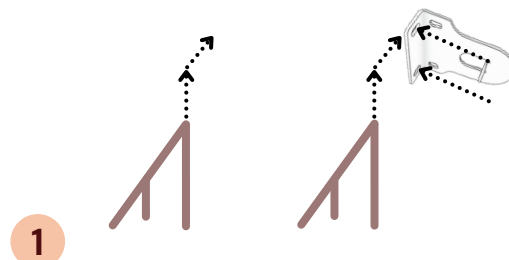

At the top left and right corners of the window, measure the height you'd wish to place your brackets (a minimum of 2" above the window opening) and mark it with a pencil.


2

Using the ordered width, subtract the width of the window from the width of your shade. Divide it in half and make a mark this distance away from your previous mark.

3


Set the bracket over the outer marks, then mark the holes for the screws. Pre-drill the holes with a 5/64" drill bit. Line the bracket up and install.

ATTACHING THE SHADE

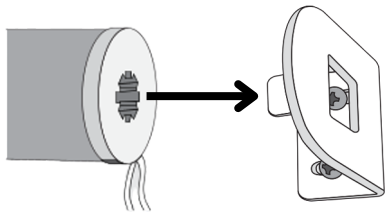

1

With the shade in hand, locate the slotted hole on the shade. Set this into the flat pin on the bracket.

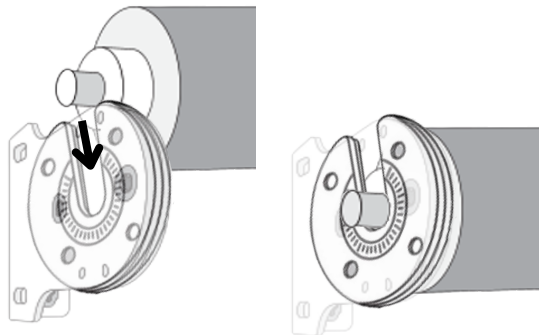


2

Slot the pin end of the shade into the "U" shaped groove on the bracket.

Cassette Install

INSIDE MOUNT

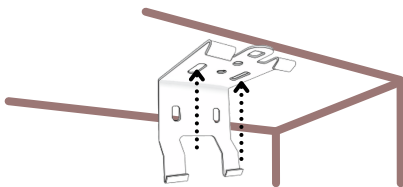

1

In the top right of your window, measure 2" each side of the window opening. Mark this with a pencil and do the same on the top left.


2

Set your bracket so the right side of the bracket will line up with the mark made, and the bracket is flush with the front of the window opening. Mark the holes for drilling. Evenly space additional brackets if needed.

3

Predrill holes with a 5/64" drill bit, then line the brackets up and install.

OUTSIDE MOUNT

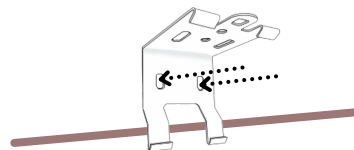

1

Just above the window opening, measure 1" back up and make a mark. Make sure this is at least 2" from the left and right edge of the window opening.

2


Set your bracket just below the mark. Mark the holes for drilling. Evenly space additional brackets if needed.

3


Predrill holes with a 5/64" drill bit, then line the brackets up and install.

ATTACHING THE SHADE

(Cassette)

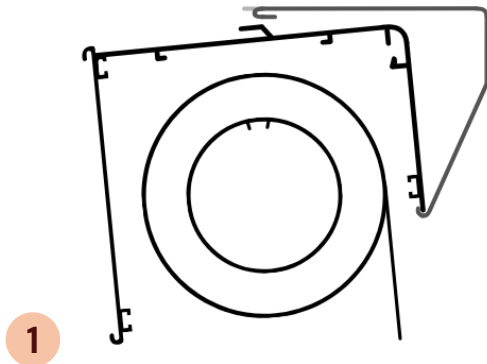

Hold the cassette up to the brackets, and place the back edge of the headrail on the bottom lip of each bracket. Adjust the shade to the left and right as needed to center the shade.

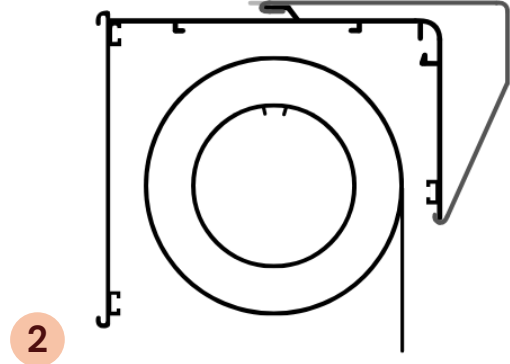

Push the headrail back until the top of each bracket snaps onto the hook on the top of the headrail.

CLEANING INSTRUCTIONS

1

For regular maintenance, use a duster or a vacuum with a brush attachment and run it over the front and back of the shade.

 
2

To spot clean stains, use a damp rag with a very mild, gentle detergent or soap. Dab at the affected spots; DO NOT RUB! Let the dampened area air dry and repeat as necessary.

All fabrics are different and some may be easier to clean than others. We recommend cleaning your shades as often as once a month.



CHILD SAFETY WARNING

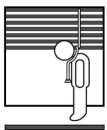

Corded window blinds and shades can be a strangulation risk or cause serious injury to young children and pets. When using corded window treatments, use the following tips to keep them safe:

● NEVER place a crib by a window!


- Move furniture that children can climb on away from the window.
- Always use cord cleats with corded products.
- Secure child-safe tensioners for continuous cord loop chains to the wall or window encasement.
- Keep cords up and away from your child's reach.

PROGRAMMING AND USING THE REMOTE


Motorization Only

Quick pointers


These shades are shipped in "Sleep" mode. Use the small, black toggle switch near the charging port on the motor head to turn it on. Switch it from **O** to **I** to "wake" it up. A light will flash behind the program button to confirm it's ready for use. Do this one at a time and wait to wake any others near it after you've finished programming the first one. This will arrive with 30% charge, so you may need to charge fully before first use.

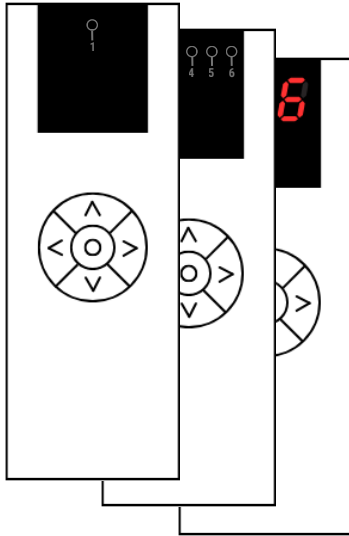

Remote (1, 6, or 15)



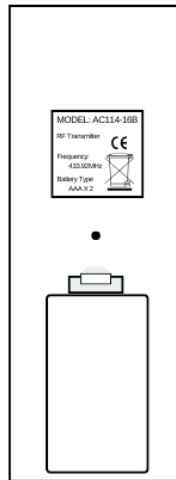


Back of Remote

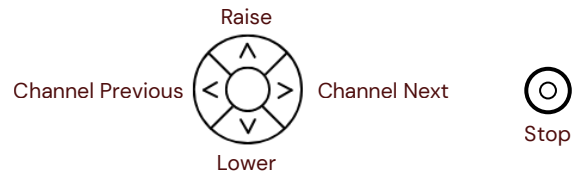


Motor Head

PAIRING THE REMOTE

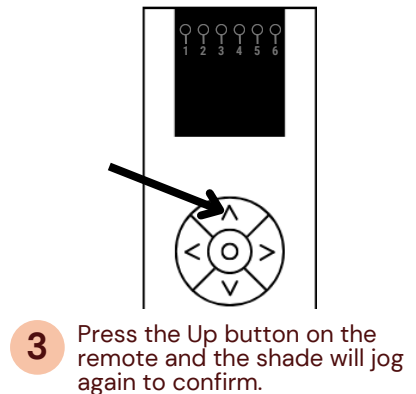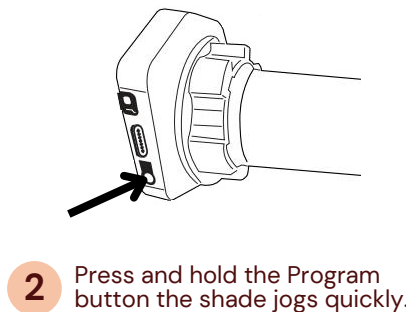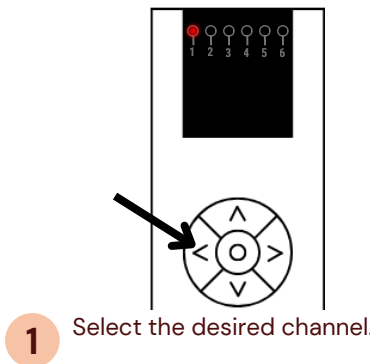


ADJUSTING LIMITS

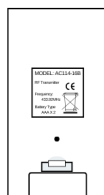 

Limits are pre-set at the factory, so the following steps are only necessary if you want to change how these settings are configured.

FACTORY RESET

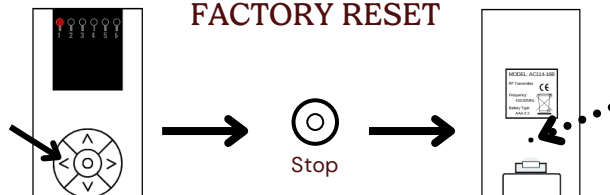

Make sure you're on the channel that the shade is paired to.

Press and hold the stop button on the remote for 5-7 seconds.


Then press and hold the Program Button on the back of the remote for 7-10 seconds. The shade will jog 1x, then 2x to confirm.

SETTING THE UPPER AND LOWER LIMIT


Upper Limit



1 Set the shade about 6" below the desired position.

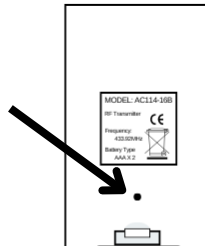


2 Flip the remote over and press the program button on the back.

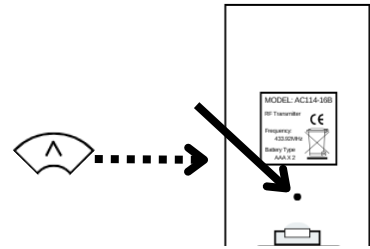


3 The shade will jog to confirm it's in setting mode. Adjust the shade up to the desired limit. Press the program button again on the back to confirm.


Lower Limit

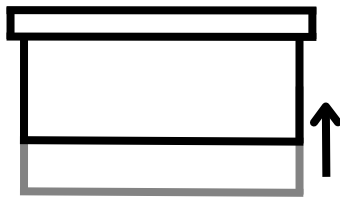

1 Set the shade about 6" above the desired position.



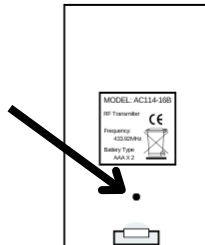


2 Flip the remote over and press the program button on the back.

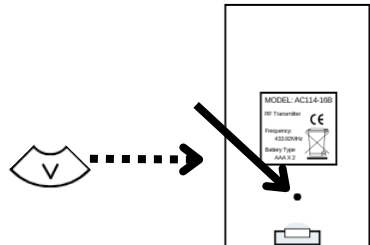

3 The shade will jog to confirm it's in setting mode. Adjust the shade down to the desired limit. Press the program button again on the back to confirm.

 Changing the Battery

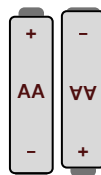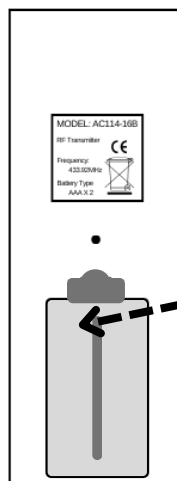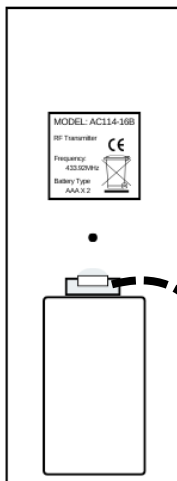

1 Remove the back latched cover for the batteries.


2 Remove the old AA batteries.

3 Make sure the left battery has the positive side facing up towards the top of the remote and the right battery has the negative side facing up towards the top of the remote.

INSTALLING THE REMOTE'S WALL MOUNT

Optional


- 1 Find a spot where you would like to place the remote mount. Hold the back plate in place while keeping it level.
- 2 Mark where you will drill the screws and install the optional anchors. Screw the screws through the holes.
- 3 Slide the remote mount onto the plate and now you can slide the remote in place.

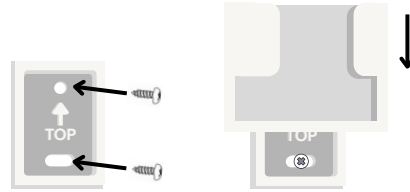

SETTING UP THE MOTORIZED WAND

Wand Motorization Only


- 1 Attach the wand to the hook with the eyelet at the top.
- 2 Connect the wand to the motor with the cord, making sure the cord is positioned behind the hook.

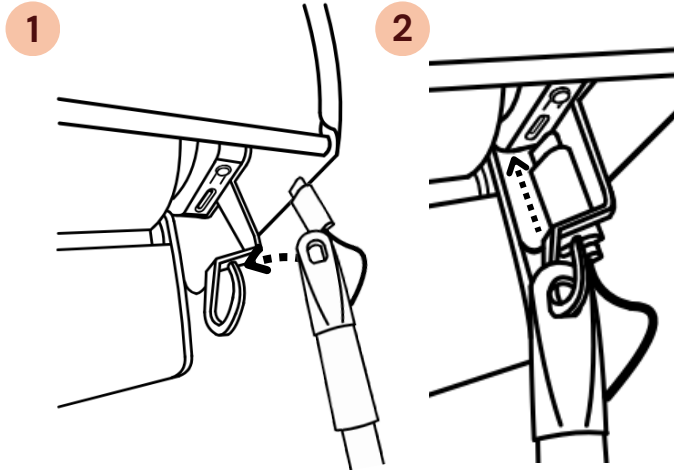

When installed correctly, the wand will have the buttons on the front for operation.


The wand will have a charge port on the bottom. The setting button for programming is on the back of the wand.

Limits are preset, so you'll just need to connect and operate.

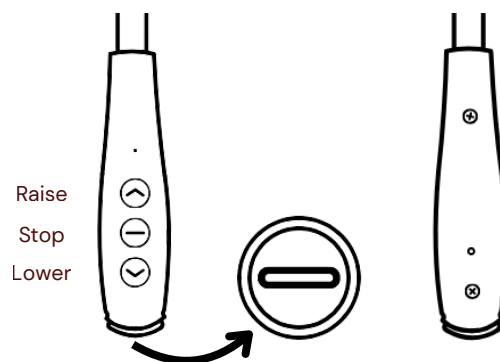

Changing the Limits with the Wand

Wand Motorization Only

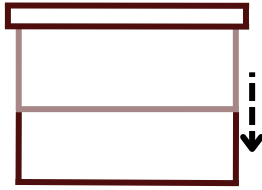


1

Move the shade to the lower, upper, or favorite limit that you want to adjust.



2

Using a thin object like a paper clip, press and hold the setting button on the back until you see the shade move up and down.

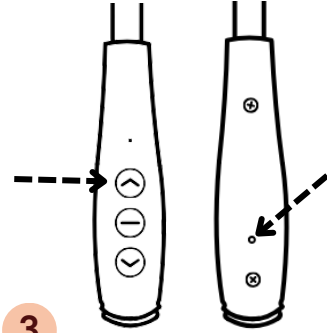

3

Move the shade to the position desired and then press and hold the button again on the back of the wand. It will move up and down to confirm. You can test the limits from here.

CLICK2FIT INSTALLATION

Installation and Removal

1

Hold the Click2Fit up against the top of window opening and make it flush with the window opening. Push the lever upwards until you hear the rail click in place.

2

Should you need to remove the Click2Fit headrail, uninstall the shade from the headrail. Use a flat-head screwdriver to unlatch the lever. Make sure to hold the headrail while unlatching the lever and cushion the lever as it unlatches. This will prevent damage to the window and headrail.

