

Installation Guide: Roller Shades

Cordless Lift | Premium Lift | Auto Up Lift




Installation
Inside Mount



Installation
Outside Mount

HARDWARE AND PARTS INCLUDED

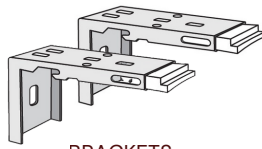

BRACKETS



HANDLE



SCREWS

TOOLS REQUIRED



PENCIL



TAPE MEASURE



POWER DRILL



 
5/64" DRILL BIT




LEVEL



PHILLIPS DRILL BIT



PHILLIPS SCREWDRIVER

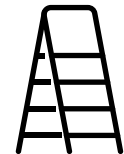

STEP LADDER


Quick
pointers

- 1 The roller shade is pre-installed in the cassette headrail which snaps onto the provided hardware. You will receive two or more cassette brackets depending on the width.




LEVEL 1 INSTALLATION

INSIDE MOUNT

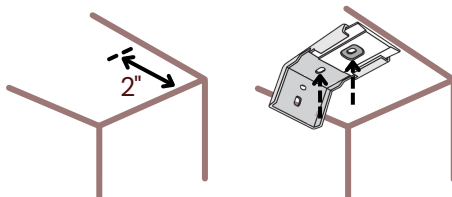

- 1 In the top right of your window, measure 2" from the left and right edges of your window opening. Mark these with a pencil.
- 2 Center your bracket over this mark with the front of the bracket in line with the top edge of the window opening. Mark the holes with a pencil.
- 3 Pre-drill holes with a 5/64" drill bit, then line the brackets up and install.


OUTSIDE MOUNT

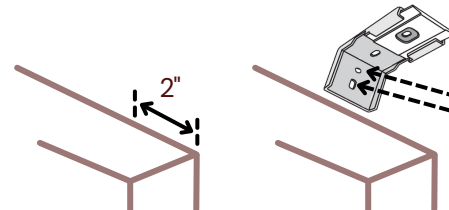

- 1 At the top left and right corners of the window, measure the height you'd wish to place your brackets (a minimum of 2" above the window opening) and mark it with a pencil.
- 2 At least 2" away from the edge the window below, line the bracket up with the top of the window opening. Mark the screw holes.
- 3 Pre-drill holes with a 5/64" drill bit, then line the brackets up and install.


ATTACHING THE SHADE

For Exposed Roll and Cassette

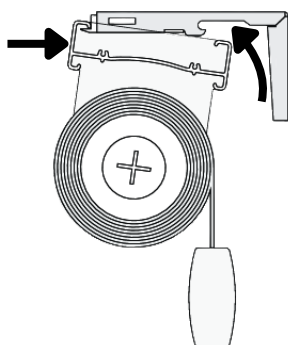



1

With the shade in hand, hook the front of the bar onto the front hook of the bracket. Push the shade back and tilt the back up to lock it in place.

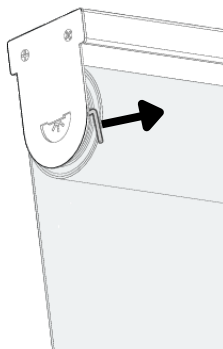


2

Locate the idle end (on the left side) and pull the pin out that is keeping the shade locked in place for shipment. It's now ready to use!

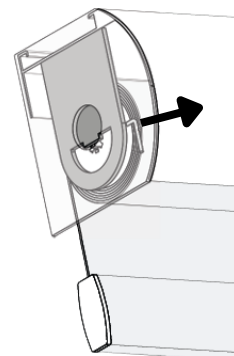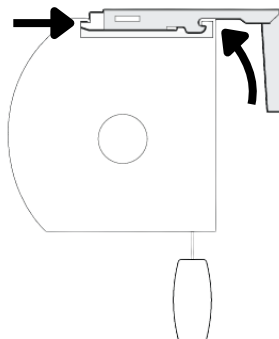


Quick pointers

Premium Cordless lift and Auto Up lift will install the exact same way as Standard Cordless. The only difference is that the bracket looks like the image to the right.

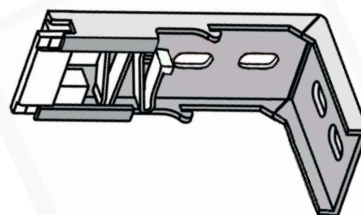

ADDITIONAL INFO

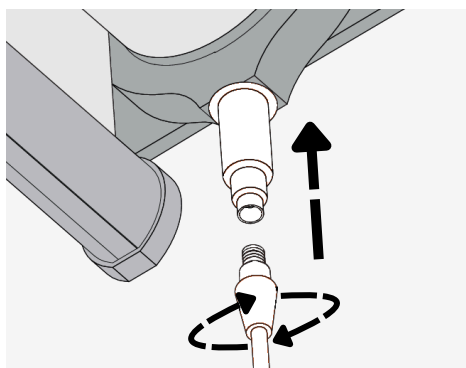

Attaching the Wand (Auto-Up Only)


To operate the Auto-Up wand, lower the shade by gripping the wand handle, pulling straight down.

Once at the bottom, tug the wand once and let the shade automatically raise up to the cassette.

Alternate Operation

Operate the shade with evenly spaced points on the hem bar. Gently pull the shade down to the desired position.

To raise the shade, gently tug down and then guide the shade up. Tug down one more time to lock it in place.

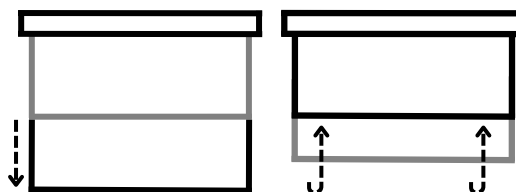

Installation Guide: Roller Shades

Continuous Cord Loop | Motorization




Installation
Inside Mount




Installation
Outside Mount

HARDWARE AND PARTS INCLUDED

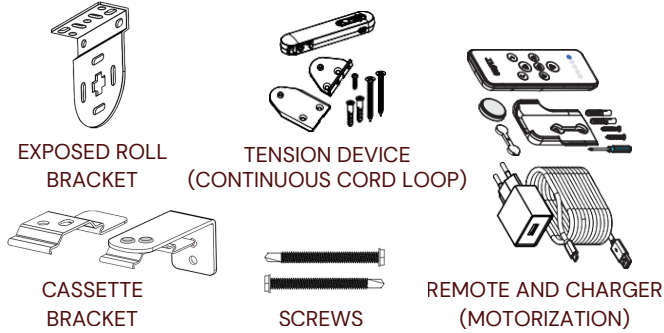

TOOLS REQUIRED

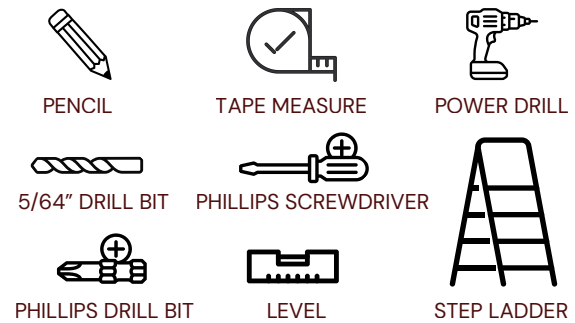

Quick pointers


- 1 If you use your own screws instead of those provided, be sure to pre-drill a small hole with a 5/64" drill bit before the final screws go in to attach brackets.
- 2 If you're using wall anchors, pre-drill with a 1/4" drill bit instead, then tap the wall anchors in place before drilling in the screws.



LEVEL 1 INSTALLATION


Exposed Roll Install

INSIDE MOUNT

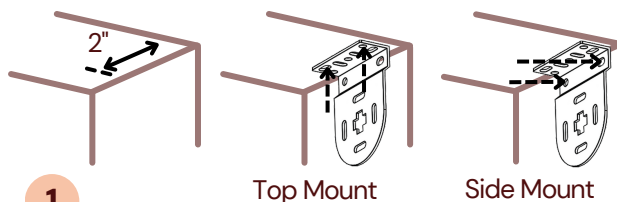


- 1 In the top right of your window, measure 2 1/4" back from the front of your window opening. Mark this with a pencil and do the same on the top left.
- 2 Set your right-side bracket so the back of it lines up with the mark made. Mark the holes either in the side (for side mount) or the top (for top mount).
- 3 Predrill holes with a 5/64" drill bit, then line the brackets up and install.

OUTSIDE MOUNT

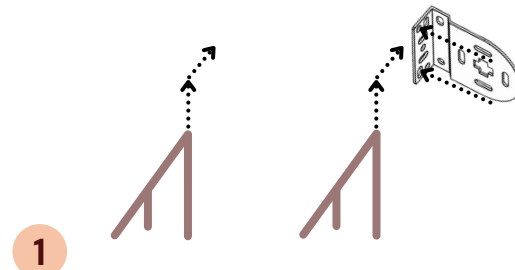



- 1 At the top left and right corners of the window, measure the height you'd wish to place your brackets (a minimum of 2" above the window opening) and mark it with a pencil.
- 2 Using the ordered width, subtract the width of the window from the width of your shade. Divide it in half and make a mark this distance away from your previous mark.
- 3 Set the bracket over the outer marks, then mark the holes for the screws. Predrill the holes with a 5/64" drill bit. Line the bracket up and install.

ATTACHING THE SHADE

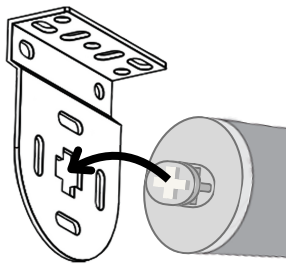

1

With the shade in hand, locate the cross shaped pin and set it into the cross shaped hole on the bracket. Push the shade in to compress the pin.

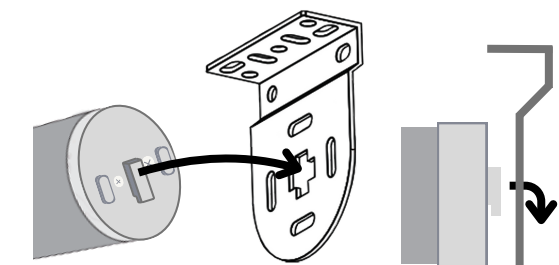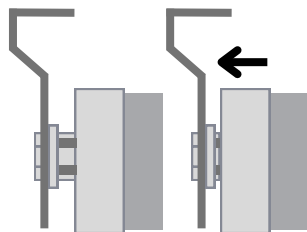


2

With the pin inserted and compressed, locate the center rectangular prong surrounded by the oval shaped pins. Slide the center prong into the cross shaped hole and the oval shaped pins into the oval holes. Pull the shade down to lock it in place.

Cassette Install

INSIDE MOUNT

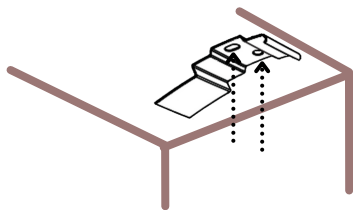

1

In the top right corner of your window, measure 2" each side of the window opening. Mark this with a pencil and do the same on the top left.


2

Set your bracket so the right side of the bracket will line up with the mark made, and the bracket is flush with the front of the window opening. Mark the holes for drilling. Evenly space additional brackets if needed.

3

Predrill holes with a 5/64" drill bit, then line the brackets up and install.

OUTSIDE MOUNT

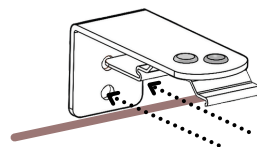

1

Just above the window opening, measure 1" back up and make a mark. Make sure this is at least 2" from the left and right edge of the window opening.

2


Set your bracket just below the mark. Mark the holes for drilling. Evenly space additional brackets if needed.

3

Predrill holes with a 5/64" drill bit, then line the brackets up and install.


ATTACHING THE SHADE

(Cassette)

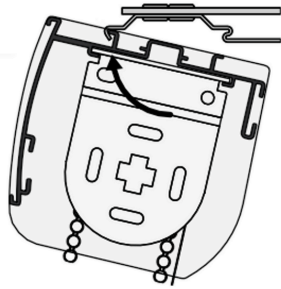

1

Hold the cassette up to the brackets, and place the front middle hook of the headrail on the front lip of each bracket. Adjust the shade to the left and right as needed to center the shade.

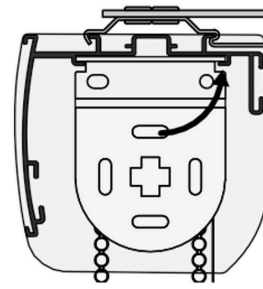


2

Push the headrail up until the back of each bracket snaps onto the back hook on the top of the headrail.

INSTALLING THE TENSIONER

Continuous Cord Loop Only

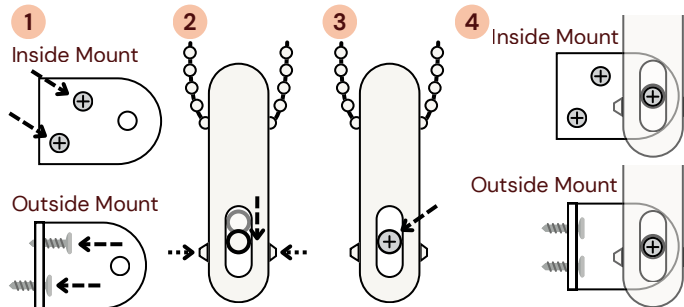

- 1 First install the bracket to the side of the window opening for Inside mount, or to the wall just outside of the window for Outside Mount.
- 2 Press the two buttons on the outside of the tension device, then pull down the screw hole lock using a pencil or pen.
- 3 With the screw hole lock moved down, place a screw in the hole.
- 4 Line the screw up with the "nub" on the bracket (on the rounded side of the bracket) and then insert the screw and tighten it. Test to ensure the cord is loose enough for operation, but tight enough for safety.

CLEANING INSTRUCTIONS

1

For regular maintenance, use a duster or a vacuum with a brush attachment and run it over the front and back of the shade.

2

 
To spot clean stains, use a damp rag with a very mild, gentle detergent or soap. Dab at the affected spots; **DO NOT RUB!** Let the dampened area air dry and repeat as necessary.

3

All fabrics are different and some may be easier to clean than others. We recommend cleaning your shades as often as once a month.



CHILD SAFETY WARNING



Corded window blinds and shades can be a strangulation risk or cause serious injury to young children and pets. When using corded window treatments, use the following tips to keep them safe:

● NEVER place a crib by a window!

- Move furniture that children can climb on away from the window.
- Secure child-safe tensioners for continuous cord loop chains to the wall or window encasement.
- Always use cord cleats with corded products.
- Keep cords up and away from your child's reach.


PROGRAMMING AND USING THE REMOTE

Motorization Only


Quick pointers

The Motorized Shades are pre-programmed and arrive in Sleep Mode. Please wake the motor before attempting pairing and operation. These also will arrive with only 30% charge for safety reasons, so you may need to charge the product fully before first use.


Press and Hold the Setting Button for 6 Seconds until you hear the motor move and the lights on it flash red 4 times.

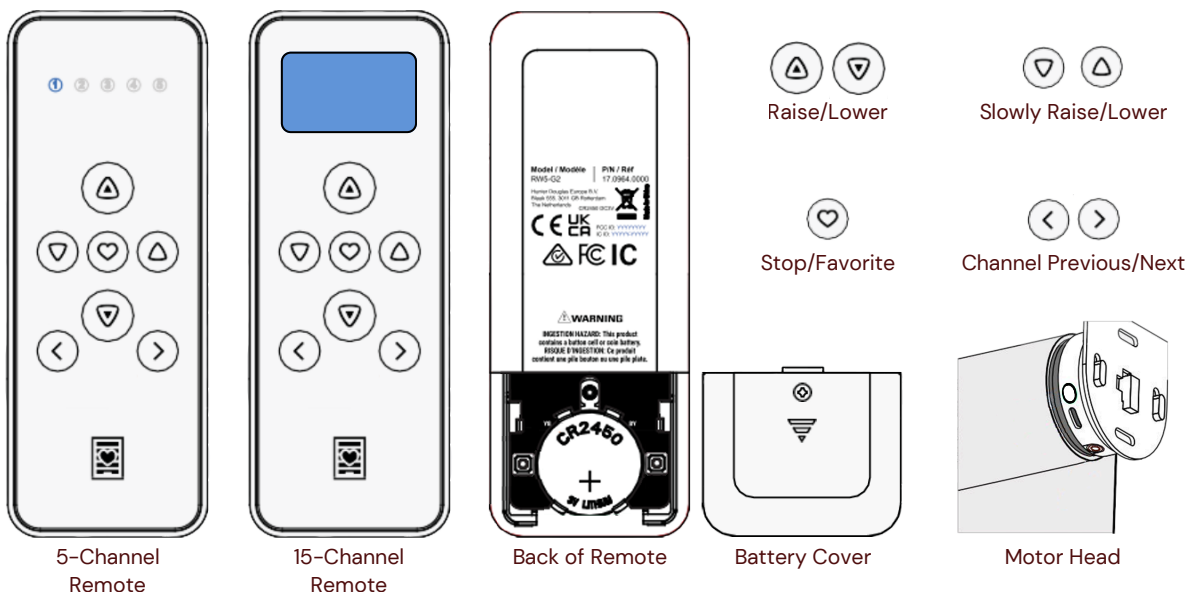



PAIRING THE REMOTE

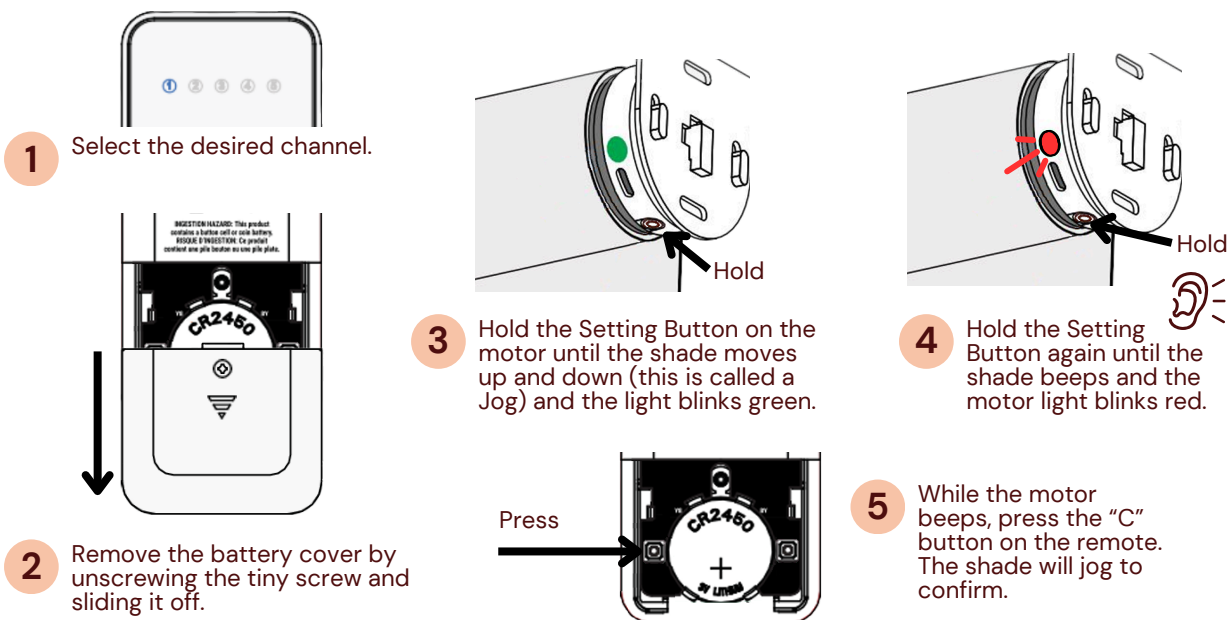

REMOVING A SHADE FROM A CHANNEL

 - 

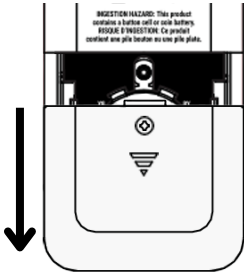1 Select the desired channel.
- 

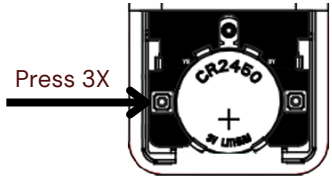
2 Remove the battery cover by unscrewing the tiny screw and sliding it off.
- 


3 Press the "C" button quickly 3 times. The shade will jog and blink green to confirm.

SETTING AND REMOVING THE FAVORITE POSITION

Setting the Favorite

- 

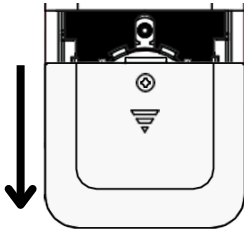1 Set the shade to the desired Favorite Position.
- 

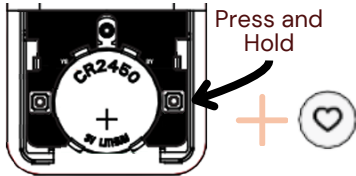2 Remove the battery cover by unscrewing the tiny screw and sliding it off.
- 

 
3 Press and hold the "L" Button, then quickly press and hold the Heart Button. The shade will beep and blink green to confirm.

Removing the Favorite

- 1 Press the Heart button to move the shade to the Favorite Position.
- 2 Follow steps 2-3 above to remove the shade's favorite.
- 3 Repeat steps for setting the Favorite Position above to set the new Favorite Position.


Change Motor Speed


- 


1 Ensure the remote is on the channel desired.
 - 

2 Hold the Heart button, then press the Up Button quickly. The Green light on the shade will blink confirmation.
- 
 3 Speeds: Standard, Comfort and Slow.

Changing the Battery

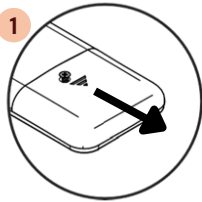- 

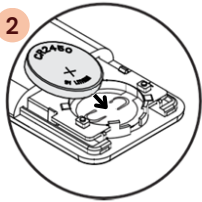1 Unscrew the small screw on the back battery cover and slide it off.
- 

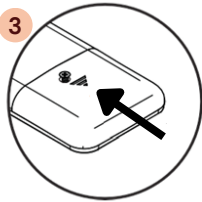
2 Remove the old battery, and then install the new one with the Numbers and + sign facing up. Make sure it clips into the socket.
- 

3 Slide the battery cover back on and tighten the screw to secure it.

INSTALLING THE REMOTE'S WALL MOUNT

Optional

- 1 Find a spot where you would like to place the remote mount.
- 2 Mark where you will drill the screws and install the optional anchors. Screw the screws through the holes.
- 3 After they're installed, insert the cap over the screws.

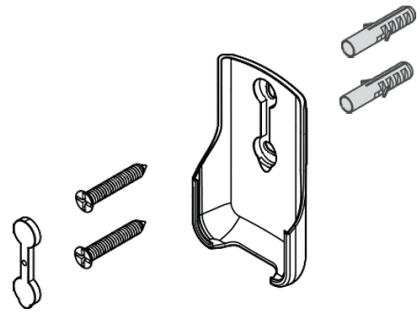

TUISS SMARTVIEW APP

Downloading and Accessing the App

- 1 Search for the Tuiss SmartView app in the App Store or Google Play Store or Scan the QR code on the front of the swing label attached to your shades.
- 2 Open the app and follow the steps to Create an Account.
- 3 Tap Continue. When you open the app for the first time, you'll be asked by SmartView to use your phone's Bluetooth. Enable this and then continue.




Quick pointers

Waking the Shade


Wake the motor up by pressing and holding the Setting Button on the motor for 6 seconds. The light will flash 4 times. If you've already woken the motor to add the remote, you can skip this step.

Adding the Shade

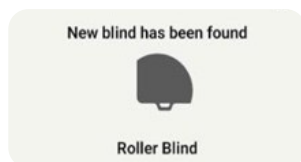

- 1 Select "Add my first Blind". Scan the QR code on the Back of the swing label.
- 2 The blind will jog or move up and down briefly to acknowledge pairing.
- 3 Press "Found it!" and it will jog to confirm pairing.
- 4 Press Save, then Done if you have no further shades. If you want to add another, select "Add new Blind"

Operation

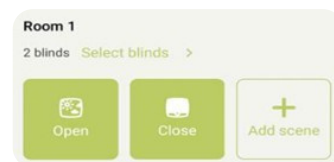

Selecting Open will move the shade to the top limit and Close to the bottom limit.

All shades assigned to the same room will move simultaneously.


To move individual shades, press the "Select blinds" option and then tick the box for the shade you'd like to use.

Drag the shade up or down to precisely position your shade.

CLICK2FIT INSTALLATION


Installation and Removal

- 1 Hold the Click2Fit up against the top of window opening and make it flush with the window opening. Push the lever upwards until you hear the rail click in place.
- 2 Should you need to remove the Click2Fit headrail, uninstall the shade from the headrail. Use a flat-head screwdriver to unlatch the lever. Make sure to hold the headrail while unlatching the lever and cushion the lever as it unlatches. This will prevent damage to the window and headrail.

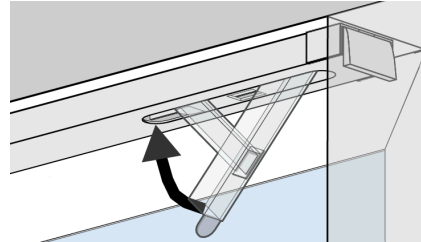


Optional Metal Plate

- 1 Uninstall the shade from the Click2Fit headrail. Pull the lever from below to retract the tension block.
- 2 Peel the adhesive tape off of the back of the metal strip and attach it with the tabs at the bottom.

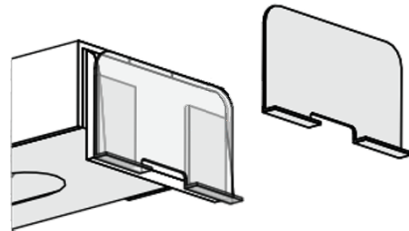


TWIST2FIT INSTALLATION

Installation and Removal

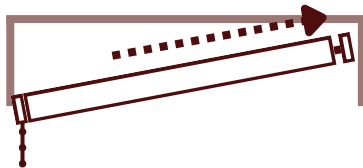


- 1 Insert the shade into the window opening with the extended plunger end entering first.

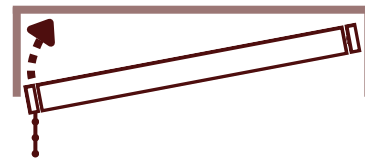

- 2 Push the plunger in against the jamb and raise the control end up into the window opening.



- 3 Release the shade slightly to allow the tension to start. The shade should hold itself in place and allow adjustments as needed.

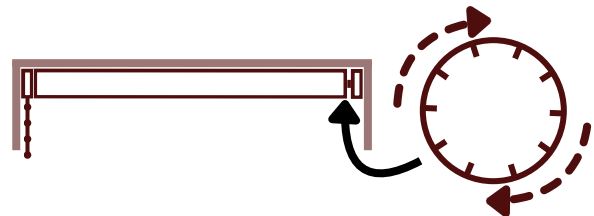

- 4 While holding the shade in place, turn the tightening dial clockwise on the plunger end to tighten the shade in place. On the left side, it will turn away from the window, on the right side, it will turn toward from the window.

Reverse the above steps (turning counter clockwise) to uninstall.