

INSTALLATION & OPERATING INSTRUCTIONS

HONEYCOMB SHADES


Cordless Lift & Lock

Cordless Lift & Lock Top Down Bottom Up

Thank you for your purchase. This shade has been custom built for you from the highest quality materials. To avoid errors and save valuable time, please read these instructions before installing your new shades.

TOOLS YOU WILL NEED

1. Pencil or Marker
2. Measuring Tape
3. Phillips Screwdriver
4. Carpenter's Level
5. Power Drill
6. Mounting Fasteners
7. 3/32" Drill Bit & 1/4" Hex Nut Driver Bit

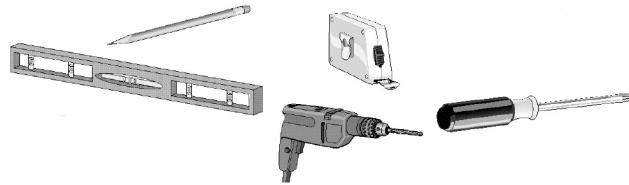

 
Mounting Surface	Fastener
Drywall, Plaster	Wall Anchors, Expansion Bolts (Not provided) 
Metal	Sheet Metal Screws (Not provided) 
Wood	No. 6 Hex Head Screws (Provided) 


TABLE OF CONTENTS

Getting Started	Page 2
Mounting Type	Page 2
Bracket Installation	Page 2
Inside Mount	Page 3
Outside Mount	Page 3
Installing the Shade	Page 4
Operating the Shade	Page 4
Adjusting the Shade	Page 4-5
Care and Cleaning	Page 5
Child Safety	Page 6
Warranty Information	Page 6


GETTING STARTED

All of the required installation components are wrapped in your package along with these instructions. Check that the parts you have correspond to the parts shown below.


NOTE: Some parts may vary depending upon your chosen mounting options.

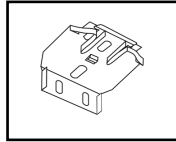

**Installation
Brackets**

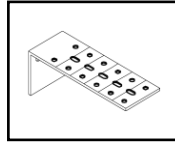


Extension Bracket
(optional)

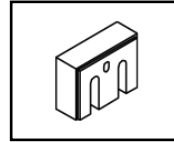

Spacer Blocks
(optional)

Mounting Types

If the installation brackets are mounted correctly, the rest of the installation process will follow easily. To prepare for this important first step, review the mounting types and basic window terminology illustrated below.

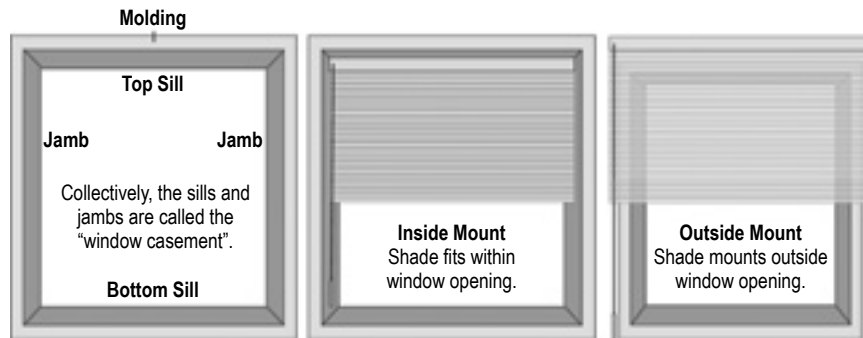


Bracket Installation

Installation brackets may be used for **INSIDE** or **OUTSIDE** mounts.

Mounting the brackets level is essential for proper operation of the shade. Shim the brackets if necessary to achieve a level alignment.

The bracket requirements and placements are the same for inside and outside mounts. Refer to the following spacing diagram and bracket requirement chart.

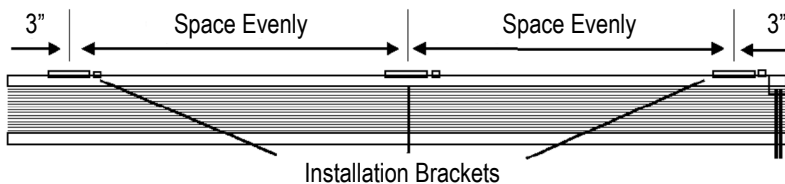

Installation Bracket Requirement Chart	
Shade Width	Brackets Required
12" to 31"	2
31-1/8" to 72"	3
72-1/8" to 84"	4


Inside Mount

For inside mounts the installation brackets will be screwed in place through the top two holes of each bracket.

Refer to the depth requirements chart:

NOTE: Prior to mounting the brackets, add any clearance depth required to avoid obstructions such as window cranks or handles.

Minimum Depth	Fully Recessed
1 1/4"	2-1/2"

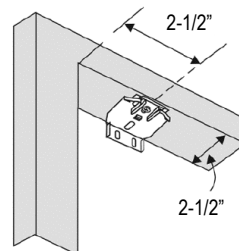

ATTACH THE BRACKETS

1. Screw the bracket through top two holes to desired window sill location.
 - Use a 3/32" drill bit to drill holes for the screws.
2. Ensure all brackets are level and aligned.

IMPORTANT: If you are fastening the installation brackets to drywall, be sure to use wall anchors and follow the instructions provided with the anchors. (Anchors not provided.)

Outside Mount


For outside mounts the installation brackets will be screwed in place through the two back holes of each bracket.

Refer to the minimum surface height chart.

ATTACH THE BRACKETS

1. Screw the bracket through back two holes to desired location.
 - Use a 3/32" drill bit to drill holes for the screws.
2. Ensure all brackets are level and aligned.

Minimum Height
3/4"

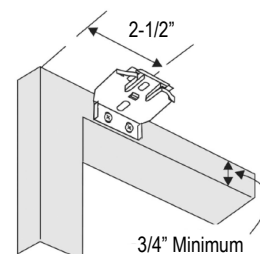

IMPORTANT: If you are fastening the installation brackets to drywall, be sure to use wall anchors and follow the instructions provided with the anchors. (Anchors not provided.)

SPACER BLOCKS (optional)


1. Spacer blocks will be attached to the end of each bracket.
2. Ensure the screws are long enough to secure brackets to surface.
3. Do not use more than three spacer blocks per bracket.
4. If installing extension brackets, do not use spacer blocks.

EXTENSION BRACKETS (optional)

1. Position the extension brackets to the desired wall location.
2. The bracket tops must be aligned and level to one another.
3. Mount the extension brackets through the back holes with two screws.
4. Attach the installation brackets to the extension brackets.

Installation brackets attached to extension brackets with the included screws and nuts.

Use the same holes for all brackets to ensure even projection from the surface.

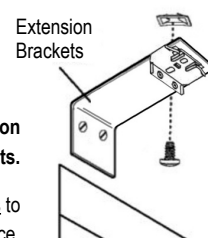


Installing the Shade


MOUNT THE HEADRAIL

1. Hold the shade up near the brackets and insert the front clip of the bracket into the front groove of the rail.
2. Make sure the shade is centered in the window opening.
3. Push the rail back and up until the back clips of the bracket are inserted in the back of the rail.

To **REMOVE** shade, reverse procedure. As you release the brackets, support the head rail to keep it from falling.

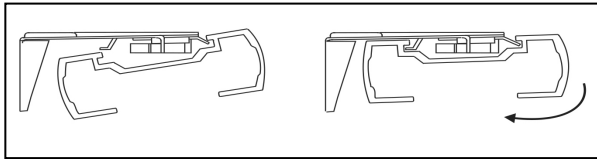

Installing the Shade

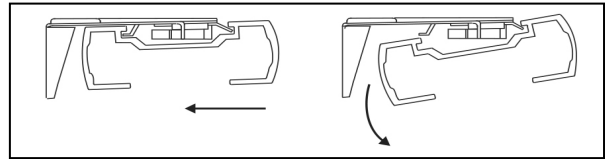


Removing the Shade

Operating the Shade

TO RAISE AND LOWER THE CORDLESS LIFT & LOCK SHADE

1. Push and hold the **button** on the bottomrail handle.
2. Raise or lower the shade to the desired position.
3. Release the button to lock the shade into place.

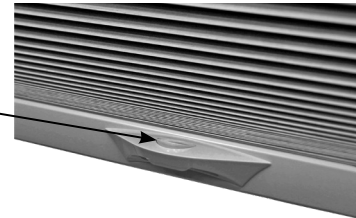


Adjusting the Shade

1. Raise and lower the shade several times.
2. If the length is incorrect or the bottom rail is not level, use the following steps to correct.

BOTTOM-UP BOTTOMRAIL AND TOP-DOWN/BOTTOM-UP

INTERMEDIATE RAIL SHADE ADJUSTMENT

1. Lift bottomrail on the side to be adjusted. This will take the weight off the cord.
2. Use a screwdriver or dime.
 - Turn screw clockwise to lift that side of the shade.
 - Turn screw counter clockwise to lower that side of the shade.
 - Half a revolution is 1/4" adjustment (maximum adjustment is 1/2").

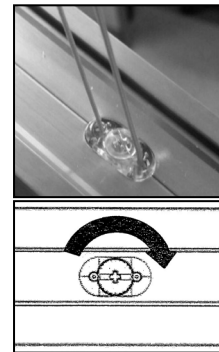


Adjusting the Shade

TOP-DOWN/BOTTOM-UP BOTTOMRAIL SHADE ADJUSTMENT

1. Remove right end cap of the bottomrail
2. Remove the small, white plastic tool located inside the bottomrail
3. Find the plastic dial just to the right of where the tool was positioned
 - Using the tool to depress the dial about 1/4"
 - Turn clockwise to lower the bottomrail
 - Turn counterclockwise to raise the bottomrail
 - When shade has been adjusted to the desired level remove the tool from the dial and insert it back into the bottomrail
4. Replace end cap.

NOTE: If the tool gets misplaced a flathead screwdriver may be used.

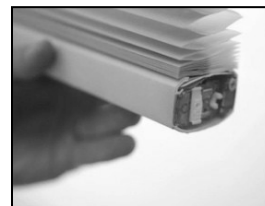

CARE AND CLEANING

Honeycomb shades are made of an anti-static, dust resistant fabric which repels dirt and dust. For most of these fabrics, the following options are available if your shade needs cleaning.

DUSTING: Regular light dusting with a feather duster is all the cleaning that is needed in most circumstances.

VACUUMING: Use a hand-held vacuum with low suction for more thorough dust removal.

SPOT CLEANING: Use the following steps for spot cleaning: (1) Prepare a solution of warm water and mild dishwashing detergent. (2) Dampen a clean cloth in the solution and ring it out. (3) Dab the spot with the dampened cloth until it is gone. **DO NOT RUB THE FABRIC.** (4) Allow the shade to dry in the completely lowered position.

CAUTION: Avoid creasing Blackout fabrics during cleaning.

DEEP CLEANING: Use the following steps for deep cleaning: (1) Immerse shade in basin or bathtub filled with warm water and mild detergent. (2) Rinse with clean water. (3) Fully raise shade and tilt to eliminate excess water, (4) Reinstall damp shade, lower it, and let it dry completely.

CAUTION: Do not immerse Blackout fabrics. Do not immerse Cordless Lift & Lock bottomrail in water.

ULTRASONIC CLEANING: Standard shades, except those made with Blackout or Blackout Lining, can be ultrasonically cleaned by a professional.

- Specify that a mild detergent be used.
- Never immerse the headrail in the solution.
- Dry the shade completely in the lowered position.

CAUTION: Do not ultrasonically clean Blackout fabrics. Do not immerse headrail in water.

CHILD SAFETY

Young children can **STRANGLE** in cord loops and in the loop above the cord stop. They can also wrap cords around their necks and **STRANGLE**.

- Always keep cords out of children's reach.
- Move cribs, playpens and other furniture away from cords.
Children can climb furniture to get to cords.
- Do not tie cords together.
- Make sure cords do not twist together and create a loop.



SAFETY LABELS

In compliance with WCMA/ANSI safety standards the warning labels on the bottom rail are designed to be permanent. **DO NOT** remove the permanent warning label on the bottom rail. This assures that future owners of this product will be aware of potential dangers associated with this shade.

WARRANTY INFORMATION

Lifetime Limited Warranty covering our Custom Made Blinds

We extend this lifetime limited warranty to the original purchaser. This warranty applies only to manually operated Custom Products properly installed in the window, door or interior area for which they were intended. Installation of the product must be in accordance with accompanying instructions. The product cannot be modified. It is the purchaser's responsibility to maintain and clean the product in compliance with the instruction provided. The product must be used only in the window for which it was purchased. Damage to the product resulting from misuse, abuse, direct exposure to salty air or discoloration due to sunlight or the passage of time is not covered by this warranty.

This warranty does not apply to conditions caused by normal wear and tear upon the product. This warranty is exclusive and in lieu of all other obligations, liabilities or warranties. In no event shall the Manufacturer be liable for incidental or consequential damages or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you.

In the event of a defect under this warranty, we will repair or replace the product, at our option, provided it is returned to our store. Our warranty obligation excludes shipping charges and labor costs for measuring and installation. Repairs will be made with like or similar parts. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Notes: Motorization Systems are warranted for five years from the date of purchase. Specialty Blinds and Shades are warranted for one year from the date of purchase.

This warranty does not apply to Commercial Orders.



C8-20-4402

INSTALLATION INSTRUCTIONS


HONEYCOMB SHADES

Continuous Cord Loop System

Thank you for your purchase. This shade has been custom built for you from the highest quality materials. To avoid errors and save valuable time, please read these instructions before installing your new shades

TOOLS YOU WILL NEED

1. Pencil or Marker
2. Measuring Tape
3. Phillips Screwdriver
4. Carpenter's Level
5. Power Drill
6. Mounting Fasteners
7. 3/32" Drill Bit & 1/4" Hex Nut Driver Bit

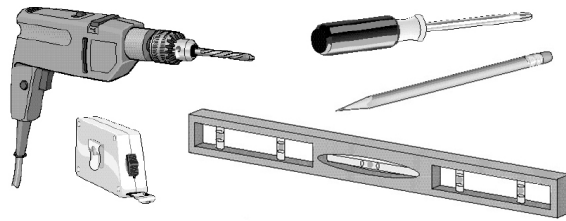

Mounting Surface	Fastener
Drywall, Plaster	Wall Anchors, Expansion Bolts (Not provided) 
Metal	Sheet Metal Screws (Not provided) 
Wood	No. 6 Hex Head Screws (Provided) 


TABLE OF CONTENTS

Getting Started	Page 2
Mounting Type	Page 2
Bracket Installation	Page 2
Motorized Shades	Page 3
Inside Mount	Page 3
Outside Mount	Page 3
Installing the Shade	Page 4
Installing the Cord Tensioner	Page 4
Attaching Hold-Down Brackets (optional)	Page 4
Operating the Shade	Page 5
Adjusting the Shade	Page 5
Troubleshooting	Page 6
Care and Cleaning	Page 6
Child Safety	Page 7
Warranty Information	Page 7


GETTING STARTED

Thank you for purchasing this Honeycomb Shade. All of the required installation components are wrapped in your package along with these instructions. With proper installation, operation, and care, your new shades will provide years of beauty and performance. Please thoroughly review this instruction booklet before beginning the installation. Check that the parts you have correspond to the parts shown below.


Note: Some parts may vary depending upon your chosen shade system or mounting option.

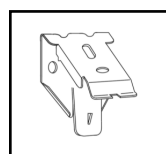


Installation Brackets

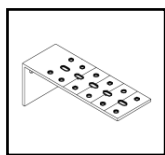


Extension Bracket
(optional)

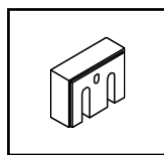

Spacer Blocks
(optional)

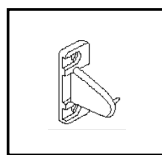

Hold Down Brackets
(optional)

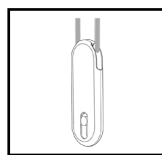


Cord Tensioner Bracket & Instruction Pack
(Cord Loop Shades Only)

Cordless Lift Shade Only




Clear Plastic Insert
— if ordered

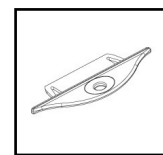

Cordless Lift Handle
(Clear or Color Coordinated)

Mounting Types

If the installation brackets are mounted correctly, the rest of the installation process will follow easily. To prepare for this important first step, review the mounting types and basic window terminology illustrated below.

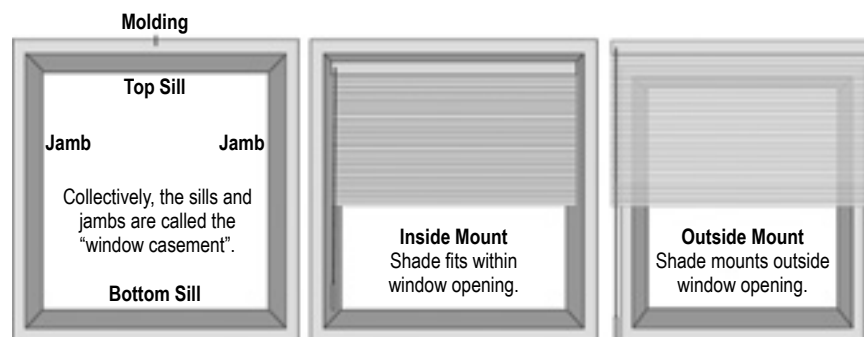

Bracket Installation

The installation brackets may be for **INSIDE** or **OUTSIDE** mounts.

Mounting the brackets level is essential for proper operation of the shade.

Shim the brackets if necessary to achieve a level alignment.

The bracket requirements and placements are the same for inside and outside mounts.

Refer to the following spacing diagram and bracket requirement chart.

Shade Width	Brackets Required
18" to 38"	2
38-1/8" to 72"	3
72-1/8" to 106"	4
106-1/8" to 140"	5
140-1/8" to 174"	6

When installing motorized shades with an external battery pack refer to the chart below:

External Battery - Mounted away from the Headrail

Honeycomb & Hybrid Pleat

Inside (IB) Mount	
Minimum mounting depth	3/4"
Minimum mounting depth, flush mount	2-1/8"
Outside (OB) Mount	
Minimum flat vertical surface	1-1/2"

External Battery - Mounted to the back from the Headrail*

Honeycomb & Hybrid Pleat

Inside (OB) Mount	
Minimum mounting depth	2-5/8"
Minimum mounting depth, flush mount	3-1/4"
Outside (OB) Mount	
Minimum flat vertical surface	1-1/2"

NOTE: Extension Brackets required for External Battery - Mounted to the back of the headrail.

Motorized Shades

Prior to installing the shade, attach the external battery pack to the motor and pair the motor with the remote using the instructions included with the remote.

Inside Mount

For inside mounts the installation brackets will be screwed in place through the top two holes of each bracket.

Refer to the mounting depth chart:


Minimum Depth	Fully Recessed
3/4"	2-1/8"

NOTE: Prior to mounting the brackets, add any clearance depth required to avoid obstructions such as window cranks or handles.

ATTACH THE BRACKETS:

1. Screw installation brackets through top two holes to desired window sill location.
 - Use a 3/32" drill bit to drill holes for the screws.
2. Ensure all brackets are level and aligned.

IMPORTANT: If you are fastening the installation brackets to drywall, be sure to use wall anchors and follow the instructions provided with the anchors. (Anchors not provided.)

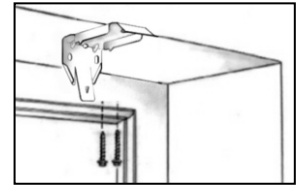

Outside Mount

For outside mounts the standard installation brackets will be screwed in place through the two back holes of each bracket.


Refer to the minimum surface height chart:

Minimum Height
1-1/2"

ATTACH THE BRACKETS:

1. Screw standard brackets through two back holes to desired location.
 - Use a 3/32" drill bit to drill holes for the screws.
2. Ensure all brackets are level and aligned.


IMPORTANT: If you are fastening the installation brackets to drywall, be sure to use wall anchors and follow the instructions provided with the anchors. (Anchors not provided.)

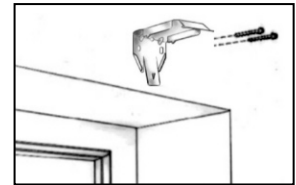

EXTENSION BRACKETS (optional):

1. Position the extension brackets to the desired wall location.
2. The bracket tops must be aligned and level to one another.
3. Mount the extension brackets through the back holes with two screws.
4. Attach installation brackets to extension brackets with included screws & nuts.

NOTE: Use the same holes for all brackets to ensure even projection from the surface.

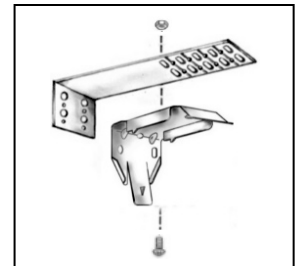

Installing the Shade

FOR MOTORIZED SHADES (ONLY)

IMPORTANT: *For Motorized shades only, make sure the remote control is paired to the motor prior to installing in the window.*

FOR CORDLESS LIFT SHADES (ONLY)

NOTE: *The cordless lift handle should be installed prior to mounting the shade in the window.*


- The shade will come with the color coordinated textured handle pre-inserted into the moving rail(s).
- If desired, a clear textured handle or a clear plastic insert are available and must be selected at the time the order is placed.

NOTE: *The plastic handle is not easily removable. Should it become necessary to remove the handle please contact customer service.*




MOUNTING THE HEADRAIL

- With the front side of the shade facing you, tilt the headrail slightly backward to angle the front inside lip to the brackets.
- Rotate headrail back and upward to snap in it into place.

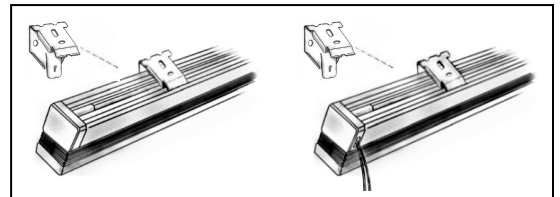


Attaching Hold-Down Brackets (optional)

1. Lower the shade and place the hold down pins into the bottom rail end caps.
2. Mark the hold down bracket locations on the mounting surface.
3. With the brackets level, attach them using two screws.

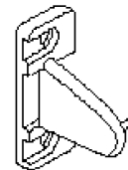

Installation Instructions

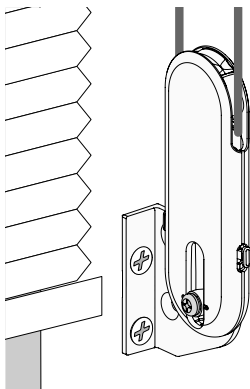

Universal Cord Tensioner


Inside Mount or Outside Mount Installations

Para Español, vea la página 17.

Getting Started

Before doing anything, you must first slide the Universal Cord Tensioner (UCT) to the bottom of the cord loop.

1. Insert a small screwdriver, punch, or awl through the screw hole at the bottom of the UCT.
2. While pressing the UCT release buttons on the sides of the UCT, move the screw hole down to release the safety mechanism.
3. Slide the UCT down to the bottom of the cord loop.
4. Install the window covering.
5. Use the following instructions to secure the UCT.

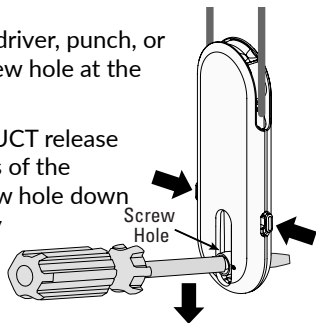


WARNING: A damaged, loose, or missing tension device poses a strangulation risk to children. Remove from use and repair or replace if tension device is damaged, loose, or missing.

CAUTION: The window covering will not operate properly unless the UCT is secured.

Required Tools

- Pencil
- Small-tip Phillips screwdriver
- Power drill with two drill bit sizes:
 - For applications not requiring wall anchors, use a $\frac{1}{8}$ " drill bit and drill $1\frac{1}{4}$ " deep.
 - For applications requiring anchors, use a $\frac{7}{32}$ " drill bit.

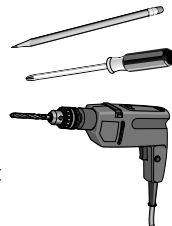


CAUTION: Use wall anchors if the mounting screws will not be secured into wood or metal. For metal surfaces, sheet metal screws are recommended.

IMPORTANT

Install the UCT in a location that minimizes access by children and pets. Locate the UCT where it will not interfere with window covering operation.

Only the supplied UCTs and UCT hardware should be used.

 
Wall Anchors



If only drywall is available for mounting, a wall anchor is required to ensure a secure attachment of the UCT. If the screw or screws can be fastened into wood or metal (even if the wood is behind drywall), a wall anchor is not necessary.

1. If no wood or metal is available to hold the screw, mark the hole position as shown in the procedures below.
2. Drill a $7/32$ " pilot hole through the drywall for each wall anchor at the locations you marked.
3. Tap each wall anchor into its pilot hole until the flange of the anchor is flush with the drywall.
4. Align the UCT or bracket holes to the anchors.
5. Attach the tensioner or bracket using the provided $1\frac{1}{2}$ " screws.

NOTE: When mounting into wood or metal, drill $1/8$ " pilot holes.

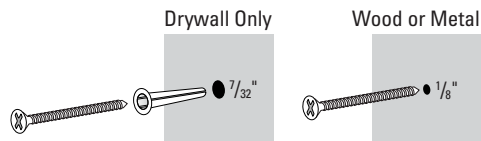

Choose a Mounting Option


The Universal Cord Tensioner (UCT) can be mounted in one of three ways:

- For outside mount (OB) products:
 - "Outside Mount" on page 6. This attaches the UCT to a bracket secured to the wall outside the window casement.
 - For inside mount (IB) products, you have two choices:
 - "Inside Mount with a Bracket" on page 10. This attaches the UCT to a bracket secured to the inside of the window casement.
 - "Inside Mount without a Bracket" on page 13. This attaches the UCT directly to the inside of the window casement.
- NOTE:** If mounting to a textured or uneven surface, use the provided mounting bracket.



IMPORTANT: For all mounting options, locate the UCT as close to the window glass as possible to minimize accessibility by children and pets. **Be sure the UCT is not placed in the path of the bottom rail or fabric.**

Outside Mount


1. Break off the Outside Mount (OB) bracket.

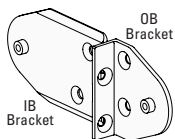


2. With the Universal Cord Tensioner (UCT) at the bottom of the cord loop, position it at the desired location.
3. Mark the wall at the notch in the UCT.

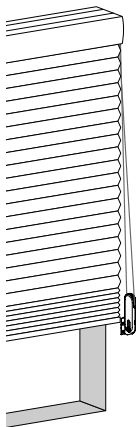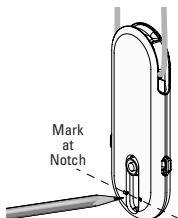

4. Hold the OB bracket with its center hole aligned with the mark and mark both screw hole locations.

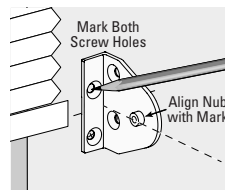


5. Drill the screw holes.
 - Determine whether or not wall anchors are required (see "Wall Anchors" on page 4) and drill either $1/8$ " pilot holes (no wall anchor) or $7/32$ " pilot holes (with wall anchor).
6. Mount the UCT bracket.
 - a. If wall anchors are required, first tap them into the pre-drilled holes.
 - b. Use a Phillips screwdriver and the longer screws provided to attach the bracket to the wall.

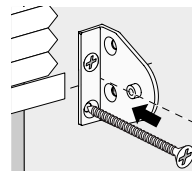


7. Attach the UCT to the bracket


- a. Press the UCT release buttons on the sides of the UCT while pulling down on the spring-loaded screw hole.

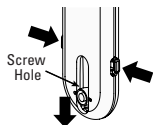

- b. Insert the nub on the inside mount bracket into the back of the screw hole in the UCT.

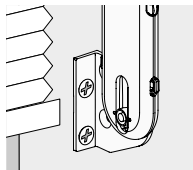

- c. Insert the small provided screw into the nub through the front of the screw hole and tighten it to secure the UCT to the bracket.

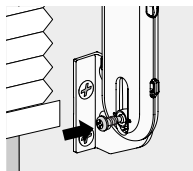


8. Ensure the cord can move freely through the UCT without engaging the lock. The center of the screw hole should be aligned with the notch in the UCT ($\pm 1/8"$).

- If the cord does not move freely through the UCT, the cord is too tight and the UCT should be moved up.
- If the UCT locks onto the cord, the cord is too loose and the UCT should be moved down.

CAUTION: Do not pull the screw hole down to the bottom of the slot. This may cause the cord to become too tight, affecting window covering function and increasing cord wear.


Inside Mount with a Bracket

1. Break off the Inside Mount (IB) bracket

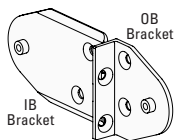


2. With the Universal Cord Tensioner (UCT) at the bottom of the cord loop, position it at the desired location.

3. Mark the window casement at the notch in the UCT.

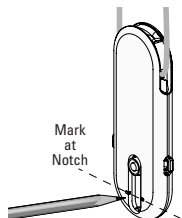

4. Hold the IB bracket with its center hole aligned with the mark and mark both hole locations.

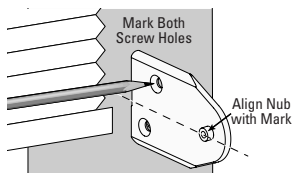


5. Drill the screw holes.

- Determine whether or not wall anchors are required (see "Wall Anchors" on page 4) and drill either a $\frac{1}{8}$ " pilot hole (no wall anchor) or a $\frac{7}{32}$ " pilot hole (with wall anchor).


6. Mount the UCT bracket.

- a. If wall anchors are required, first tap them into the pre-drilled holes.
- b. Use a Phillips screwdriver and the longer provided screws to attach the bracket to the wall.

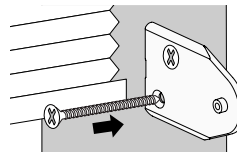


7. Attach the UCT to the bracket


- a. Press the UCT release buttons on the sides of the UCT while pulling down on the spring-loaded screw hole.

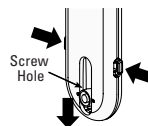

- b. Insert the nub on the inside mount bracket into the back of the screw hole in the UCT.

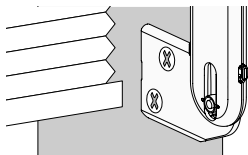

- c. Insert the small provided screw into the nub through the front of the screw hole and tighten it to secure the UCT to the bracket.

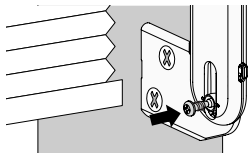

8. Ensure the cord can move freely through the UCT without engaging the lock. The center of the screw hole should be aligned with the notch in the UCT ($\pm 1/8"$).


- If the cord does not move freely through the UCT, the cord is too tight and the UCT should be moved up.
- If the UCT locks onto the cord, the cord is too loose and the UCT should be moved down.

CAUTION: Do not pull the screw hole down to the bottom of the slot. This may cause the cord to become too tight, affecting window covering function and increasing cord wear.


Inside Mount without a Bracket

NOTE: If mounting to a textured or uneven surface, use the provided mounting bracket.


1. With the Universal Cord Tensioner (UCT) at the bottom of the cord loop, position it at the desired location.
2. Mark the window casement at the notch in the UCT.

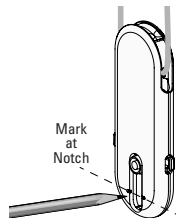


3. Mark and drill the screw hole.
 - Determine whether or not a wall anchor is required (see "Wall Anchors" on page 4) and drill either a $1/8"$ pilot hole (no wall anchor) or a $7/32"$ pilot hole (with wall anchor).
4. Mount the UCT
 - a. If a wall anchor is required, first tap the anchor into the pre-drilled hole.

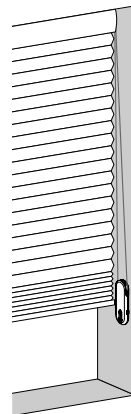


- b. Insert one of the longer provided screws into the screw hole in the UCT.

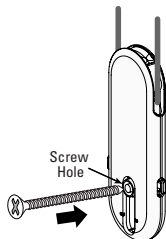

- c. Press in on the UCT release buttons and pull down on the screw hole to align the hole with the wall anchor or pilot hole.

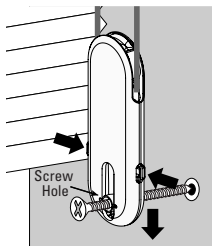

- d. Attach the UCT directly to the wall.

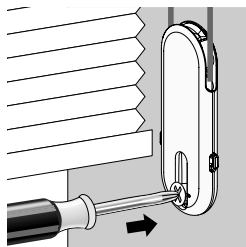


CAUTION: Do not overtighten the mounting screw. This can prevent the UCT from functioning properly and increase cord wear.

5. Ensure the cord can move freely through the UCT without engaging the lock. The center of the screw hole should be aligned with the notch in the UCT ($\pm 1/8"$).

- If the cord does not move freely through the UCT, the cord is too tight and the UCT should be moved up.
- If the UCT locks onto the cord, the cord is too loose and the UCT should be moved down.

CAUTION: Do not pull the screw hole down to the bottom of the slot. This may cause the cord to become too tight, affecting window covering function and increasing cord wear.

WARNING

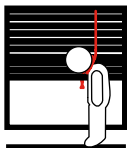

Products with a Damaged, Loose, or Missing Tension Device Pose a Strangulation Risk to Children.

This Window Blind is equipped with a Tension Device.

- Remove from use and repair or replace if tension device is damaged, loose, or missing.
- Tension device must be securely attached to wall or floor.
- Children can climb on furniture to reach cords.
- Fasteners provided with tension device may not be appropriate for all mounting surfaces.
- Use appropriate anchors for mounting surface conditions.
- Tag to be removed only by end-user.

Operating the Shade

CONTINUOUS CORD LOOP SHADES

TO RAISE AND LOWER THE SHADE:

1. Pull down on the cord loop to raise and lower.
2. One side of the loop will raise the shade and one side will lower it.
3. If the same cord is continuously pulled after lowering, the shade will begin to rise.

NOTE: *Don't raise shade any higher than it was intended to go. If shade doesn't raise evenly, in most cases lowering it completely will allow cords to re-align on the spool.*

CAUTION: *The shade will not operate properly unless the cord tensioner is secured. A cord tensioner installation kit has been included with your shade.*

CORDLESS LIFT SHADES

TO RAISE AND LOWER THE SHADE:

1. Hold the handle in the center portion of the bottomrail to ensure level movement.
2. Shades over 42" in width will have 2 handles evenly positioned within hands reach along the center portion of the bottomrail to ensure level movement.
3. Lower the shade by gently pulling downward to the desired position.
4. Raise the shade by gently pushing upward to the desired position

Adjusting the Shade




- Raise and lower the shade several times.
- If the length is incorrect or the bottom rail is not level, use the following steps to correct.

BOTTOMRAIL SHADE ADJUSTMENT


1. Lift bottomrail on the side to be adjusted. This will take the weight off the cord.
2. Use a screwdriver or dime.
 - Turn screw clockwise to lift that side of the shade.
 - Turn screw counter clockwise to lower that side of the shade.
 - Half a revolution is 1/4" adjustment (maximum adjustment is 1/2").

INTERMEDIATE RAIL SHADE ADJUSTMENT

1. Lift intermediate rail on side to be adjusted. This will take the weight off the cord.
2. Use a screwdriver or dime.
 - Turn screw clockwise to lift that side of the rail.
 - Turn screw counter clockwise to lower that side of the rail.
 - Half a revolution is 1/4" adjustment (maximum adjustment is 1/2").

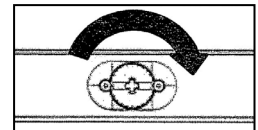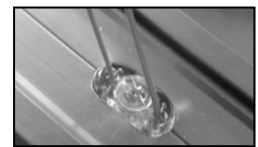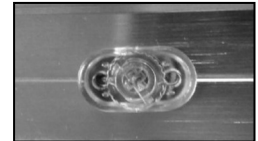

Lift Shade Side

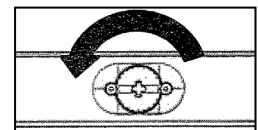

Lower Shade Side

TROUBLESHOOTING

THE SHADE WILL NOT SNAP INTO THE INSTALLATION BRACKETS.

- Check that the installation brackets are aligned and level.

THE SHADE IS HARD TO RAISE OR LOWER, OR WILL NOT RAISE OR LOWER.

- Shades cannot be forced into tight inside mount window openings. If an inside mount, check that the shade is installed correctly. Make sure there is clearance between the ends of the shade and the window casement.
- Check that the installation brackets are level. Shim to level, if necessary.
- If hold-down brackets are used, make sure they have been released.
- Make sure the fabric is not caught.

THE SHADE RAISES OR LOWERS UNEVENLY OR THE BOTTOM RAIL IS UNEVEN.

- Check that the window is square by measuring the diagonals.
- Check that the installation brackets are level. Shim to level, if necessary.
- Adjust the cords under the bottom rail (see “Adjusting The Shade” on page 6).

THE CORD TENSIONER GRABS ONTO THE CORD UPON OPERATION.

- Check that the cord tensioner is mounted properly. Reinstall, if necessary. Refer to the Universal Cord Tensioner Installation Instructions included with your cord loop shade.

IMPORTANT INFORMATION REGARDING CORDLESS SHADE OPERATION.

- Daily operation of shade will ensure that it performs at its optimal level.
- If the shade is in the lowered position for an extended period of time, extra care needs to be taken when raising the shade. The fabric will relax and may resist lifting. This is a natural occurrence with all fabric shades. When lifting, you may notice the billowing (falling out) toward you. This is temporary and can be corrected by slowly raising the shade completely and then operating several times. This allows the fabric to go back to its pleated state, and the shade will operate as designed.
- If shade has been in the fully raised position for an extended period of time, it may have a tendency to “spring back” above the desired length of the shade. This is temporary and can be corrected by completely raising the shade and operating several times.
- Operating the shade with the handle(s) provided is recommended so that the shade is balanced when raising and lowering.
- Motorized Shades – see Operating Instructions Guide included with shade/remote control.

CARE AND CLEANING

Honeycomb shades are made of an anti-static, dust resistant fabric which repels dirt and dust. For most of these fabrics, the following options are available if your shade needs cleaning.

DUSTING: Regular light dusting with a feather duster is all the cleaning that is needed in most circumstances.

VACUUMING: Use a hand-held vacuum with low suction for more thorough dust removal.

SPOT CLEANING: Use the following steps for spot cleaning: (1) Prepare a solution of warm water and mild dish-washing detergent. (2) Dampen a clean cloth in the solution and ring it out. (3) Dab the spot with the dampened cloth until it is gone. **DO NOT RUB THE FABRIC.** (4) Allow the shade to dry in the completely lowered position.

CAUTION: *Avoid creasing Blackout fabrics during cleaning.*

DEEP CLEANING: Use the following steps for deep cleaning: (1) Immerse shade in basin or bathtub filled with warm water and mild detergent. (2) Rinse with clean water. (3) Fully raise shade and tilt to eliminate excess water, (4) Reinstall damp shade, lower it, and let it dry completely.

CAUTION: *Do not immerse Blackout fabrics. Do not immerse the headrail or any fabric-wrapped rail.*

ULTRASONIC CLEANING: Standard shades, except those made with Blackout Lining can be ultrasonically cleaned by a professional.

- Specify that a mild detergent be used.
- Never immerse the headrail or any fabric-wrapped rail in the solution.
- Dry the shade completely in the lowered position.

CAUTION: *Do not ultrasonically clean Blackout fabrics. Do not immerse headrail.*

CHILD SAFETY

Young children can **STRANGLE** in cord loops and in the loop above the cord stop. They can also wrap cords around their necks and **STRANGLE**.

- Always keep cords out of children's reach.
- Move cribs, playpens and other furniture away from cords.
Children can climb furniture to get to cords.
- Do not tie cords together.
- Make sure cords do not twist together and create a loop.



Cord Loop and Beaded Chain Loop Shades

- Attach the tensioner to the wall or window casement. See installing the tensioner on page 4.
This can prevent children from pulling cord loops around their necks.
- A tensioner installation kit with instructions for attaching the tensioner is provided. For the shade to operate properly, the tensioner must be correctly mounted and secured. See tensioner instructions provided for details.
- Only the supplied tensioner(s) and hardware should be used.

SAFETY LABELS

In compliance with WCMA/ANSI safety standards the warning labels on the bottom rail are designed to be permanent. **DO NOT** remove the permanent warning label on the bottom rail. This assures that future owners of this product will be aware of potential dangers associated with this shade.

WARRANTY INFORMATION

Lifetime Limited Warranty covering our Custom Made Blinds

We extend this lifetime limited warranty to the original purchaser. This warranty applies only to manually operated Custom Products properly installed in the window, door or interior area for which they were intended. Installation of the product must be in accordance with accompanying instructions. The product cannot be modified. It is the purchaser's responsibility to maintain and clean the product in compliance with the instruction provided. The product must be used only in the window for which it was purchased. Damage to the product resulting from misuse, abuse, direct exposure to salty air or discoloration due to sunlight or the passage of time is not covered by this warranty.

This warranty does not apply to conditions caused by normal wear and tear upon the product. This warranty is exclusive and in lieu of all other obligations, liabilities or warranties. In no event shall the Manufacturer be liable for incidental or consequential damages or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you.

In the event of a defect under this warranty, we will repair or replace the product, at our option, provided it is returned to our store. Our warranty obligation excludes shipping charges and labor costs for measuring and installation. Repairs will be made with like or similar parts. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Notes: Motorization Systems are warranted for five years from the date of purchase. Specialty Blinds and Shades are warranted for one year from the date of purchase.

This warranty does not apply to Commercial Orders.



INSTALLATION INSTRUCTIONS

HONEYCOMB SHADES


Motorized Wand

Thank you for your purchase. This shade has been custom built for you from the highest quality materials. To avoid errors and save valuable time, please read these instructions before installing your new shade.



TOOLS YOU WILL NEED

1. Pencil or Marker
2. Measuring Tape
3. Phillips Screwdriver
4. Carpenter's Level
5. Power Drill
6. Mounting Fasteners

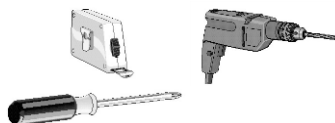


Mounting Surface	Fastener
Drywall, Plaster	Wall Anchors, Expansion Bolts (Not Provided) 
Metal	Sheet Metal Screws (Not Provided) 
Wood	No. 6 Hex Head Screws (Provided) 

GETTING STARTED

All the required installation components are wrapped in your package along with these instructions. Check that the parts you have correspond to the parts shown below. NOTE: Some parts may vary depending upon your mounting option.

 PARTS

- Installation Brackets 
- Spacer Blocks (optional) 
- Extension Bracket (optional) 
- Hold Down Brackets (optional) 
- Screws 

MOUNTING THE BRACKETS

The installation brackets may be used for **INSIDE** or **OUTSIDE** mounts.

Mounting the brackets level is essential for proper operation of the shade. Shim the brackets if necessary to achieve a level alignment.

The bracket requirements and placements are the same for inside and outside mounts. Refer to the following spacing diagram and bracket requirement chart.

Installation Bracket Requirement Chart

Shade Width	Brackets Required
up to 38"	2
38-1/8" to 72"	3
Over 72-1/8"	4


INSIDE MOUNTS:

For inside mounts the installation brackets will be screwed in place through the top two holes of each bracket.

Note: Prior to mounting the brackets, add any clearance depth required to avoid obstructions such as window cranks or handles.

ATTACH THE BRACKETS:

- Screw installation brackets through top two holes to desired window sill location.
- Ensure all brackets are level and aligned.

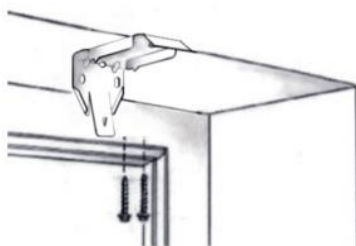


OUTSIDE MOUNTS:

For outside mounts the standard installation brackets will be screwed in place through the two back holes of each bracket. Refer to the minimum surface height chart below.

Minimum Height
1-1/2"


ATTACH THE BRACKETS:

- Screw standard brackets through two back holes to desired location.
- Ensure all brackets are level and aligned.

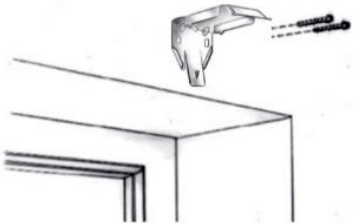

EXTENSION BRACKETS (optional):


- Position the extension brackets to the desired wall location.
- The bracket tops must be aligned and level to one another.
- Mount the extension brackets through the back holes with two screws.
- Attach installation brackets to extension brackets with included screws & nuts.

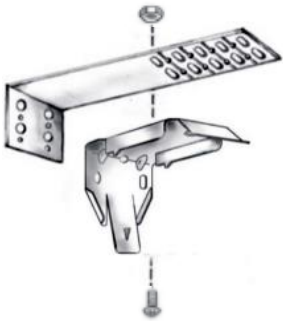


Note: Use the same holes for all brackets to ensure even projection from the surface.

ATTACH THE WAND


Remove the wand hanger from the headrail. Squeeze the bottom on both sides to release the lower legs (A). Lift up slightly and remove the hanger post from the top hole in the headrail.

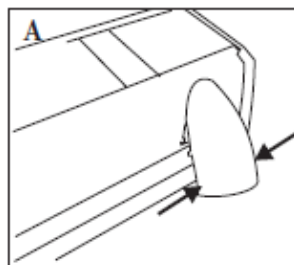


Insert the post on the hanger into the hole on the internal L hanger (B).

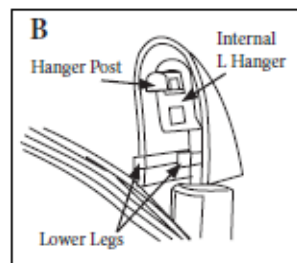

Insert the post into the top hole in the headrail first (C). Then, squeeze the bottom of the hanger on both sides so that the lower legs will fit into the hole in the headrail. Make sure that the wires are not in the way of the legs.

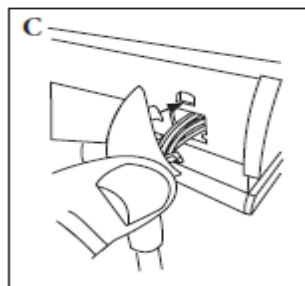

Plug the control wire into the wand wire (D). The plugs will only fit together one way.

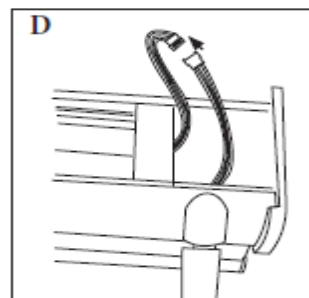


SHADE INSTALLATION


MOUNT THE HEADRAIL:

- With the front side of the shade facing you...
- Tilt the headrail slightly backward to angle the front inside lip to the brackets. (A)
- Push the headrail back and upward to snap in it into place (B).

Make sure that no fabric is pinched between the brackets and the headrail.

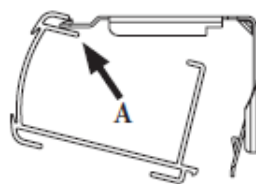

Push here upward and
toward the window.

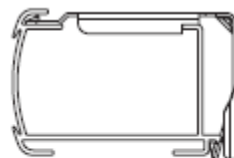


OPERATING THE SHADE

Press the **DOWN** or **UP** button to lower or raise the shade. Press the **STOP/FAVORITE** to stop the shade at the desired position.

Touch & Go Feature:

To fully raise or lower the shade, simply press the **UP** or **DOWN** button and then release. The shade will automatically stop when it reaches the upper or lower limit. *(If the upper or lower limits are not set at the desired positions, see the Adjust Motor Limits section on the next page)*

Note: Upper and lower limits stops are set at the factory. An intermediate or "favorite" position is not set at the factory. See "SETTING A FAVORITE POSITION" section for more information.

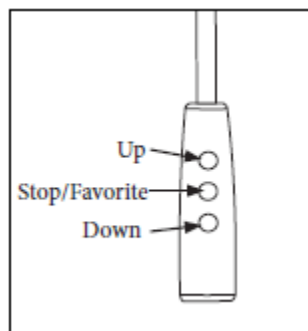



ADJUST MOTOR LIMITS (if desired)

The upper and lower limits have been set at the factory. If you need to make adjustments to the limits, follow the instructions below.

Press the **SETTING** button on the back of the wand and hold it in until the motor stops beeping. This will clear both the upper and lower factory limits as well as a favorite if one was set.

Set Upper Limit - Press the **UP** button to get the shade close to the desired upper limit and then press the **STOP** button to stop the shade. Tap the **UP** or **DOWN** button to move the shade to the desired position. To save the location, press the **SETTING** button until the motor beeps.

Set Lower Limit - Press the **DOWN** button to get the shade close to the desired lower limit and then press the **STOP** button to stop the shade. Tap the **UP** or **DOWN** button to move the shade to the desired position. To save the location, press the **SETTING** button until the motor beeps.

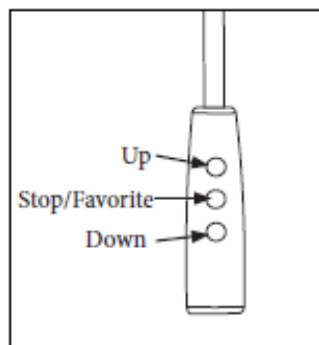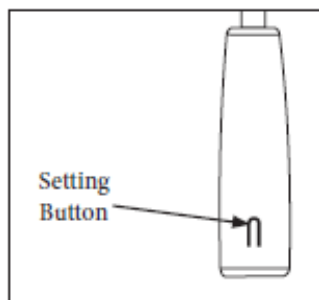


SETTING A FAVORITE POSITION

SETTING AND USING A FAVORITE POSITION

Use the **UP** or **DOWN** buttons to position the shade at the desired "favorite" position. First press and hold the **SETTING** button on the back of the wand. While holding the **SETTING** button press and hold the **UP** button. Release both buttons when the shade beeps.


With the shade at either the upper or lower limit, simply press the **STOP/FAVORITE** button to bring the shade to the "favorite" position. To go to the "favorite" position from any other location, make sure the shade has been stopped for at least three seconds before pressing the **STOP/FAVORITE** button.

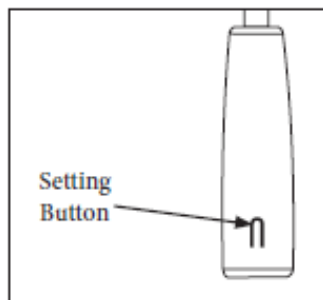

CHANGING A FAVORITE POSITION

Use the **UP** or **DOWN** buttons to position the shade at the desired "favorite" position. First press and hold the **SETTING** button on the back of the wand. While holding the **SETTING** button press and hold the **UP** button. Release both buttons when the shade beeps.

This establishes a new "favorite" position and erases the old.

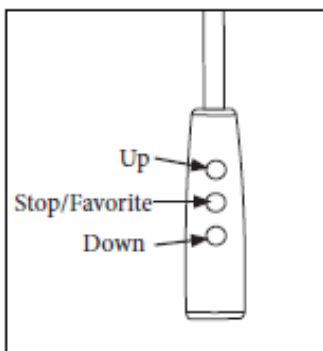

CHARGING THE MOTOR BATTERY

When the shade begins to operate slower than normal or only beeps when you attempt to operate, it is time to charge the battery.


Plug the 8.4v charger into the port on the wand.

Plug the charger into an electrical outlet.

A red light on the charger indicates that the battery is charging.

To fully charge the batteries, allow the batteries to charge for at least 1 hour after the light on the charger turns green.

A typical charge cycle can take between 4-6 hours.

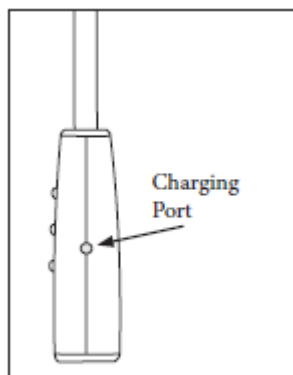


Charger

REMOVING THE SHADE

To remove a shade, insert a screwdriver between the head rail and the bottom back of the bracket (tab which extends out slightly from each bracket).

Gently pry the screwdriver to release the bracket from the headrail. Take care not to damage the painted finish of the headrail.

As you release the brackets, support the headrail to keep it from falling.

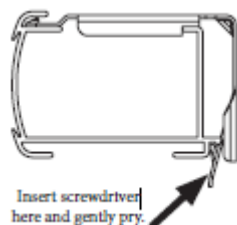

HOLD-DOWN BRACKETS (OPTIONAL)

- Lower the shade and place the hold down pins into the bottom rail end caps.
- Mark the hold down bracket locations on the mounting surface.
- With the brackets level, attach them using two screws.






ADJUSTING THE SHADE

- Raise and lower the shade several times.
- If the length is incorrect or the bottom rail is not level, use the following steps to correct.

BOTTOM RAIL SHADE ADJUSTMENT:

- Lift bottomrail on the side to be adjusted. This will take the weight off the cord.
- Use a screwdriver or dime.
 - Turn screw clockwise to lift that side of the shade
 - Turn screw counter clockwise to lower that side of the shade
 - Half a revolution is $\frac{1}{4}$ " adjustment (maximum adjustment is $\frac{1}{2}$ ")

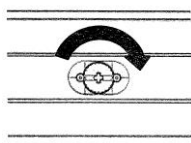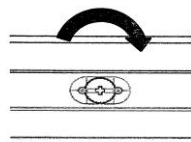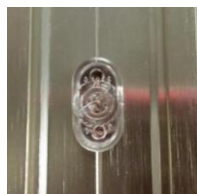

TROUBLESHOOTING

THE MOTOR DOES NOT WORK OR RUNS SLOWLY. Recharge battery.

THE SHADE MOVES THE OPPOSITE DIRECTION OF THE CONTROL BUTTONS.

Press and hold the SETTING button, then press and hold the STOP button. Hold both until the motor jogs (approx. 10 seconds).

CLEANING INSTRUCTIONS

Honeycomb shades are made of an anti-static, dust resistant fabric which repels dirt and dust. For most of these fabrics, the following options are available if your shade needs cleaning.

DUSTING: Regular light dusting with a feather duster is all the cleaning that is needed in most circumstances.

VACUUMING: Use a hand-held vacuum with low suction for more thorough dust removal.

SPOT CLEANING: Use the following steps for spot cleaning: (1) Prepare a solution of warm water and mild dishwashing detergent. (2) Dampen a clean cloth in the solution and ring it out. (3) Dab the spot with the dampened cloth until it is gone. **DO NOT RUB THE FABRIC.** (4) Allow the shade to dry in the completely lowered position.

CAUTION: Avoid creasing Blackout fabrics during cleaning.

DEEP CLEANING: Use the following steps for deep cleaning: (1) Immerse shade in basin or bathtub filled with warm water and mild detergent. (2) Rinse with clean water. (3) Fully raise shade and tilt to eliminate excess water, (4) Reinstall damp shade, lower it, and let it dry completely.

CAUTION: Do not immerse Blackout fabrics. Do not immerse the headrail, any fabric-wrapped rail, or the wand.

ULTRASONIC CLEANING: Standard shades, except those made with Blackout Lining can be ultrasonically cleaned by a professional.

- Specify that a mild detergent be used.
- Never immerse the headrail, any fabric-wrapped rail or the wand in the solution.
- Dry the shade completely in the lowered position.

CAUTION: Do not ultrasonically clean Blackout fabrics. Do not immerse headrail.

SAFETY NOTES

WARNING

CHILD SAFETY

**WARNING**

For more safety information call 1-888-501-8364
in the U.S. or 1-866-662-0666 in Canada.

Inner or exposed cords can pull out to form a loop, which can STRANGLE a young child.

- Children can climb furniture to access inner or exposed cords. Move cribs, playpens, and other furniture away from window coverings.
- Always keep cords out of the reach of children.



CANADIAN RESIDENTS ONLY:



For more safety information
call 1-866-662-0666 or go to
www.healthcanada.gc.ca/blindcords



WARRANTY INFORMATION

Lifetime Limited Warranty covering our Custom Made Shades

We extend this lifetime limited warranty to the original purchaser. This warranty applies only to manually operated Custom Products properly installed in the window, door or interior area for which they were intended. Installation of the product must be in accordance with accompanying instructions. The product cannot be modified. It is the purchaser's responsibility to maintain and clean the product in compliance with the instruction provided. The product must be used only in the window for which it was purchased. Damage to the product resulting from misuse, abuse, direct exposure to salty air or discoloration due to sunlight or the passage of time is not covered by this warranty.

This warranty does not apply to conditions caused by normal wear and tear upon the product. This warranty is exclusive and in lieu of all other obligations, liabilities or warranties. In no event shall the Manufacturer be liable for incidental or consequential damages or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you.

In the event of a defect under this warranty, we will repair or replace the product, at our option, provided it is returned to our store. Our warranty obligation excludes shipping charges and labor costs for measuring and installation. Repairs will be made with like or similar parts. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Notes: Motorization Systems are warranted for five years from the date of purchase. Specialty Blinds and Shades are warranted for one year from the date of purchase.

This warranty does not apply to Commercial Orders.



INSTALLATION INSTRUCTIONS


HONEYCOMB Shades

Motorization

Thank you for your purchase. This shade has been custom built for you from the highest quality materials. To avoid errors and save valuable time, please read these instructions before installing your new shades.

TOOLS YOU WILL NEED

1. Pencil or Marker
2. Measuring Tape
3. Phillips Screwdriver
4. Carpenter's Level
5. Power Drill
6. Mounting Fasteners

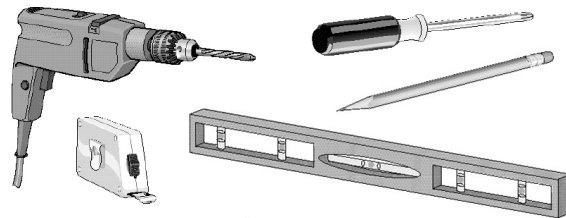

Mounting Surface	Fastener
Drywall, Plaster	Wall Anchors, Expansion Bolts (Not provided) 
Metal	Sheet Metal Screws (Not provided) 
Wood	No. 6 Hex Head Screws (Provided) 


TABLE OF CONTENTS

Getting Started	Page 2
Bracket Installation	Page 2
Inside Mount	Page 2
Outside Mount	Page 3
Shade Installation	Page 3
Removing the Shade	Page 3
Operation	Page 4
Hold Down Brackets (optional)	Page 4
Adjust Motor Limits on Primary Remote (if desired)	Page 5
Change Favorite Position (if one was set)	Page 5
Adjusting the Shade	Page 6
Charging the Motor	Page 6
Replacing the Battery in the Remote	Page 6
Solar Charge Unit (optional)	Page 7
Troubleshooting	Page 8
Care and Cleaning	Page 8
Child Safety	Page 8


GETTING STARTED

All the required installation components are wrapped in your package along with these instructions. Check that the parts you have correspond to the parts shown below.


Note: Some parts may vary depending upon your chosen shade system or mounting option.

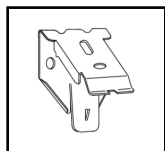


Installation Brackets

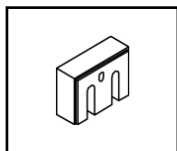

Spacer Blocks
(optional)

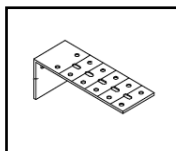

Extension Bracket
(optional)

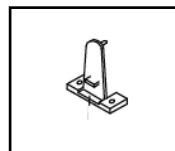

Hold Down Brackets
(optional)

Bracket Installation

Installation brackets may be used for **INSIDE** or **OUTSIDE** mounts.

Mounting the brackets level is essential for proper operation of the shade. Shim the brackets if necessary to achieve a level alignment.

The bracket requirements and placements are the same for inside and outside mounts. Refer to the following spacing diagram and bracket requirement chart.

Installation Bracket Requirement Chart	
Shade Width	Brackets Required
up to 38"	2
38-1/8" to 72"	3
over 72-1/8"	4

Inside Mount

For inside mounts the installation brackets will be screwed in place through the top two holes of each bracket. Refer to the mounting depth chart:


	Minimum Depth	Fully Recessed
Wall Mounted Wand	1/2"	2-1/4"
Headrail Mounted Wand	1-1/4"	3"

Note: Prior to mounting the brackets, add any clearance depth required to avoid obstructions such as window cranks or handles.

ATTACH THE BRACKETS:

1. Screw installation brackets through top two holes to desired window sill location.
 - Use a 3/32" drill bit to drill holes for the screws.
2. Ensure all brackets are level and aligned.

IMPORTANT: If you are fastening the installation brackets to drywall, be sure to use wall anchors and follow the instructions provided with the anchors. (Anchors not provided.)

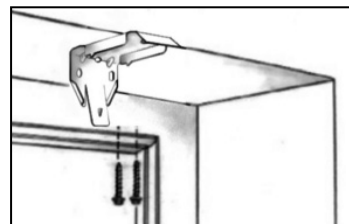

Outside Mount

For outside mounts the standard installation brackets will be screwed in place through the two back holes of each bracket. Refer to the minimum surface height chart:

Minimum Height
1-1/2"

ATTACH THE BRACKETS:



1. Screw standard brackets through two back holes to desired location.
 - Use a 3/32" drill bit to drill holes for the screws.
2. Ensure all brackets are level and aligned.

IMPORTANT: If you are fastening the installation brackets to drywall, be sure to use wall anchors and follow the instructions provided with the anchors. (Anchors not provided.)

EXTENSION BRACKETS (optional):

1. Position the extension brackets to the desired wall location.
2. The bracket tops must be aligned and level to one another.
3. Mount the extension brackets through the back holes with two screws.
4. Attach installation brackets to extension brackets with included screws & nuts.

Note: Use the same holes for all brackets to ensure even projection from the surface.

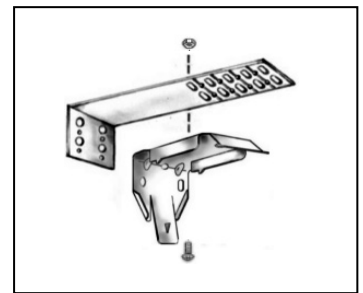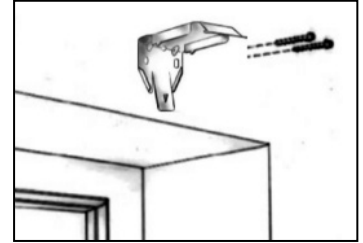

Shade Installation


NOTE: If the Channel "0" was selected when ordering, then the shade will not be linked to a remote. The shade will need to be linked to a remote prior to installing in the window. See "Linking A Remote" in the OPERATION section of this guide.

The receiver wire is a small gray wire that comes out of the side of the motor closest to the end cap. Before mounting the headrail, make sure that the receiver wire is out of the headrail. For optimal performance, position the receiver wire so it extends into the room. Position the motor wire so that it comes out the back side of the shade.

MOUNT THE HEADRAIL:

- With the front side of the shade facing you, Tilt the headrail slightly backward to angle the front inside lip to the brackets. (A)
- Push the headrail back and upward to snap in it into place (B).

Note: Make sure that no fabric is pinched between the brackets and the headrail.
Be sure the motor wire and charging port do not interfere with the bracket.

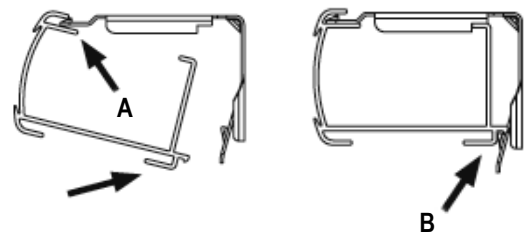


Removing the Shade

To remove a shade, insert a screwdriver between the headrail and the bottom back of the bracket (tab which extends out slightly from each bracket).

Gently pry the screwdriver to release the bracket from the headrail.
Take care not to damage the painted finish of the headrail.

As you release the brackets, support the headrail to keep it from falling.

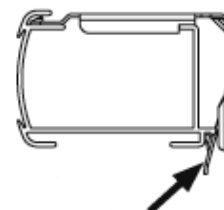

Operation


The factory has set your shade to the channel that was specified at the time of order. If no channel was specified, the shade was set to operate on channel 1. If channel 0 was specified, the remote and shade will not be linked. A remote needs to be linked to the shade to continue. This should be done prior to installing the shade in the window.

LINKING A REMOTE

Important: Please read through this section completely before beginning.

1. Select the channel that you want to link the shade to, using the **CHANNEL** selector buttons.
2. Press the **SETTING** button on the motor until the motor starts to beep. Release the button immediately after the beeps start. The motor will make 4 fast beeps followed by 5 long beeps. Press the **CONFIRM** button on the remote anytime during the series of long beeps. It must be pressed before the last long beep. The motor will respond with 3 fast beeps confirming that the shade has been linked.
3. Repeat step 2 for all shades that will be controlled by the same channel (It is not recommended to put more than one shade on a channel).
4. Repeat steps 1-3 to link remaining shades to the rest of the channels.

All shades linked to a remote will also automatically be programmed to the "ALL" channel.

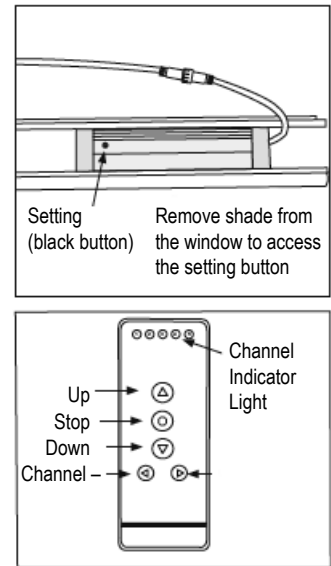

OPERATING THE SHADE

Select the desired channel with the **CHANNEL** buttons. The channel indicator light will illuminate the channel that is on. If all 5 lights are lit the remote will control all 5 channels at once.

- Tapping the **UP** or **DOWN** buttons for less than 2 seconds will move the shade in short steps. Holding the **UP** or **DOWN** buttons down for more than 2 seconds before releasing will operate the shade in the faster standard speed.
- Press the **UP** or **DOWN** buttons to raise or lower the shade.
- Press the **STOP** button to stop the shade anywhere along the travel.


SETTING AND USING A FAVORITE POSITION

Use the **UP** or **DOWN** buttons to position the shade at the desired "favorite" position.

First press and hold the **LIMIT** button on the back of the remote with a small screwdriver or tip of a pen.


While holding the **LIMIT** button press and hold the **UP** button. Release both buttons when the motor beeps.

With the shade at either the upper or lower limit, simply press the **STOP** button to bring the shade to the "favorite" position. To go to the "favorite" position from any other location, make sure the shade has been stopped for at least three seconds before pressing the **STOP** button.

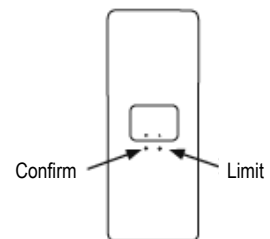

Hold-Down Brackets (optional)

- Lower the shade and place the hold down pins into the bottomrail end caps.
- Mark the hold down bracket locations on the mounting surface.
- With the brackets level, attach them using two screws.

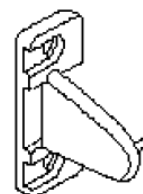


Adjust Motor Limits on Primary Remote (if desired)

The lower and upper limits have been set at the factory. If you need to make adjustments to the limits, follow the instructions below.

Note: When clearing the factory set limits, both the upper and lower limits will need to be reset.

Use the **CHANNEL** button to select the channel for the shade that needs to be adjusted.

Then follow the directions below. If only adjusting one shade on a channel, unplug the other shades.

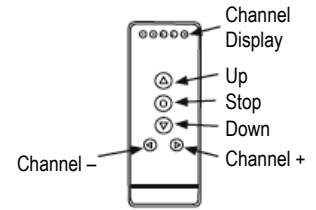

SET LOWER LIMIT

	Operation	Result
1	Hold LIMIT button down	The motor begins to beep
2	Release the button after beeping starts	The motor is ready for limit setting
3	Press DOWN button	The motor will go down continuously
4	When the motor is close to the desired lower limit, press STOP button on the remote	The motor stops running
5	Press either the UP or DOWN button	The motor runs step by step to adjust lower limit accurately
6	Confirm the setting by pressing the CONFIRM button on the remote	The motor will beep and the lower setting is completed

SET UPPER LIMIT

	Operation	Result
1	Press UP button on the remote transmitter	The motor will go up continuously
2	When the motor is close to the desired upper limit, press STOP button on the remote	The motor stops running
3	Press either the UP or DOWN button	The motor runs step by step to adjust upper limit accurately
4	Confirm the setting by pressing the CONFIRM button on the remote	The motor will beep and the upper setting is completed

Change Favorite Position (if one was set)

Use the **UP** or **DOWN** buttons to position the shade at the desired “favorite” position. First press and hold the **LIMIT** button on the back of the remote with a small screwdriver or tip of a pen. While holding the **LIMIT** button press and hold the **UP** button. Release both buttons when the motor beeps.




To erase the “favorite” position bring the shade to the **upper** limit. Press and hold the **LIMIT** button on the back of the remote, then press and hold the **UP** button. Release both buttons when the motor beeps.

Adjusting the Shade


- Raise and lower the shade several times.
- If the length is incorrect or the bottom rail is not level, use the following steps to correct.

BOTTOMRAIL SHADE ADJUSTMENT

1. Lift bottomrail on the side to be adjusted. This will take the weight off the cord.
2. Use a screwdriver or dime.
 - Turn screw clockwise to lift that side of the shade.
 - Turn screw counter clockwise to lower that side of the shade.
 - Half a revolution is 1/4" adjustment (maximum adjustment is 1/2").

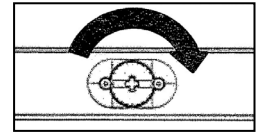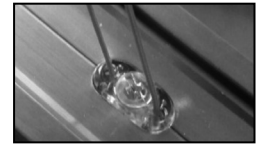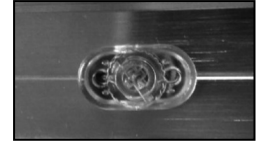

Lift Shade Side

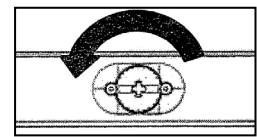

Lower Shade Side

Charging the Motor

When the shade begins to operate slower than normal it is time to charge the motor.


Plug the 8.4v charger into the charging wire. The charging wire is attached to the back of the headrail at the left end.

Plug the charger into an electrical outlet.

A red light on the charger indicates that the motor is charging.

To fully charge the batteries, allow the batteries to charge for 1 hour after the light on the charger turns green.


A typical charge cycle can take between 4-6 hours.

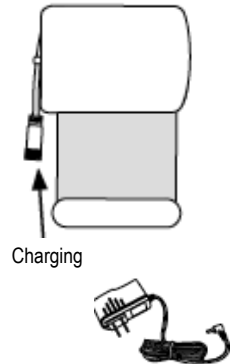

Replacing the Battery in the Remote

Remove the battery tray from the remote by inserting a fingernail into the indentation on the back of the remote. To avoid the battery falling out of the remote, remove the tray while the remote is face up.

Insert the new battery (CR2430 lithium) into the battery tray so that the writing is facing up when the remote is face up. Slide the tray back into the remote.

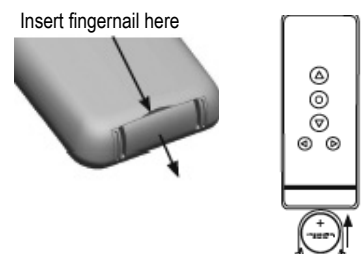

TROUBLESHOOTING

THE MOTOR DOES NOT WORK.

- Check that the power source and motor are connected properly.
- Check that the rechargeable battery pack is connected properly and charged.

THE MOTOR CONTINUES TO RUN IN ONE DIRECTION.

- The limit setting was unsuccessful and needs to be reset.

THE INDICATOR LIGHT ON THE REMOTE DOES NOT SHINE OR THE REMOTE-CONTROL RANGE BECOMES SHORTER.

- Recharge the battery in the remote (CR2430 lithium).

CARE AND CLEANING

Honeycomb shades are made of an anti-static, dust resistant fabric which repels dirt and dust. For most of these fabrics, the following options are available if your shade needs cleaning.

DUSTING: Regular light dusting with a feather duster is all the cleaning that is needed in most circumstances.

VACUUMING: Use a hand-held vacuum with low suction for more thorough dust removal.

SPOT CLEANING: Use the following steps for spot cleaning: (1) Prepare a solution of warm water and mild dish-washing detergent. (2) Dampen a clean cloth in the solution and ring it out. (3) Dab the spot with the dampened cloth until it is gone. **DO NOT RUB THE FABRIC.** (4) Allow the shade to dry in the completely lowered position.

CAUTION: *Avoid creasing Blackout fabrics during cleaning.*

DEEP CLEANING: Use the following steps for deep cleaning: (1) Immerse shade in basin or bathtub filled with warm water and mild detergent. (2) Rinse with clean water. (3) Fully raise shade and tilt to eliminate excess water, (4) Reinstall damp shade, lower it, and let it dry completely.

CAUTION: *Do not immerse Blackout fabrics. Do not immerse the headrail or any fabric-wrapped rail.*

ULTRASONIC CLEANING: Standard shades, except those made with Blackout Lining can be ultrasonically cleaned by a professional.

- Specify that a mild detergent be used.
- Never immerse the headrail or any fabric-wrapped rail in the solution.
- Dry the shade completely in the lowered position.

CAUTION: *Do not ultrasonically clean Blackout fabrics. Do not immerse headrail.*

CHILD SAFETY

Young children can **STRANGLE** in cord loops and in the loop above the cord stop. They can also wrap cords around their necks and **STRANGLE**.

- Always keep cords out of children's reach.
- Move cribs, playpens and other furniture away from cords.
Children can climb furniture to get to cords.
- Do not tie cords together.
- Make sure cords do not twist together and create a loop.



SAFETY LABELS

In compliance with WCMA/ANSI safety standards the warning labels on the bottom rail are designed to be permanent. **DO NOT** remove the permanent warning label on the bottom rail. This assures that future owners of this product will be aware of potential dangers associated with this shade.



INSTALLATION INSTRUCTIONS



NO TOOLS MOUNTING SYSTEM

Honeycomb Shades

NOTE: The No Tools Mounting System will come with the shade installation brackets already attached. No drilling is necessary to install this shade. A Flat head screwdriver is needed to remove the No Tools Mounting System.

1. Install the No Tools Mounting System


Make sure mounting surface is level

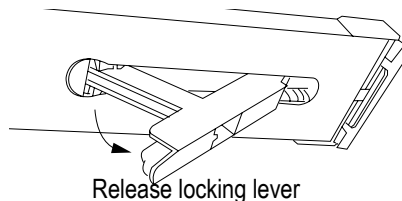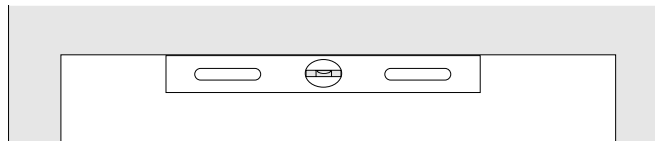


1a. Install the No Tools Mounting System - Placement and Width Adjustment

IMPORTANT If mounting on a smooth surface such as painted aluminum or tile you must apply the double sided adhesive (included) to the end caps to keep the mounting system secure. Remove release liner from one side of the adhesive and apply to both end caps and press firmly to adhere.


①

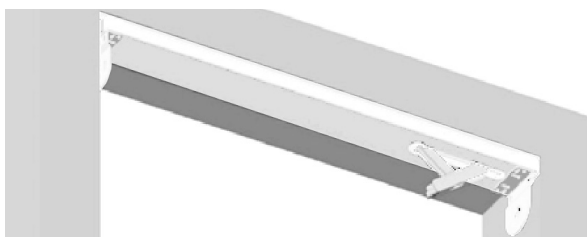

②

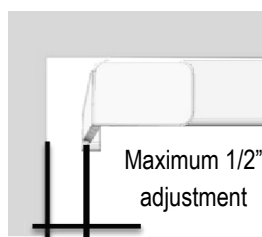


Maximum 1/2"
adjustment

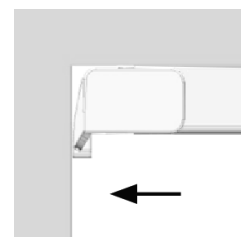

(1) Place the No Tools Mounting System in the window opening so that the end with the lever is up tight against the window casing. (2) If there is a gap at the non-lever end of the rail, simply slide the end cap until it touches the window casing. See END CAP ADJUSTMENT on page 2 if you accidentally pull the end cap out too far. If mounting on a smooth surface, remove the release liners from the double sided adhesive on the endcaps. Replace mounting system.

1b. Install the No Tools Mounting System - Lock in Place

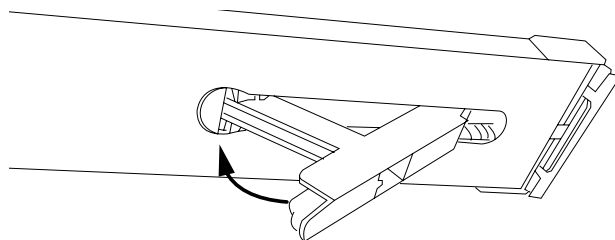

Make sure that the mounting system is level. Press up on the lever to lock the mounting system in place.


2. Install the Shade

Follow the instruction in the installation booklet that came with your shade to install the shade into the mounting brackets on the No Tools Mounting System.

3. Remove the No Tools Mounting System


IMPORTANT First, remove the shade from the No Tools mounting system following the instructions in the installation booklet that came with your shade. Hold the mounting system securely with one hand. Use a flat head screwdriver to pry open the locking lever.

CAUTION: Lever will release abruptly. Keep hand clear of lever.

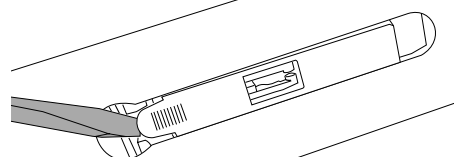


INSTALLATION INSTRUCTIONS

4. Adjusting Moveable End Cap

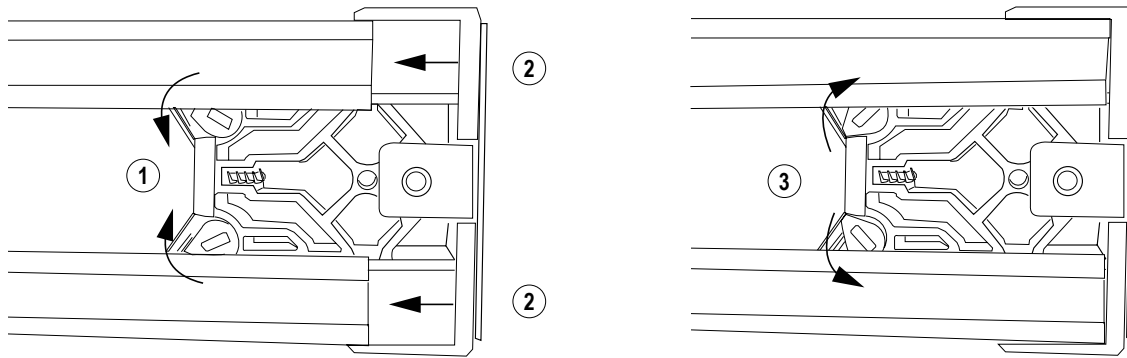

The moveable end cap is designed to only pull out with out tools. If for some reason the end cap needs to be compressed you will need a small flat head screw driver. (1) Use the screw driver to turn the locking tab release screws as shown. (2) Push the End Cap in. (3) Return the locking tabs to their original position.

Child Safety

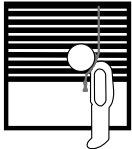⚠ WARNING/ADVERTENCIA	
5.1.3	Rev. 5/18 Print 5/18
	Window Blind Cord Can STRANGLE Your Child. To prevent strangulation, purchase cordless products or products with inaccessible cords. La cuerda de la persiana puede ESTRANGULAR a su niño. Para evitar el estrangulamiento, compre alternativas cuerda o productos con cuerdas inaccesibles.

