


Fitting the brackets


1

The brackets offer two methods of installation:

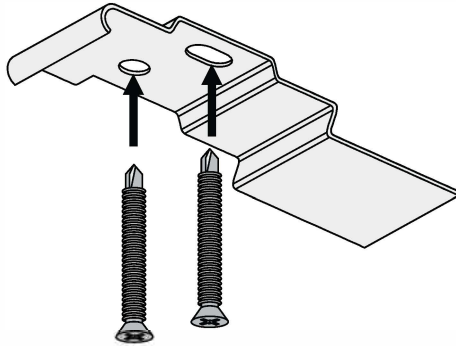

Top-Fixing

Use the front two holes in the top of the bracket to fix to the lintel (the 'ceiling' of the recess).

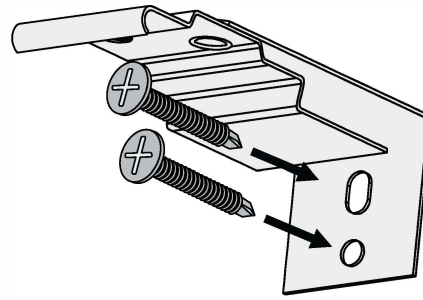

Face-Fixing

Use two screws through the back plate to mount onto a facing surface (a wall or window frame)

 


Note that the position of the outermost brackets should be at least 5cm away from the ends of the rail, with any other brackets evenly distributed across the width.


Fitting the shade

2

Top-Fixing




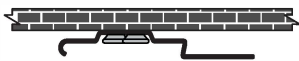


Bracket
(side-on)


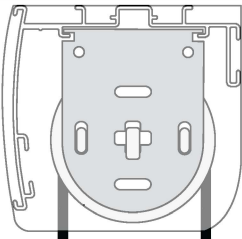


Shade
(side-on)

Face-Fixing

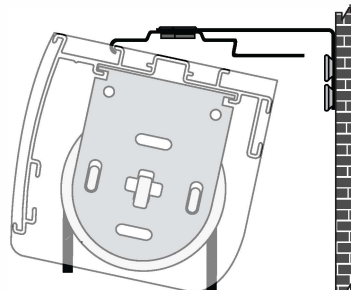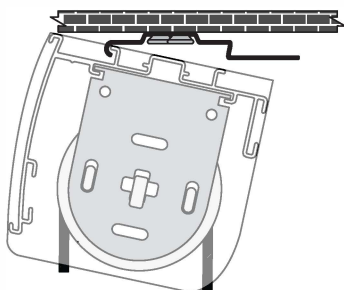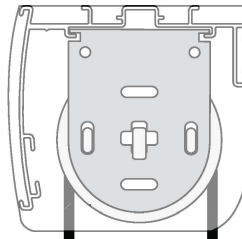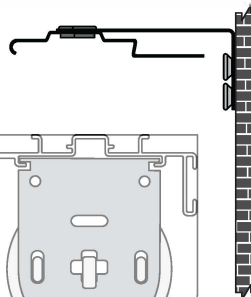

Holding the rail at an angle, situate the T-shaped lip on the top of the cassette into the front lip of the bracket.

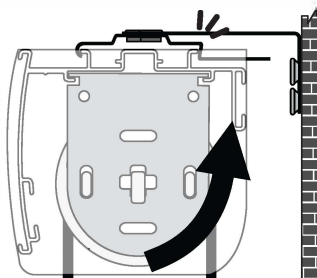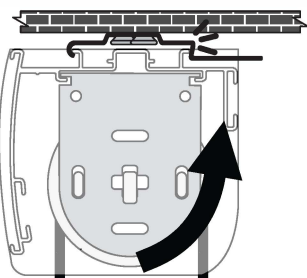

Twist the back of the cassette upwards until it snaps into place against the back lip of the bracket.

Chain Tensioner

Child Safety

Shades with clutch controls come with a continuous chain loop, which should always be screwed to the wall with the included chain tensioner.

The chain tensioner should be installed to a flat surface, so the bead chain is taut but not stretched. Be sure not to twist or cross the chain.

On inside mount shades, the tensioner may be attached to the windowsill or to the inside of the window frame. For outside mount or wall mount shades, the bracket may be mounted to the exterior of the window frame or the wall.

With a pencil, mark the desired location of the screw holes for the tensioner and then drill pilot holes. Then install the tensioner with the screws, making sure that the tensioner is fully installed, so that the spring is pushed in and the chain passes smoothly through the guide.



The chain tensioner forms an important safety function by keeping chain loops away from small children. Never operate this shade without a functioning and correctly installed chain tensioner.

Please retain these instructions for the future reference.

Thank you for purchasing this product. Please read the instructions and warning carefully before installation to ensure safe and satisfactory use of this product.

Installation Guide

No-Drill Blinds Headrail




The difficulty level of this installation is ranked at **Level 1**. *A piece of cake!*

If you have questions or get stuck, call our Customer Care Team at 888-257-1840, or email customer care@selectblinds.com

Remove the No-Drill Blinds Headrail

The No-Drill Blinds Headrail will already be installed onto the existing product headrail.

Remove the product from the headrail (See Fig A), which will vary from product and depend on lift type.

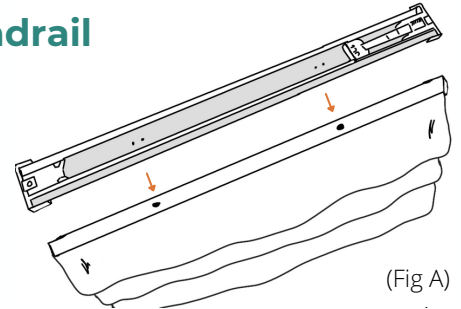


(Fig A)

1. Preparing the No Drill Blinds Headrail

Pull the lever from below or push down on the mechanism from above to retract the tension boot (See Fig B).


Install the metal strips or padded adhesive tape on opposite sides of the window opening where you'll be installing the No-Drill Blinds Headrail. This is optional and only available on larger products.

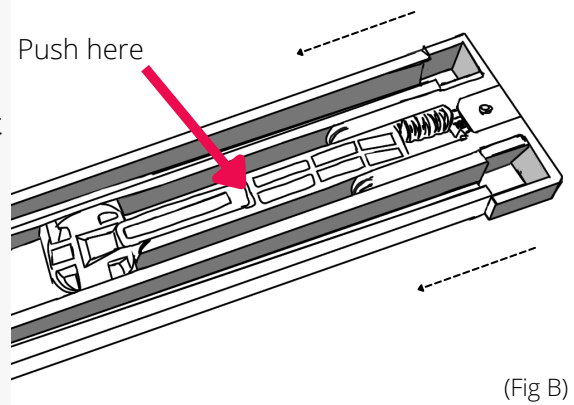

(Fig B)

2. Installing the No Drill Blinds Headrail


Insert the No-Drill Blinds Headrail into the window opening, make it flush with the top of the window opening, then push on the lever to extend the tension spring and secure the No-Drill Blinds Headrail. (See Fig C)

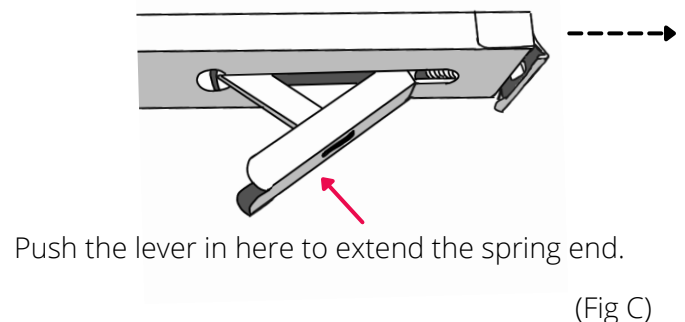

(Fig C)

3. Installing the Product

Install the product onto the brackets (See Fig D). Test and operate the product to ensure secure installation and smooth functionality.

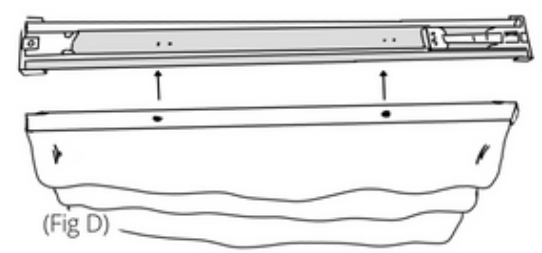


(Fig D)

Uninstalling the No Drill Blinds Headrail


To uninstall the product, follow step 1 by removing the product from the headrail and use a screwdriver to unlatch the lever.

Make sure to hold the No Drill Blinds Headrail in place while unlatching the lever. This will prevent damage to the window or headrail.

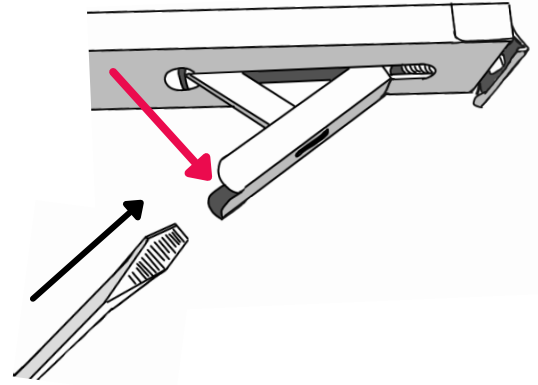

Tech Tip

If the fixed boot end was accidentally forced out, use a flathead screwdriver to twist the red "droplets" towards the center and then push it back in.

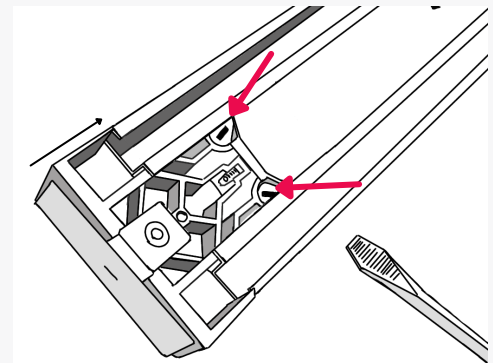

AUTO DOWN ZEBRA SHADES


LIFT SYSTEMS: CORDLESS LIFT



The difficulty level of this installation is ranked at **Level 1 - A piece of cake!**

If you have questions or get stuck, call our Customer Care Team at 888-257-1840, or email customer care@selectblinds.com

HARDWARE AND PARTS INCLUDED

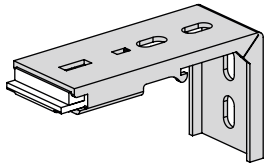

BRACKETS



SCREWS

*The quantity of brackets you receive will depend on the width of your headrail

TOOLS REQUIRED



PENCIL



TAPE MEASURE



POWER DRILL



STEP LADDER



LEVEL



5/64" DRILL BIT




PHILLIPS BIT



1/4" NUT DRIVER BIT


1. MOUNTING THE BRACKETS

NOTE: The zebra shade tube is pre-installed in the exposed roll headrail, which simply snaps onto the provided hardware. You will receive two or more headrail brackets, depending on the width of your shade.

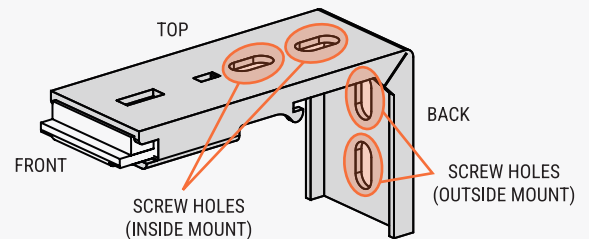


INSIDE MOUNT


1. At the top corners of the window, measure inward and mark with your pencil **2" - 4"** from each side. If you have additional brackets, make an additional mark for each one, evenly spaced between the outer marks.

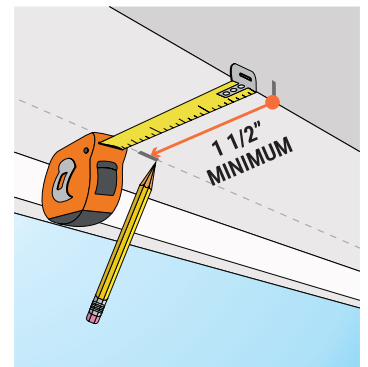

2. Next, you'll need to measure how deep to place your brackets in the window. Starting at one of your marks, measure back at least **1 1/2"**, and make a mark with your pencil. If you want the front of the cassette to be flush with the wall, measure back **4"** and make a mark. Repeat this step until you've marked the same depth measurement for each bracket.

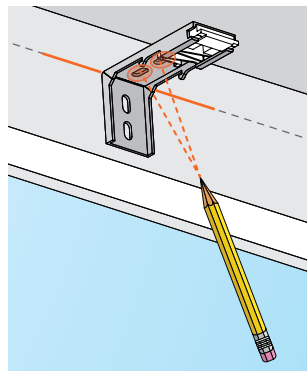

3. Hold each bracket up to the ceiling or window frame so back edge of the top of the bracket lines up with your mark. Mark through the top hole in the bracket with your pencil. This is where your screws will go. Repeat this step until you've marked the screw holes for each bracket.

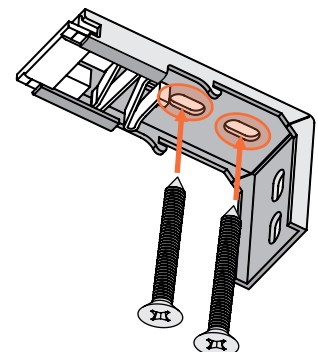


4. Pre-drill the screw holes with a 5/64" drill bit at your marks for each bracket location. Before you mount the brackets, you may want to erase any pencil marks that remain on the wall or window.


5. Line up your first bracket with the screw holes, and insert a screw to secure the bracket to the mounting surface. Repeat this step for any remaining brackets. When all brackets are secure, you're ready to mount the shade into the window.

OUTSIDE MOUNT


1. At the top corners of the window, measure inward and mark with your pencil 2" - 4" from each side. If you have additional brackets, make an additional mark for each one, evenly spaced between the outer marks.

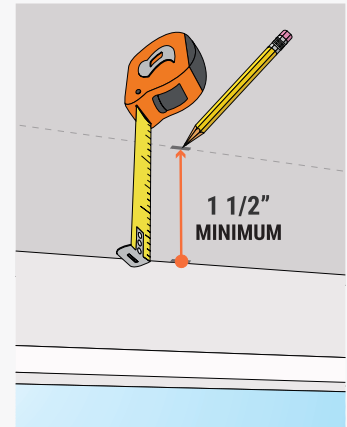

2. Next, you'll need to measure how deep to place your brackets in the window. Starting at one of your marks, measure back at least 1 1/2", and make a mark with your pencil. If you want the front of the cassette to be flush with the wall, measure back 3" and make a mark. Repeat this step until you've marked the same depth measurement for each bracket.

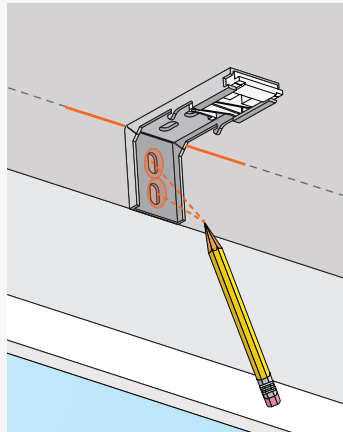

3. Hold each bracket up to the ceiling or window frame so back edge of the top of the bracket lines up with your mark. Mark through the top hole in the bracket with your pencil. This is where your screws will go. Repeat this step until you've marked the screw holes for each bracket.

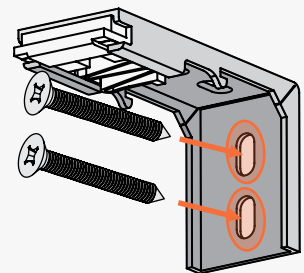

4. Pre-drill the screw holes with a 5/64" drill bit at your marks for each bracket location. Before you mount the brackets, you may want to erase any pencil marks that remain on the wall or window.

5. Line up your first bracket with the screw holes, and insert a screw to secure the bracket to the mounting surface. Repeat this step for any remaining brackets. When all brackets are secure, you're ready to mount the shade into the window.

2. ATTACHING THE SHADE


NOTE: Before you attach the shade to the brackets, check that your brackets are straight and aligned with each other. The screw holes on all brackets are elongated, so making small adjustments is easy.

Inside Mount: Use a tape measure to check that each bracket is set to the same depth. If you need to make adjustments, slightly loosen the screws on a bracket and shift it back or forward. Secure the screws when the position is corrected.

Outside Mount: Use a tape measure to check that each bracket is set to the same height, and use a level on top of each bracket to make sure they're all straight and aligned. If you need to make adjustments, slightly loosen the screws on a bracket and shift it until it's level and set to the correct height.

1. Grab the headrail and hold it up to your brackets. Set the front edge of the headrail onto the front hook of each bracket. While in this position, you can slide the shade left or right until the headrail is centered.

2. When you're ready to secure the headrail, push the headrail backward, raise the back of the headrail and push upwards until the back hook of each bracket snaps onto the back edge of the headrail. You will hear a loud click when each bracket is securely in place.

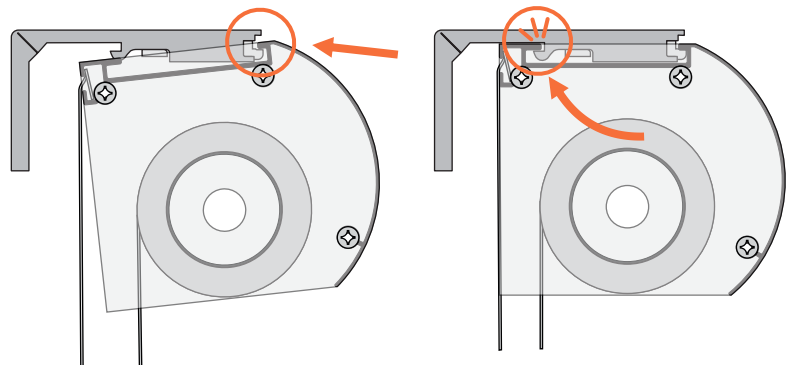


3. ADDITIONAL INSTRUCTIONS

ATTACH THE WAND

NOTE: The wand must be securely attached to the shade for proper operation. If the wand is not properly secured, it will come loose after repeated use.


1. Hold the thread connector at the top right or left near the headrail endcap and insert the wand into the thread connector.
2. Firmly rotate the wand until it stops moving. This ensures the wand is securely attached.

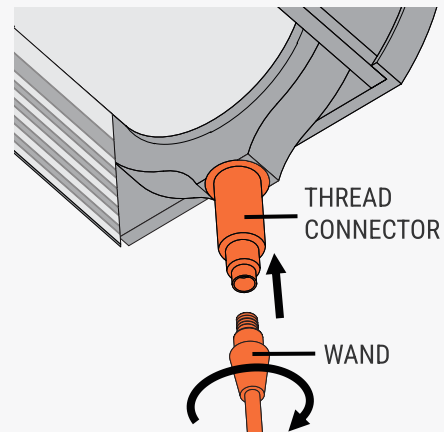

HOW TO OPERATE

NOTE: Do not pull on the side of the shade fabric; this can cause the fabric to misalign or become dirty. This cordless zebra shade should be operated by pulling the wand handle.

1. To lower the shade, grip the wand handle and GENTLY tug down to release the lock mechanism, the shade will automatically go down to the bottom limit, pull the wand handle down again if need to stop the shade.
2. To raise the shade, grip the wand handle and pull it straight down to move the shade to the desired position.

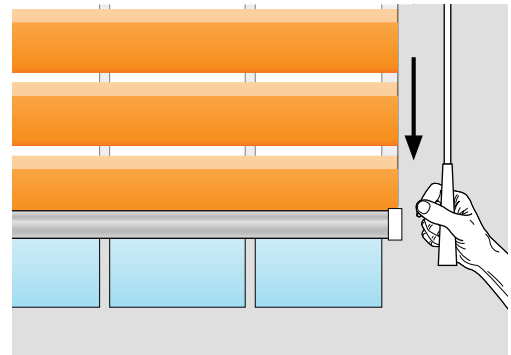

CLEANING INSTRUCTIONS

NOTE: All fabrics are different and some may be easier to clean than others. We recommend cleaning your shades as often as once a month. Here are some general guidelines on how to do so:

1. For regular maintenance, use a duster or a vacuum with a brush attachment and run it over the front and back of the shade.
2. To spot clean stains, use a damp rag with a very mild, gentle detergent or soap. Dab at the affected spots; do **NOT** rub! Let the dampened area air-dry and repeat as necessary.

 
WARRANTY AND REPLACEMENT

To learn more about our product warranties, please visit: <https://www.selectblinds.com/warranty.html>

For replacement parts, and/or to file a warranty claim for a product that is damaged, defective, or missing parts, please call our Customer Care Team at 888-257-1840, or email customercare@selectblinds.com.

CHILD SAFETY WARNING

⚠ WARNING

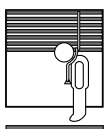

Cord window blinds and shades can be a strangulation risk or cause serious injury to young children and pets. When using corded window treatments, use the following tips to keep them safe:

- Move furniture that children can climb on away from the window.
- **NEVER** place a crib by a window!
- Keep cords up and away from your child's reach.
- Always use cord cleats with corded products.
- Secure child-safe tensioners for continuous cord loop chains to the wall or window encasement.

PREMIUM CORDLESS ZEBRA SHADES


LIFT SYSTEMS: CORDLESS LIFT



The difficulty level of this installation is ranked at **Level 1 - A piece of cake!**

If you have questions or get stuck, call our Customer Care Team at 888-257-1840, or email customer care@selectblinds.com

HARDWARE AND PARTS INCLUDED

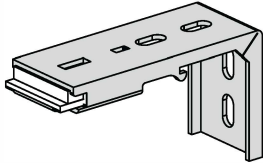

BRACKETS



SCREWS

*The quantity of brackets you receive will depend on the width of your headrail

TOOLS REQUIRED



PENCIL



TAPE MEASURE



POWER DRILL



STEP LADDER



LEVEL




5/64" DRILL BIT



PHILLIPS BIT



1. MOUNTING THE BRACKETS

NOTE: The zebra shade tube is pre-installed in the exposed roll headrail, which simply snaps onto the provided hardware. You will receive two or more headrail brackets, depending on the width of your shade.

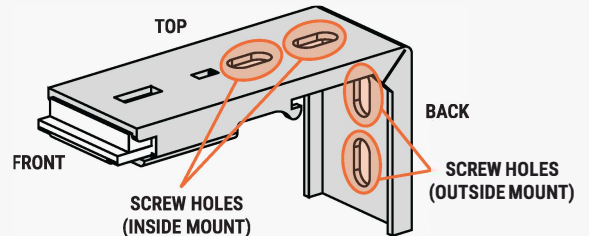


INSIDE MOUNT


1. At the top corners of the window, measure inward and mark with your pencil **2" - 4"** from each side. If you have additional brackets, make an additional mark for each one, evenly spaced between the outer marks.

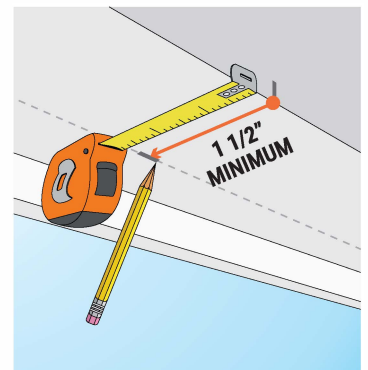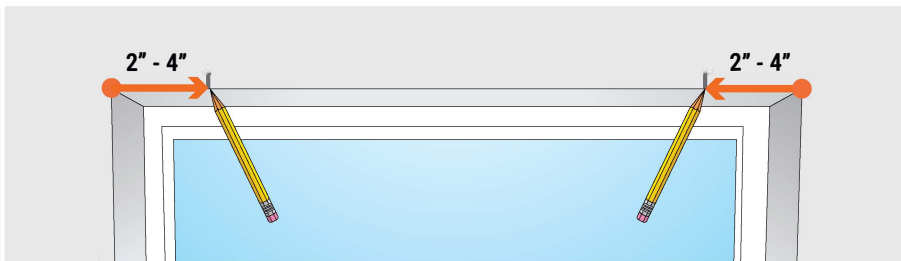

2. Next, you'll need to measure how deep to place your brackets in the window. Starting at one of your marks, measure back at least **1 1/2"**, and make a mark with your pencil. If you want the front of the cassette to be flush with the wall, measure back **4"** and make a mark. Repeat this step until you've marked the same depth measurement for each bracket.

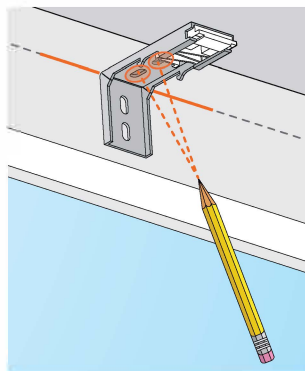

3. Hold each bracket up to the ceiling or window frame so back edge of the top of the bracket lines up with your mark. Mark through the top hole in the bracket with your pencil. This is where your screws will go. Repeat this step until you've marked the screw holes for each bracket.

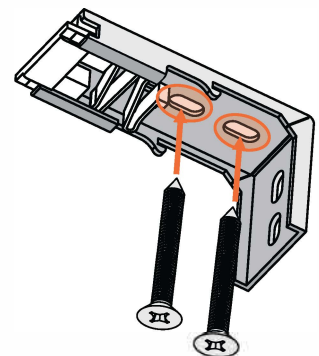


4. Pre-drill the screw holes with a 5/64" drill bit at your marks for each bracket location. Before you mount the brackets, you may want to erase any pencil marks that remain on the wall or window.


5. Line up your first bracket with the screw holes, and insert a screw to secure the bracket to the mounting surface. Repeat this step for any remaining brackets. When all brackets are secure, you're ready to mount the shade into the window.

OUTSIDE MOUNT


1. At the top corners of the window, measure inward and mark with your pencil **2" - 4"** from each side. If you have additional brackets, make an additional mark for each one, evenly spaced between the outer marks.

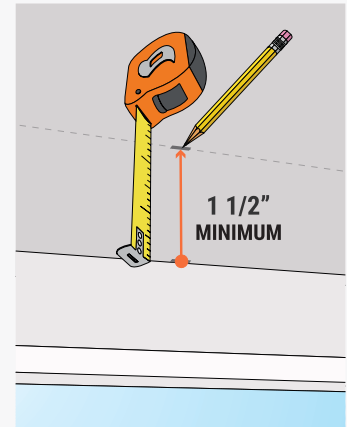

2. Next, you'll need to measure how deep to place your brackets in the window. Starting at one of your marks, measure back at least **1 1/2"**, and make a mark with your pencil. If you want the front of the cassette to be flush with the wall, measure back **3"** and make a mark. Repeat this step until you've marked the same depth measurement for each bracket.

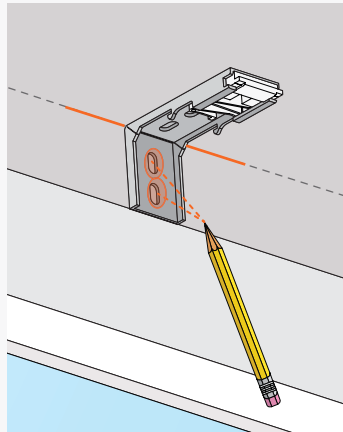

3. Hold each bracket up to the ceiling or window frame so back edge of the top of the bracket lines up with your mark. Mark through the top hole in the bracket with your pencil. This is where your screws will go. Repeat this step until you've marked the screw holes for each bracket.

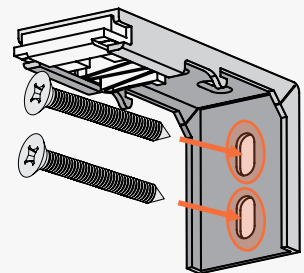

4. Pre-drill the screw holes with a 5/64" drill bit at your marks for each bracket location. Before you mount the brackets, you may want to erase any pencil marks that remain on the wall or window.

5. Line up your first bracket with the screw holes, and insert a screw to secure the bracket to the mounting surface. Repeat this step for any remaining brackets. When all brackets are secure, you're ready to mount the shade into the window.

2. ATTACHING THE SHADE


NOTE: Before you attach the shade to the brackets, check that your brackets are straight and aligned with each other. The screw holes on all brackets are elongated, so making small adjustments is easy.

Inside Mount: Use a tape measure to check that each bracket is set to the same depth. If you need to make adjustments, slightly loosen the screws on a bracket and shift it back or forward. Secure the screws when the position is corrected.

Outside Mount: Use a tape measure to check that each bracket is set to the same height, and use a level on top of each bracket to make sure they're all straight and aligned. If you need to make adjustments, slightly loosen the screws on a bracket and shift it until it's level and set to the correct height.

1. Grab the headrail and hold it up to your brackets. Set the front edge of the headrail onto the front hook of each bracket. While in this position, you can slide the shade left or right until the headrail is centered.

2. When you're ready to secure the headrail, push the headrail backward, raise the back of the headrail and push upwards until the back hook of each bracket snaps onto the back edge of the headrail. You will hear a loud click when each bracket is securely in place.

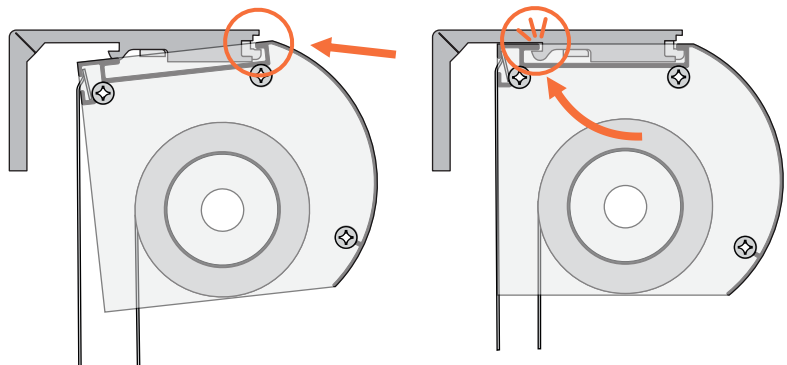


3. ADDITIONAL INSTRUCTIONS

HOW TO OPERATE

NOTE: Do not pull on the side of the shade fabric; this can cause the fabric to misalign or become dirty. We recommend using two hands when lifting or lowering the shade.

1. To lower the shade: Hold the bottom bar, gently pull it straight down, and release when the shade reaches your desired position.
2. To raise the shade: Hold the bottom bar, gently lift it straight up, and release when the shade reaches your desired position.

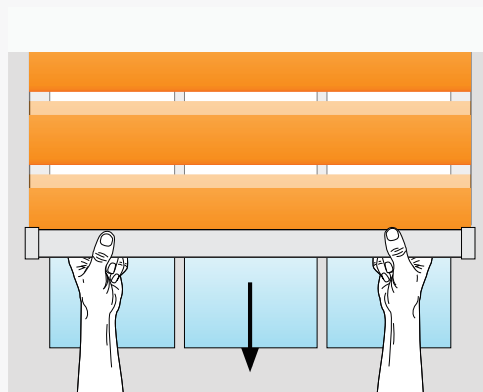

CLEANING INSTRUCTIONS

NOTE: All fabrics are different and some may be easier to clean than others. We recommend cleaning your shades as often as once a month. Here are some general guidelines on how to do so:

1. For regular maintenance, use a duster or a vacuum with a brush attachment and run it over the front and back of the shade.
2. To spot clean stains, use a damp rag with a very mild, gentle detergent or soap. Dab at the affected spots; do **NOT** rub! Let the dampened area air-dry and repeat as necessary.

 
WARRANTY AND REPLACEMENT

To learn more about our product warranties, please visit: <https://www.selectblinds.com/warranty.html>

For replacement parts, and/or to file a warranty claim for a product that is damaged, defective, or missing parts, please call our Customer Care Team at 888-257-1840, or email customercare@selectblinds.com.

CHILD SAFETY WARNING

⚠ WARNING

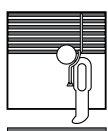

Corded window blinds and shades can be a strangulation risk or cause serious injury to young children and pets. When using corded window treatments, use the following tips to keep them safe:

- Move furniture that children can climb on away from the window.
- **NEVER** place a crib by a window!
- Keep cords up and away from your child's reach.
- Always use cord cleats with corded products.
- Secure child-safe tensioners for continuous cord loop chains to the wall or window encasement.

4. INSTALLING NO-DRILL BLINDS HEADRAIL


NOTE: The No-drill Blinds will already be installed onto the existing product headrail. Remove the product from the headrail before installing the shade.

PREPARING THE NO DRILL BLINDS HEADRAIL

1. Pull the lever from below or push down on the mechanism from above to retract the tension block.
2. Install the metal strips or padded adhesive tape on opposite sides of the window opening where you'll be installing the No-Drill Blinds Headrail.

To stick them, peel the covers from the sticky pads on the back the stick one to each end of the No-Drill Blinds Headrail.

This is optional if you find that the No-Drill Blinds Headrail slips against the wall once the blind is fitted and this plate is only available on larger product.

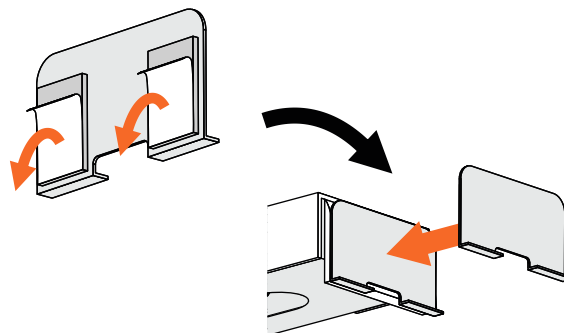

INSTALLING THE METAL STRIP - STEP 2

INSTALLING THE NO DRILL BLINDS HEADRAIL



1. At the end of the headrail opposite to the lever there is an adjustment block that allows you to fine-tune the fittings of the rail.

Use a flat-head screwdriver to twist the small red plugs in toward the center of the headrail. Slide the block out of the headrail by a few millimeters, then twist the red plugs back into their original position to fix the block in place.

Make small adjustment only, repeating as necessary for a tight fit.

2. Hold the No-Drill Blinds Headrail up against the top of window opening and make it flush, then push the lever firmly upwards until the rail snaps into place.

3. Insert the shade onto the brackets.

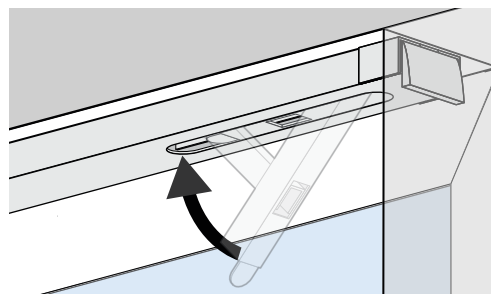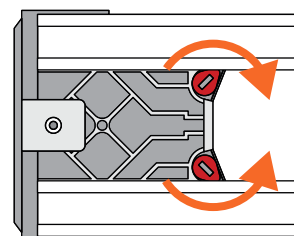

UNINSTALLING THE NO DRILL BLINDS HEADRAIL

Removing the product from the headrail by using a flat-head screwdriver to unlatch the lever. Make sure to hold the No-Drill Blinds Headrail in place while unlatching the lever. This will prevent damage to the window or headrail.