

SelectBlinds®

Installation Guide: Zebra Shades

Cordless Lift



Installation
Inside Mount

 


Installation
Outside Mount

HARDWARE AND PARTS INCLUDED



BRACKETS
(INSIDE MOUNT)



BRACKETS
(OUTSIDE MOUNT)



SCREWS

TOOLS REQUIRED



PENCIL



TAPE MEASURE



POWER DRILL



 
5/64" DRILL BIT



LEVEL



PHILLIPS DRILL BIT



PHILLIPS SCREWDRIVER



STEP LADDER

Quick pointers


1 If you use your own screws instead of those provided, be sure to pre-drill a small hole with a 5/64" drill bit before the final screws go in to attach brackets.

2 If you're using wall anchors, pre-drill with a 1/4" drill bit instead, then tap the wall anchors in place before drilling in the screws.



LEVEL 1 INSTALLATION

INSIDE MOUNT

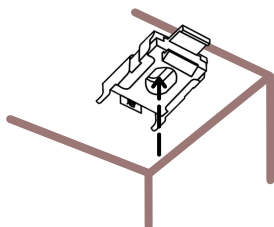

1

In the top right of your window, measure 2" each side of the window opening. Mark this with a pencil and do the same on the top left.


2

Set your bracket so the right side of the bracket will line up with the mark made, and the bracket is flush with the front of the window opening. Mark the holes for drilling. Evenly space additional brackets if needed.

3

Predrill holes with a 5/64" drill bit, then line the brackets up and install.

OUTSIDE MOUNT

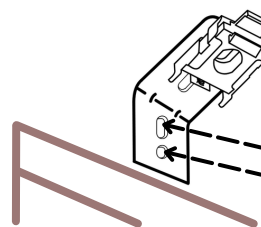

1

Just above the window opening, measure 1" back up and make a mark. Make sure this is at least 2" from the left and right edge of the window opening.


2

Set your bracket just below the mark. Mark the holes for drilling. Evenly space additional brackets if needed.

3


Predrill holes with a 5/64" drill bit, then line the brackets up and install.

ATTACHING THE SHADE

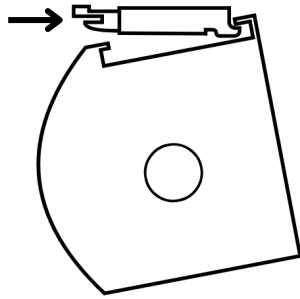

1

Hold the cassette up to the brackets, and place the back lip of the headrail on the back hook of each bracket. Adjust the shade to the left and right as needed to center the shade.

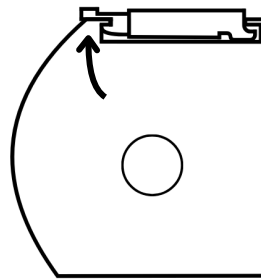


2

Push the headrail up until the front snaps onto the hook on the front of the bracket.


ATTACHING THE HANDLE

Two handles are included. Place the handle in the about a third in from each end of the shade by clipping it on the bottom rail.

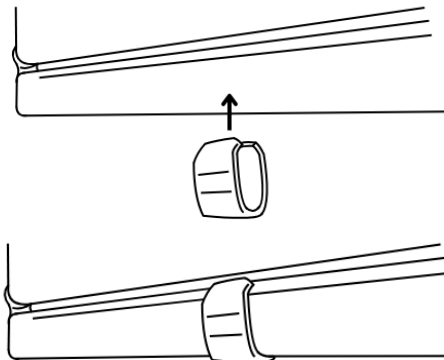

Operate the shade with evenly spaced points on the hem bar. Gently pull the shade down to the desired position.

To raise the shade, gently tug down and then guide the shade up. Tug down one more time to lock it in place.

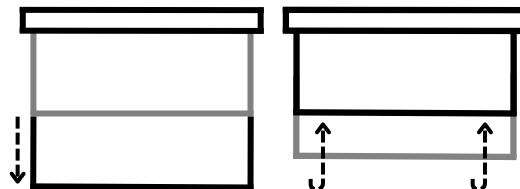

Installation Guide: Zebra Shades

Continuous Cord Loop



Installation
Inside Mount

 


Installation
Outside Mount

HARDWARE AND PARTS INCLUDED




BRACKETS
(INSIDE MOUNT)




BRACKETS
(OUTSIDE MOUNT)



 SCREWS



TENSIONER

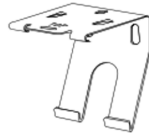

BRACKET
(Fabric Wrapped
Cassette)

TOOLS REQUIRED



PENCIL



TAPE MEASURE



POWER DRILL



 
5/64" DRILL BIT




LEVEL



PHILLIPS DRILL BIT



PHILLIPS SCREWDRIVER

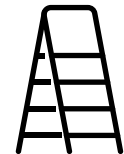

STEP LADDER

Quick pointers


- 1 If you use your own screws instead of those provided, be sure to pre-drill a small hole with a 5/64" drill bit before the final screws go in to attach brackets.
- 2 If you're using wall anchors, pre-drill with a 1/4" drill bit instead, then tap the wall anchors in place before drilling in the screws.



LEVEL 1 INSTALLATION


Standard Cassette

INSIDE MOUNT

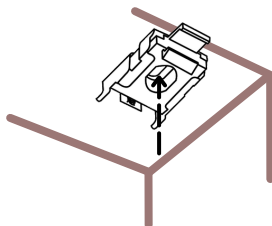

- 1 In the top right of your window, measure 2" each side of the window opening. Mark this with a pencil and do the same on the top left.
- 2 Set your bracket so the right side of the bracket will line up with the mark made, and the bracket is flush with the front of the window opening. Mark the holes for drilling. Evenly space additional brackets if needed.
- 3 Predrill holes with a 5/64" drill bit, then line the brackets up and install.


OUTSIDE MOUNT

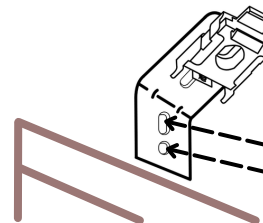

- 1 Just above the window opening, measure 1" back up and make a mark. Make sure this is at least 2" from the left and right edge of the window opening.
- 2 Set your bracket just below the mark. Mark the holes for drilling. Evenly space additional brackets if needed.
- 3 Predrill holes with a 5/64" drill bit, then line the brackets up and install.

Fabric Wrapped Cassette

INSIDE MOUNT

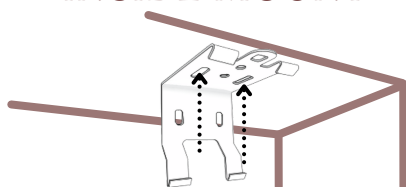

1

In the top right of your window, measure 2" each side of the window opening. Mark this with a pencil and do the same on the top left.


2

Set your bracket so the right side of the bracket will line up with the mark made, and the bracket is flush with the front of the window opening. Mark the holes for drilling. Evenly space additional brackets if needed.

3

Predrill holes with a 5/64" drill bit, then line the brackets up and install.

OUTSIDE MOUNT

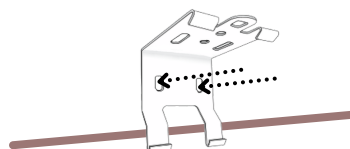

1

Just above the window opening, measure 1" back up and make a mark. Make sure this is at least 2" from the left and right edge of the window opening.

2

Set your bracket just below the mark. Mark the holes for drilling. Evenly space additional brackets if needed.


3

Predrill holes with a 5/64" drill bit, then line the brackets up and install.


INSTALLING THE TENSIONER

Continuous Cord Loop Only


1

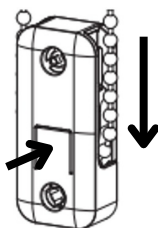

2

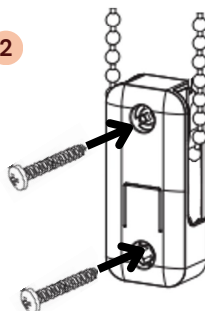

3

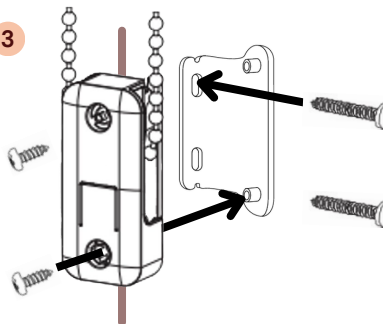

1

Pull the tensioner down to unlock the tensioner while simultaneously pulling the continuous cord loop taut. Follow step 2 for Inside Mount and step 3 for Outside Mount.

2

Hold the tensioner to the wall while keeping the cord taut, and screw in the long screws to secure it in place.

3

Keep the tensioner taut and attach it to the bracket. Mark a line on the wall above and below the bracket. Center the bracket between these lines and screw it into the wall. Then reattach the tensioner to the bracket with the screws.

CLEANING INSTRUCTIONS

1

For regular maintenance, use a duster or a vacuum with a brush attachment and run it over the front and back of the shade.

 
2

To spot clean stains, use a damp rag with a very mild, gentle detergent or soap. Dab at the affected spots; DO NOT RUB! Let the dampened area air dry and repeat as necessary.

All fabrics are different and some may be easier to clean than others. We recommend cleaning your shades as often as once a month.



CHILD SAFETY WARNING



Corded window blinds and shades can be a strangulation risk or cause serious injury to young children and pets. When using corded window treatments, use the following tips to keep them safe:

● NEVER place a crib by a window!

- Move furniture that children can climb on away from the window.
- Secure child-safe tensioners for continuous cord loop chains to the wall or window encasement.
- Always use cord cleats with corded products.
- Keep cords up and away from your child's reach.

Installation Guide: Zebra Shades

Motorization | Wand Motorization




Installation
Inside Mount



Installation
Outside Mount


HARDWARE AND PARTS INCLUDED

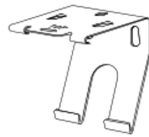

BRACKET



SCREWS

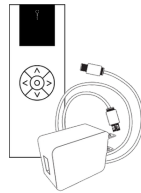

REMOTE AND
CHARGER

TOOLS REQUIRED



PENCIL



 
TAPE MEASURE



POWER DRILL



5/64" DRILL BIT




PHILLIPS SCREWDRIVER



PHILLIPS DRILL BIT



LEVEL

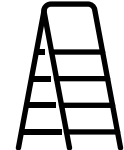

STEP LADDER


Quick pointers

- 1 If you use your own screws instead of those provided, be sure to pre-drill a small hole with a 5/64" drill bit before the final screws go in to attach brackets.
- 2 If you're using wall anchors, pre-drill with a 1/4" drill bit instead, then tap the wall anchors in place before drilling in the screws.



LEVEL 2 INSTALLATION

INSIDE MOUNT

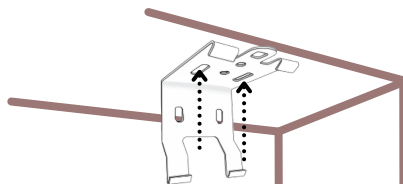

1

In the top right of your window, measure 2" each side of the window opening. Mark this with a pencil and do the same on the top left.


2

Set your bracket so the right side of the bracket will line up with the mark made, and the bracket is flush with the front of the window opening. Mark the holes for drilling. Evenly space additional brackets if needed.

3

Predrill holes with a 5/64" drill bit, then line the brackets up and install.

OUTSIDE MOUNT

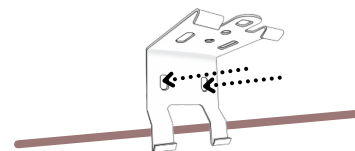

1

Just above the window opening, measure 1" back up and make a mark. Make sure this is at least 2" from the left and right edge of the window opening.


2

Set your bracket just below the mark. Mark the holes for drilling. Evenly space additional brackets if needed.

3


Predrill holes with a 5/64" drill bit, then line the brackets up and install.

ATTACHING THE SHADE

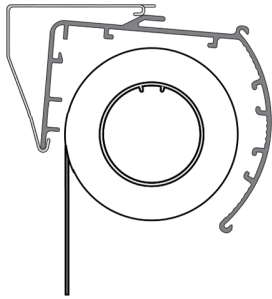

1

Hold the cassette up to the brackets, and place the back edge of the headrail on the bottom lip of each bracket. Adjust the shade to the left and right as needed to center the shade.

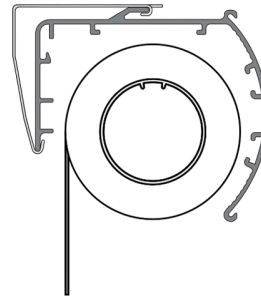

2

Push the headrail back until the top of each bracket snaps onto the hook on the top of the headrail.

SETTING UP THE MOTORIZED WAND

Wand Motorization Only


1

Attach the wand to the hook with the eyelet at the top.


2

Connect the wand to the motor with the cord, making sure the cord is positioned behind the hook.

1

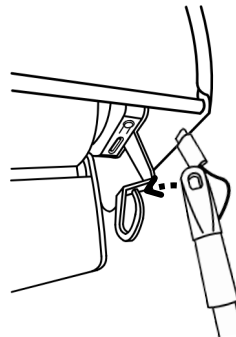


2

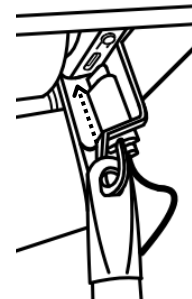

When installed correctly, the wand will have the buttons on the front for operation.

The wand will have a charge port on the bottom. The setting button for programming is on the back of the wand.

Limits are preset, so you'll just need to connect and operate.

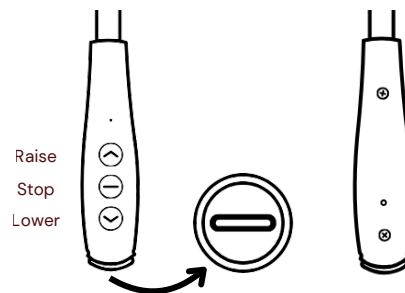


Changing the Limits with the Wand

Wand Motorization Only




1

Move the shade to the lower, upper, or favorite limit that you want to adjust.

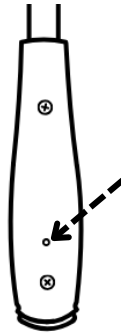

2

Using a thin object like a paper clip, press and hold the setting button on the back until you see the shade move up and down.

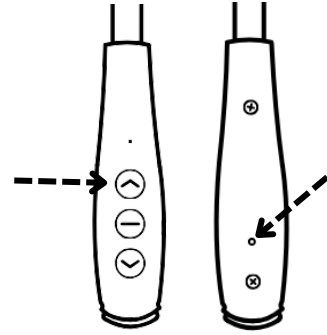

3


Move the shade to the position desired and then press and hold the button again on the back of the wand. It will move up and down to confirm. You can test the limits from here.

PROGRAMMING AND USING THE REMOTE


Remote Motorization Only

Quick pointers



These shades are shipped in “Sleep” mode. Use the small, black toggle switch near the charging port on the motor head to turn it on. Switch it from **O** to **I** to “wake” it up. A light will flash behind the program button to confirm it’s ready for use. Do this one at a time and wait to wake any others near it after you’ve finished programming the first one. This will arrive with 30% charge, so you may need to charge fully before first use.

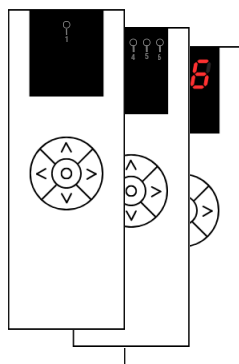

Remote (1, 6, 15 Channel)



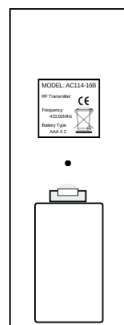


Remote Back

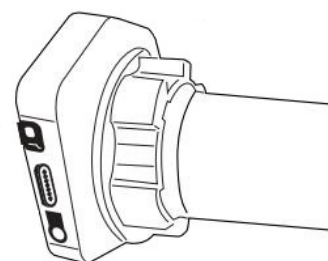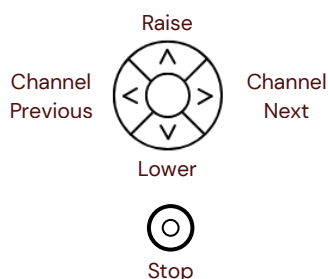


Motor Head

PAIRING THE REMOTE

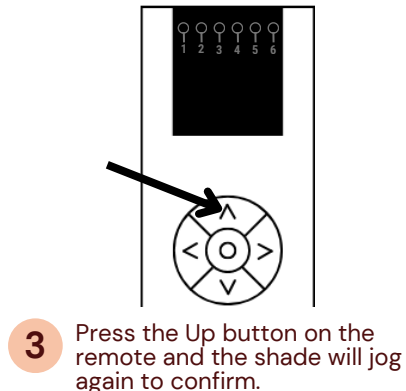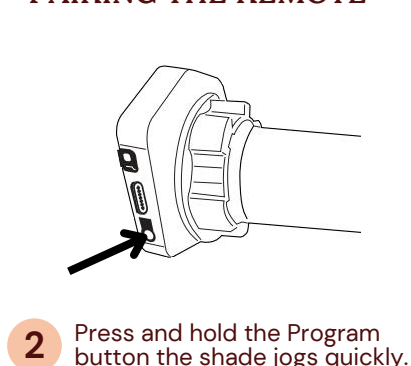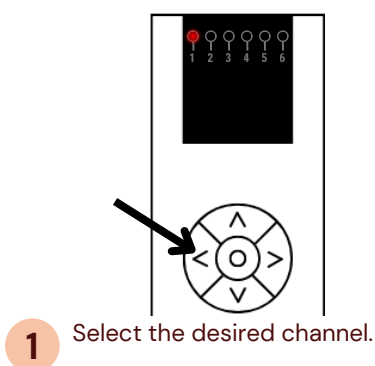


ADJUSTING LIMITS

 

Limits are pre-set at the factory, so the following steps are only necessary if you want to change how these settings are configured.

FACTORY RESET

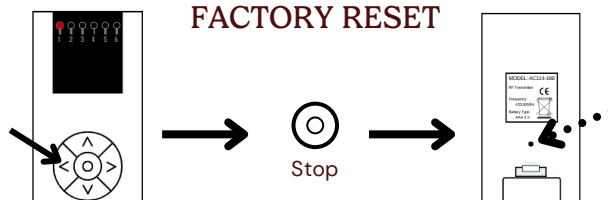


Make sure you’re on the channel that the shade is paired to.

Press and hold the stop button on the remote for 5–7 seconds.


Then press and hold the Program Button on the back of the remote for 7–10 seconds. The shade will jog 1x, then 2x to confirm.

SETTING THE UPPER AND LOWER LIMIT


Upper Limit

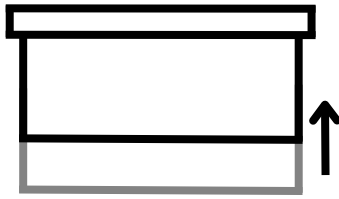

- 1 Set the shade about 6" below the desired position.

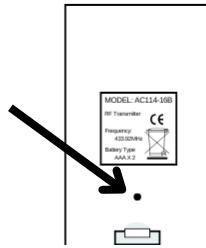


- 2 Flip the remote over and press the program button on the back.

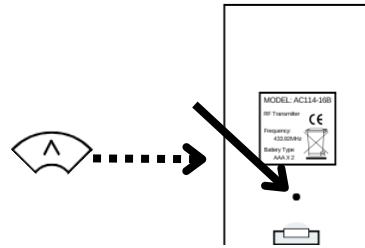


- 3 The shade will jog to confirm it's in setting mode. Adjust the shade up to the desired limit. Press the program button again on the back to confirm.


Lower Limit

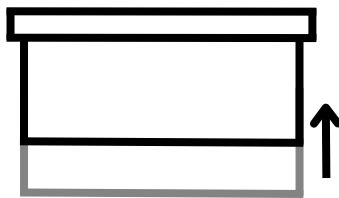

- 1 Set the shade about 6" above the desired position.


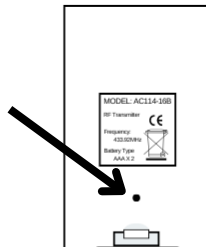


- 2 Flip the remote over and press the program button on the back.

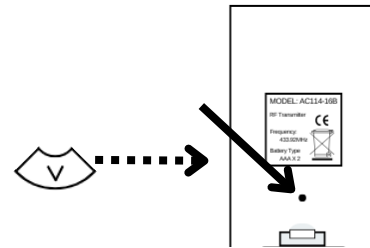

- 3 The shade will jog to confirm it's in setting mode. Adjust the shade down to the desired limit. Press the program button again on the back to confirm.

Changing the Battery

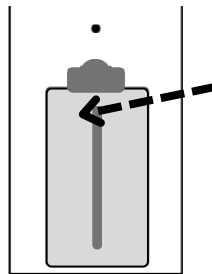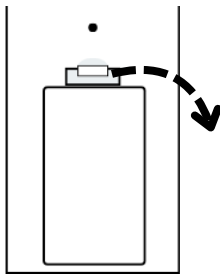


- 1 Remove the back latched cover for the batteries.
- 2 Remove the old AA batteries.
- 3 Make sure the left battery has the positive side facing up towards the top of the remote and the right battery has the negative side facing up towards the top of the remote.

INSTALLING THE REMOTE'S WALL MOUNT

Optional

- 1 Find a spot where you would like to place the remote mount. Hold the back plate in place while keeping it level.
- 2 Mark where you will drill the screws and install the optional anchors. Screw the screws through the holes.
- 3 Slide the remote mount onto the plate and now you can slide the remote in place.

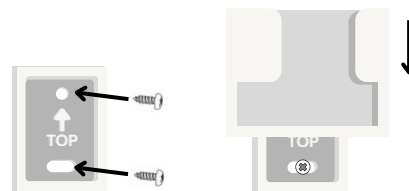

CLEANING INSTRUCTIONS


- 1 For regular maintenance, use a duster or a vacuum with a brush attachment and run it over the front and back of the shade.
- 2 To spot clean stains, use a damp rag with a very mild, gentle detergent or soap. Dab at the affected spots; DO NOT RUB! Let the dampened area air dry and repeat as necessary.

All fabrics are different and some may be easier to clean than others. We recommend cleaning your shades as often as once a month.


CLICK2FIT INSTALLATION

Installation and Removal

- 1 Hold the Click2Fit up against the top of window opening and make it flush with the window opening. Push the lever upwards until you hear the rail click in place.
- 2 Should you need to remove the Click2Fit headrail, uninstall the shade from the headrail. Use a flat-head screwdriver to unlatch the lever. Make sure to hold the headrail while unlatching the lever and cushion the lever as it unlatches. This will prevent damage to the window and headrail.

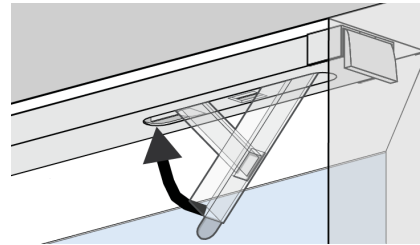

CHILD SAFETY WARNING

 

Corded window blinds and shades can be a strangulation risk or cause serious injury to young children and pets. When using corded window treatments, use the following tips to keep them safe:

- NEVER place a crib by a window!
- Move furniture that children can climb on away from the window.
- Secure child-safe tensioners for continuous cord loop chains to the wall or window encasement.
- Always use cord cleats with corded products.
- Keep cords up and away from your child's reach.