



# Luxe Woven Solar Installation

The easiest motorization  
for single roller blinds



CM-01/02  
Tubular motor

The easiest motorization  
for single roller blinds



#### Pull Motion

Easily control your motorized blind  
by pulling a chain weight or wand



#### Li-ion Battery

Rechargeable integrated  
Li-ion battery



#### USB Rechargeable

Rechargeable with micro  
USB cable



#### Happy Programming

Dummy proof programming using  
the pull function of the blind



#### Favorite Position

Pre-set your  
favorite position




#### Child Safe

Child safe solution  
free of hazardous loops




#### Cable Free

Install your motorized  
blind cable free

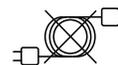

# WARNING

Read the instructions carefully  
before assembling and using  
the product. Assembling  
process can be completed by  
non-professionals. For indoor  
use only.

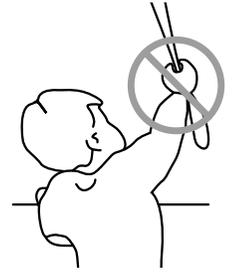

- Young children can strangle in the loop of pull cords, chains and tapes, and cords that operate window coverings.
- To avoid strangulation and entanglement, keep cords out of the reach of young children.

- Cords may become wrapped around a child's neck.
- Move beds, cots and furniture away from window covering cords.
- Do not tie cords together.
- Make sure cords do not twist together and form a loop.

## Safety

**WARNING:** Important safety instructions. Follow all instructions, since incorrect installation can lead to severe injury.

- Do not let children play with the blind and/or remote control.
- Take care that the blind can move freely and is not blocked by objects.
- Do not paint the device.
- Keep the device dry.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards.

## Cleaning

Follow these general rules when cleaning the outside of the device and its components:

- Use a damp, soft, lint-free cloth. Avoid getting moisture in openings.
- Don't use aerosol sprays, solvents, alcohol, or abrasives.

## Service & Support

Do not make repairs yourself. Do not attempt to open the device or disassemble it. You run the risk of electric shock and voiding the limited warranty. No user-serviceable parts are inside.




IP 44




Scan the QR code  
for more information  
[rtube.nl/red792](http://rtube.nl/red792)


### 1 Installing the blind

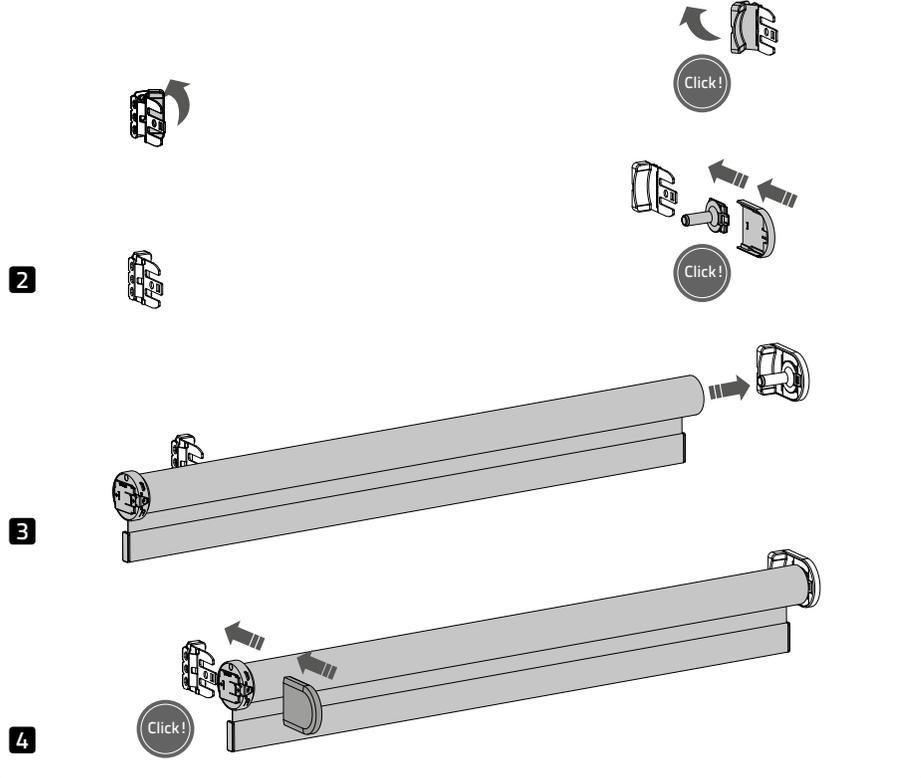


### 5 Charge to activate the motor

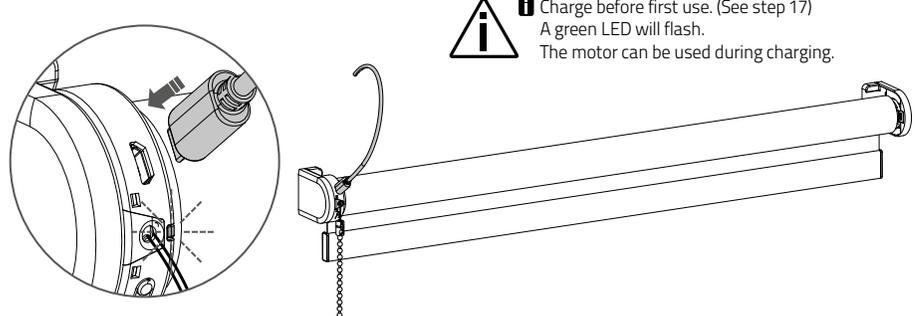


### 6 Set bottom limit

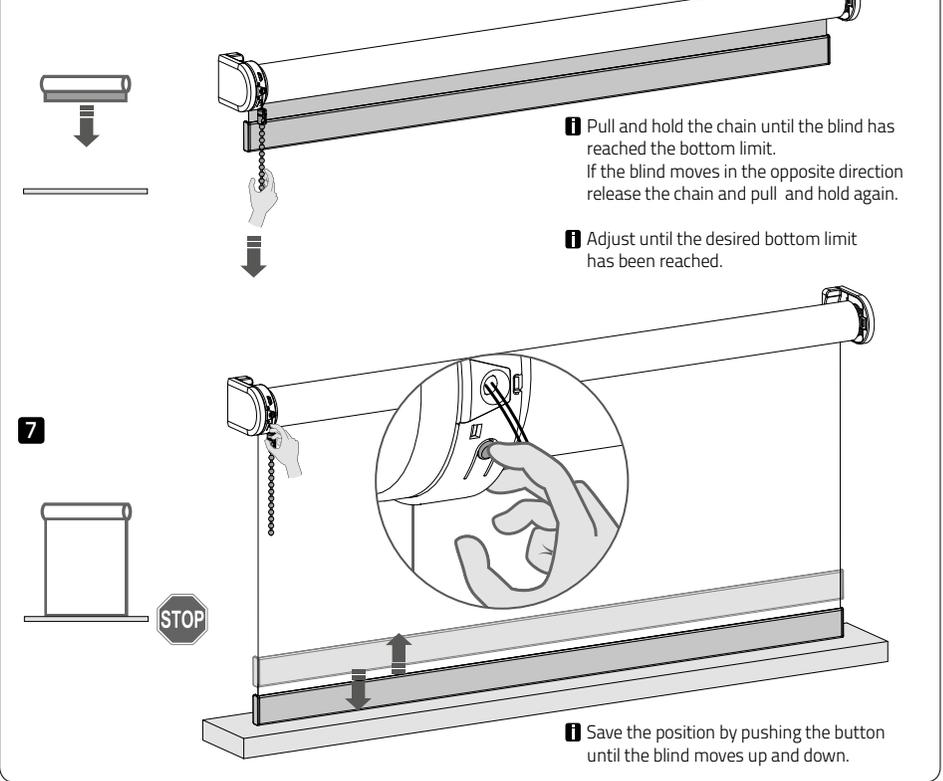

### 8 Set upper limit

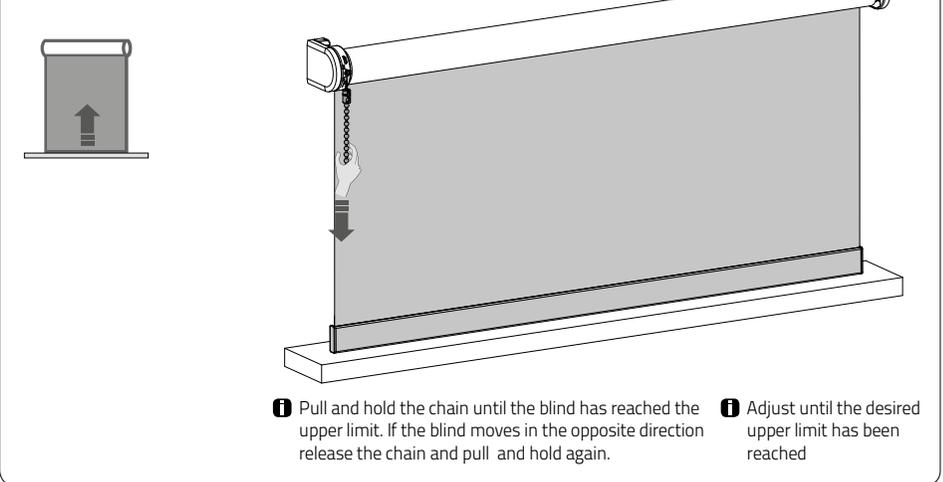


9

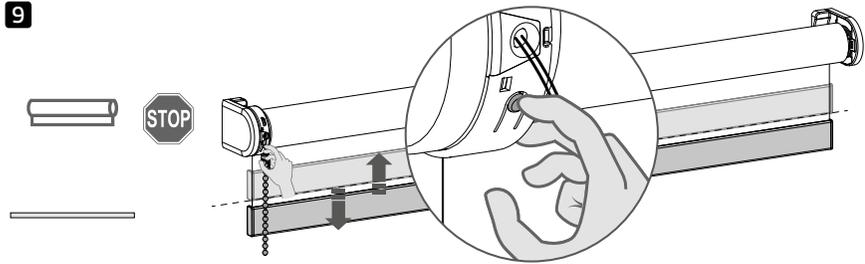


1 Save the position by pushing the button until the blind moves up and down.

### 10 Operating the blind

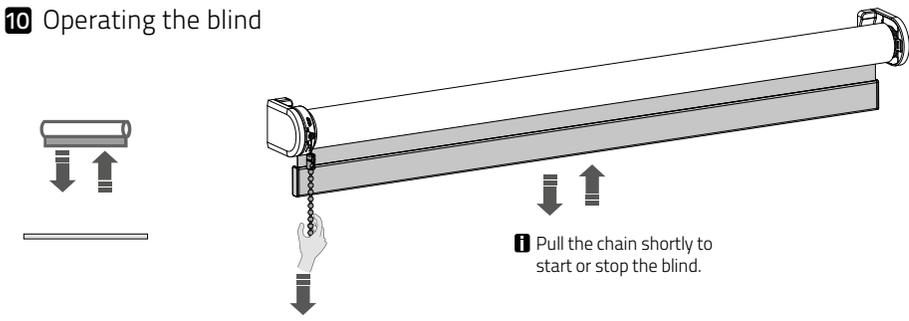


1 Pull the chain shortly to start or stop the blind.

### 11 Optional: Set the favorite position

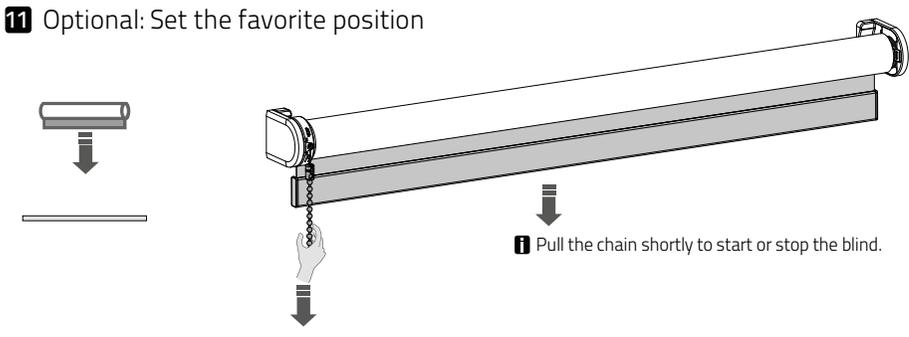


1 Pull the chain shortly to start or stop the blind.

12

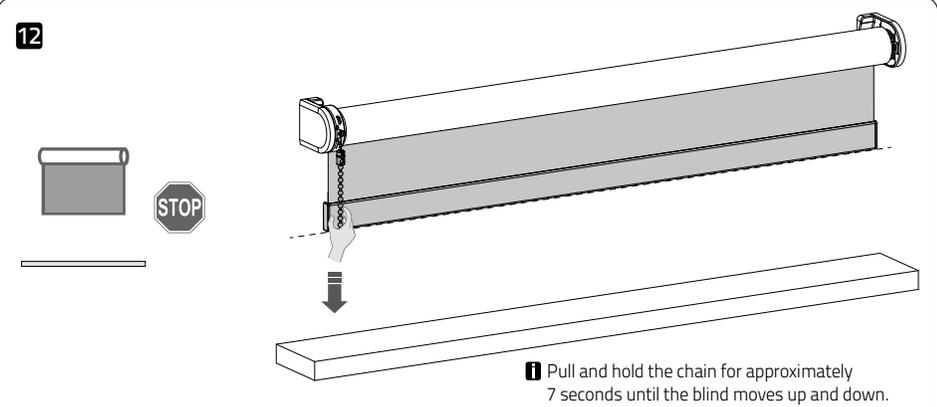


1 Pull and hold the chain for approximately 7 seconds until the blind moves up and down.

13

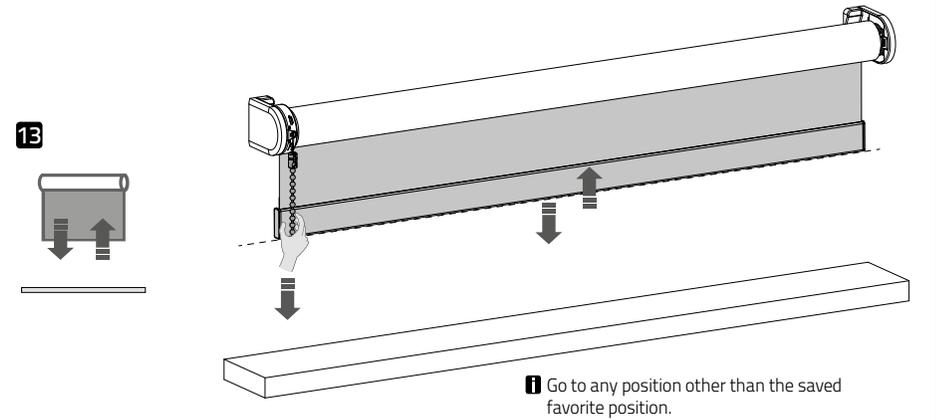


1 Go to any position other than the saved favorite position.

### 14 Operate to favorite position

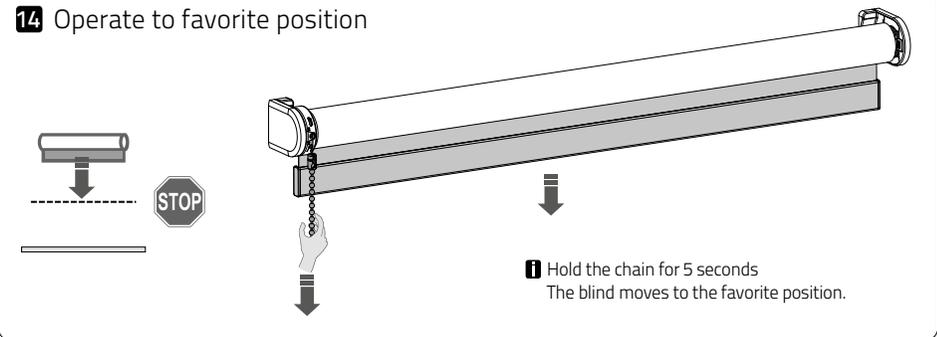


1 Hold the chain for 5 seconds  
The blind moves to the favorite position.

### 15 Delete favorite position

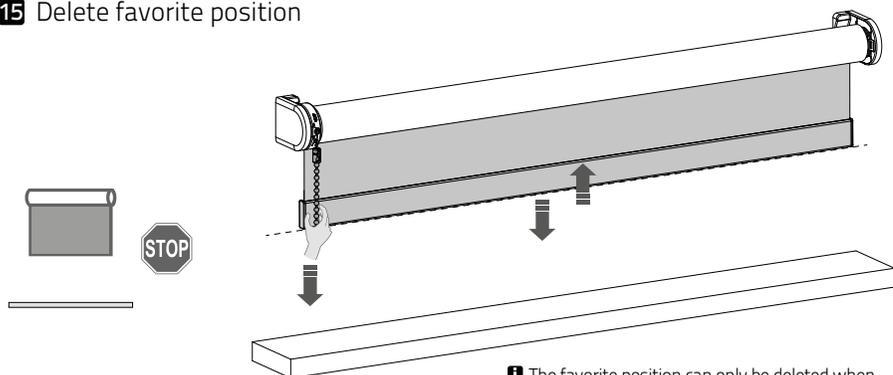


- 1 The favorite position can only be deleted when the blind is placed in the favorite position.
- 1 Pull and hold the chain for approximately 7 seconds until the blind moves up and down.
- 1 Go to step 11 to program a new favorite position.

### 16 Delete end limits

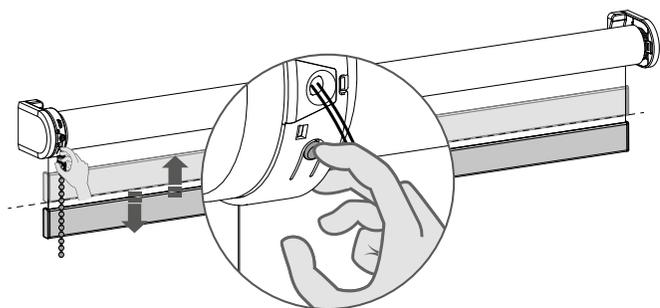

- 1 Hold the button for approximately 10 seconds, after 5 seconds the blind will move up and down. Keep pushing the button until the blind moves up and down again.
- 1 Repeat steps 9 - 12 to save new end limits.

### 17 Recharge battery

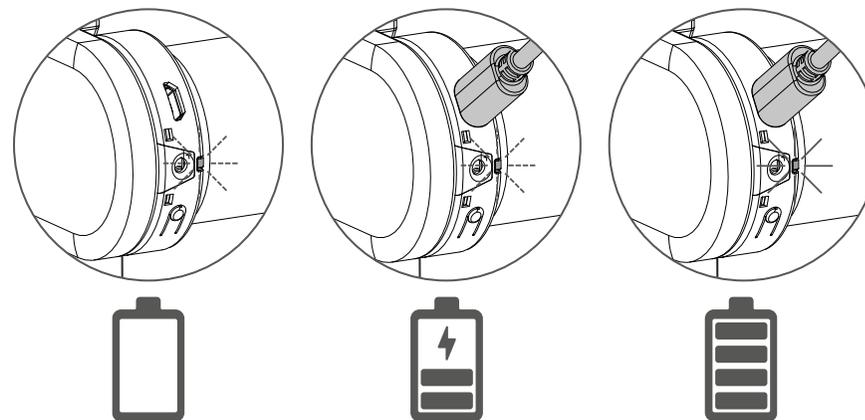

Blinking red during operation;  
Charge the battery

Blinking green;  
battery is charging

Continuously green;  
battery is fully charged