

## INSTALLING YOUR SHADE:

**NOTE:** For wallboard or plaster, use anchors as designed for hollow walls (not included). For concrete, stone and brick, use a masonry drill bit and anchors designed for masonry (not included).

### STEP 1: INSTALL BRACKETS

FOR OUTSIDE OR WALL MOUNT:

1. Your shade will have come with pre-drilled holes for the mounting brackets. Hold the shade in the desired location for installation and then mark the bracket locations with a pencil, so that the screw posts of the brackets will fit through the pre-drilled holes.
2. Check with a level that the bracket locations are straight.
3. Mark the screw holes for the brackets with a pencil and then pre-drill pilot holes into the mounting surface. Next, screw the brackets into place. [Figure 1]



Figure 1 – shown installed with Spacer Block (optional)

### STEP 2: INSTALL SHADE

Hold the shade so that the screw posts on the brackets fit through the slots in the head rail and re-attach wing nuts and screw tight to hold the head rail firmly. Ensure that the shade is level. [Figure 2]

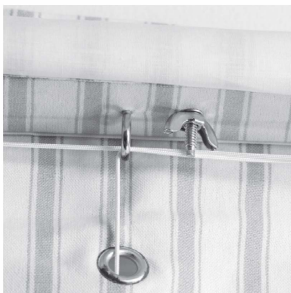


Figure 2

### STEP 3: INSTALL THE CORD CLEAT

If your shade is fitted with a cord lock, you will have been supplied with a cord cleat, **which must be installed to prevent the risk of strangulation to young children and pets.**

1. Find a convenient place about 1 inch out from the side of the shade where the cords are located and about one quarter of the way up from the bottom of the shade.
2. Hold the cord cleat parallel with the frame of the window. With a pencil, make a mark through the holes.
3. Make pilot hole and install cord cleat with 2 screws. [Figure 3]



Figure 3

## CARING FOR YOUR SHADE

Your shade is attached to the head rail by velcro so that it can be removed for professional dry cleaning if necessary. Do not wash your shade. Soaps and liquid cleaners may stain the fabric.

If a cordless shade needs to be dry cleaned, please contact your dealer before untying the cords.

For more specific care advice for any particular fabric contact your dealer.

## ONE YEAR LIMITED WARRANTY:

### What is covered by this warranty and for how long:

All products are warranted against defects in materials and workmanship for a period of one (1) year from the date of purchase, provided that the product is installed according to the product instructions. We reserve the right to determine if your piece warrants repair or partial replacement of any parts. In the unlikely event that the entire piece is defective, we will replace this window covering with a new window covering of equal or superior value; this shall be your sole remedy under this warranty.

### Who and what is covered by this warranty:

The original customer in a residential application within the United States is covered under this warranty; proof of purchase is required. Removal, installation or re-installation of any window covering is not covered under this warranty. This warranty does not cover damage or defects caused by or resulting from improper maintenance, neglect or improper use, abuse, misuse, neglect, accidents, acts of god, alteration, commercial use, installation, removal or re-installation or exposure to excessive moisture.

### Your rights under State Law:

This warranty gives you the specific legal rights. You may also have other rights, which may vary from state to state. We will not be liable for **INCIDENTAL OR CONSEQUENTIAL DAMAGES** or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you

**THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER OBLIGATIONS, LIABILITIES, OR WARRANTIES.**

## ! WARNING:

Young children can strangle in cord and bead chain loops. They can also wrap cords around their necks and strangle.



- Always keep cords and bead chains out of children's reach.
- Move cribs, playpens and other furniture away from cords and bead chains as children can climb furniture to get to cords.
- Attach a cord tension device or cord guide to the wall. This can prevent children from pulling cords and bead chains around their necks.

## OPERATING YOUR SHADE:

### CORDED SHADES

Your shade is operated by a lift cord and cord lock, which allows the shade to stay in whatever position you desire.

For shades with valances and cords in front, move the cord to the middle of the shade to release the cord lock and to the outside of the shade to engage the cord lock and lock the shade in place.

For shades without valances and cords behind, move the cord to the outside or the shade to release and to the middle of the shade to engage the cord lock and lock the shade in place.

After operating the shade always wrap the cord around the cord cleat to prevent the cord becoming a strangulation hazard.

Your shade is provided with a breakaway cord tassel, which collects the lift cords into one tassel for ease of use and a cleaner, tidier look. [Figure 4]

This tassel is also a safety device to make sure cords do not become tangled and create a hazardous loop. If weight is applied to the cords above the tassel it is designed to break into two halves, to prevent a strangulation hazard.

If the tassel should break apart, it can easily be snapped back together again.



Figure 4

### CORDESS SHADES

Your shade has no lift cords on the front and the lift cords on the back are operated by a spring system under the head rail.

When installing the shade, make sure that the cords run free of any obstructions or the installation brackets. Rubbing against a bracket or any obstruction will cause the cords to fray and break over time.

Operate your shade by pulling down firmly on the handle or tassel. For wide shades use both hands to make sure the shade is lowered evenly.

To raise the shade use both hands beneath the bottom of the shade and lift the shade up manually. The spring system will hold the shade in place where you release it, but the shade will not raise on its own.

### TROUBLE-SHOOTING CORDESS SHADES:

If the shade is not raising evenly, check that all the cords are not obstructed and lower the shade fully. Then raise with both hands. If this does not solve the problem, contact your dealer.

If the shade does not stay at the desired position when released, contact your dealer.

If a cord breaks or comes untied, contact your dealer.

# FABRIC ROMAN SHADE INSTALLATION INSTRUCTIONS

## STANDARD CORDED ROMAN SHADES CORDESS ROMAN SHADES

Thank you for purchasing your custom fabric roman shades. With proper installation your shade should look beautiful and provide years of service. Please check all parts and read these instructions, before starting installation.

Your roman shades have been packed carefully to arrive in good condition. However it is possible that they may have become creased during transit. Many creases will hang out with time, but it may also be necessary to iron the shades with a cool iron or steam them to remove creases.

### MOUNTING HARDWARE KIT INCLUDES:



Mounting Bracket with Wing Nut



Bracket Screw



Cord Cleat and Screws – corded shades only

**All cords should be secured with cord cleats to prevent the risk of strangulation. Keep cords away from children and pets.**

### TOOLS THAT MAY BE REQUIRED:

Pencil, Tape Measure, Drill, Screw Driver, Level and Step Stool

---

## ONE YEAR LIMITED WARRANTY:

### What is covered by this warranty and for how long:

All products are warranted against defects in materials and workmanship for a period of one (1) year from the date of purchase, provided that the product is installed according to the product instructions. We reserve the right to determine if your piece warrants repair or partial replacement of any parts. In the unlikely event that the entire piece is defective, we will replace this window covering with a new window covering of equal or superior value; this shall be your sole remedy under this warranty.

### Who and what is covered by this warranty:

The original customer in a residential application within the United States is covered under this warranty; proof of purchase is required. Removal, installation or re-installation of any window covering is not covered under this warranty. This warranty does not cover damage or defects caused by or resulting from improper maintenance, neglect or improper use, abuse, misuse, neglect, accidents, acts of god, alteration, commercial use, installation, removal or re-installation or exposure to excessive moisture.

### Your rights under State Law:

This warranty gives you the specific legal rights. You may also have other rights, which may vary from state to state. We will not be liable for **INCIDENTAL OR CONSEQUENTIAL DAMAGES** or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you

**THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER OBLIGATIONS, LIABILITIES, OR WARRANTIES.**

---

## **WARNING:**



Young children can strangle in cord and bead chain loops. They can also wrap cords around their necks and strangle.

- Always keep cords and bead chains out of children's reach.
- Move cribs, playpens and other furniture away from cords and bead chains as children can climb furniture to get to cords.
- Attach a cord tension device or cord guide to the wall. This can prevent children from pulling cords and bead chains around their necks.

---

# FABRIC ROMAN SHADE INSTALLATION INSTRUCTIONS

---

## SHADES WITH **CLUTCH** AND **CONTINUOUS CHAIN LOOP**

Thank you for purchasing your custom fabric roman shades. With proper installation your shade should look beautiful and provide years of service. Please check all parts and read these instructions, before starting installation.

Your roman shades have been packed carefully to arrive in good condition. However it is possible that they may have become creased during transit. Many creases will hang out with time, but it may also be necessary to iron the shades with a cool iron or steam them to remove creases.

## MOUNTING HARDWARE KIT INCLUDES:



Mounting  
Bracket



Bracket  
Screw



Chain Tensioner  
and Screws

**All bead chain loops should be secured with tensioners to prevent the risk of strangulation. Keep chain loops away from children and pets.**

## TOOLS THAT MAY BE REQUIRED:

Pencil, Tape Measure, Drill, Screw Driver, Level and Step Stool

---

## INSTALLING YOUR SHADE:

**NOTE:** For wallboard or plaster, use anchors as designed for hollow walls (not included). For concrete, stone and brick, use a masonry drill bit and anchors designed for masonry (not included).

### STEP 1: INSTALL BRACKETS

1. First note how the bracket fits into the head rail by pushing the front of the head rail against the movable plastic tab. [Figure 1]
2. Position brackets at a convenient distance from each end of the head rail and mark the desired bracket locations with a pencil. Make sure the brackets are level and in line with each other, or the head rail may not engage correctly.
3. Pre-drill the mounting holes into the mounting surface and screw the brackets into place. Check that the brackets are level. [Figure 2 & 3]



Figure 1



Figure 2 – inside mount

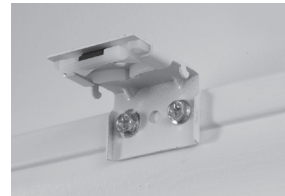


Figure 3 – outside mount



Figure 4

### STEP 2: INSTALL SHADE

Hold the shade up to the brackets and push the front of the head rail against the movable tab in the bracket until the head rail snaps into place. [Figure 4]

### STEP 3: INSTALL THE CHAIN TENSIONER

Shades with clutch controls come with a continuous chain loop, which should always be screwed to the wall with the included chain tensioner.

1. The chain tensioner should be installed to a flat surface, so the bead chain is taut but not stretched. Be sure not to twist or cross the chain. [Figure 5]



Figure 5

On inside mount shades, the tensioner may be attached to the windowsill or to the inside of the window frame. For outside mount or wall mount shades, the bracket may be mounted to the exterior of the window frame or the wall.

2. With a pencil, mark the desired location of the screw holes for the tensioner and then drill pilot holes. Then install the tensioner with the screws, making sure that the tensioner is fully installed, so that the spring is pushed in and the chain passes smoothly through the guide. [Figure 5]

**The chain tensioner forms an important safety function by keeping chain loops away from small children. Never operate this shade without a functioning and correctly installed chain tensioner.**

### OPERATING YOUR SHADE

The shade can be raised and lowered by pulling on the front or the back chain.

### CARING FOR YOUR SHADE

Your shade is attached to the head rail by velcro so that it can be removed for professional dry cleaning if necessary. Do not wash your shade. Soaps and liquid cleaners may stain the fabric.

# BOFU BRB23/BRB23D Rechargeable Battery Motor Instruction

042.BRB237D01

## Technical data


Motor Load Torque: 0.7Nm/34rpm, 1.1Nm/28rpm

Battery Specification: Li-ion Batter, 2000mAh, 7.4V.







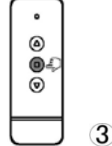
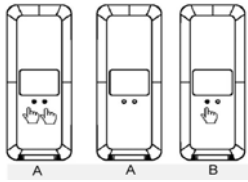


## Notify:

● Motor antenna should be as straight as possible in the position far away from metal objects. Directly contact metal objects is prohibited; otherwise, the receive distance will be influenced

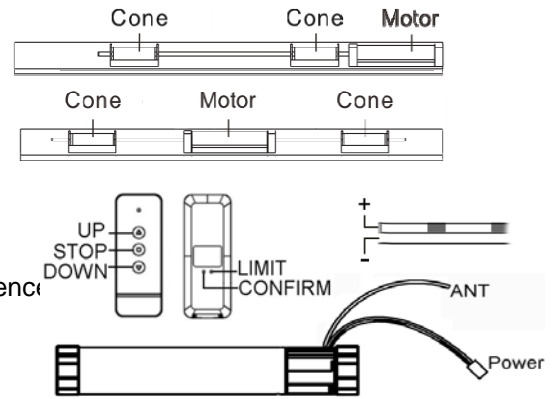● Please charge the battery when the motor alarm or work faltering

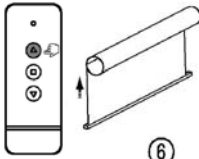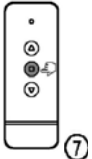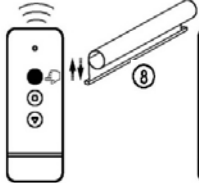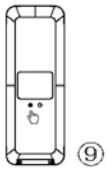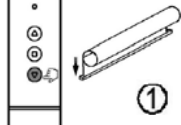

Operation Item	Item	Operation	Result	Illustration
Program the first transmitter with motor	● Please skip the step and go to next If manufacturer has programmed a transmitter with motor before delivery			
	1	Connect motor with battery pack		
	2	Within 60 seconds press CONFIRM button on transmitter	Motor jogs, the program has been done.	
Change motor rotate direction	1	Press UP button	If motor goes up, please do nothing, If motor goes down, please do next step	
	2	Press and hold LIMIT button then press STOP button	Release both buttons when motor jogs	
	3	Press UP button	Motor goes up, the motor rotation direction has been revised	
Setup bottom limit	The whole limit setting must be finished at one times			
	1	Keep pressing LIMIT button on any programmed transmitter	Release this button when motor jogs	
	2	Press DOWN button on transmitter	Motor runs down	
	3	Press STOP button When motor running close to the end-point of bottom limit	Motor stops	
	4	Press either UP or DOWN button	Motor runs step by step to adjust bottom limit accurately	
5	Press CONFIRM button on transmitter	Motor jogs, down way setting has been done.		

Operation	Item	Operation	Result	Illustration
Setup upper limit	6	Press <b>UP</b> button on transmitter	Motor runs up	
	7	Press <b>STOP</b> button When motor running close to the end-point of upper limit	Motor stops	
	8	Press either <b>UP</b> or <b>DOWN</b> button	Motor runs step by step to adjust lower limit accurately	
	9	Press <b>CONFIRM</b> button on transmitter	Motor jogs, the setting has completed.	
Set intermediate position	<b>This step only can be done after setting motor limit</b>			
	1	Press <b>DOWN</b> button	Stop motor at the position which you need	
	2	Press and hold <b>LIMIT</b> button then press <b>UP</b> button	Release both buttons when motor jogs, now the setting has completed	
	3	Press <b>STOP</b> button when motor stop	Motor will run to the setting position and stops	
Program transmitter using a programmed transmitter	<b>● Please skip the step and go to next if the subsidiary transmitter is not needed</b>			
	1	Keep pressing <b>LIMIT</b> button on the first programmed transmitter A, then press <b>CONFIRM</b> button	Please release both buttons once motor jogs	
	2	Press <b>CONFIRM</b> button on transmitter B	Motor jogs again, now transmitter B has programmed with motor	
Delete all other transmitters	1	Keep pressing <b>LIMIT</b> button on transmitter A, then press <b>DOWN</b> button	Please release both buttons once motor jogs, now all transmitters have been deleted except A	
Delete itself from motor	2	Press <b>CONFIRM</b> button 3 times	This transmitter has been deleted from the motor	
Charging	The motor works with Li-ion battery, please charging it when the motor alarms or work faltering. Please charge the motor using professional charger CH-8.4V/1A Charging time: Charger 4 hours or indicator change to green 1 hours, <b>please take the charger away when charging full.</b>			
FAQ	<b>If nothing works, please check:</b> <ul style="list-style-type: none"> <li>● please charging the motor battery firstly</li> <li>● If the motor runs to a direction continually, the user didn't setup limit successfully, please re-set limit.</li> </ul>			