SelectBlinds


Installation Guide:
S-Wave Faux Wood Blinds

Cordless Lift

Installation Inside Mount

Installation Outside Mount

HARDWARE AND PARTS INCLUDED

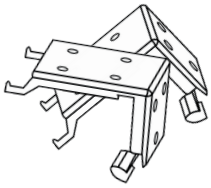

BRACKETS



SCREWS

TOOLS REQUIRED



PENCIL




TAPE MEASURE




POWER DRILL

5/64" DRILL BIT



PHILLIPS SCREWDRIVER



STEP LADDER



PHILLIPS DRILL BIT



LEVEL


Quick pointers

1. If you use your own screws instead of those provided, be sure to pre-drill a small hole with a 5/64" drill bit before the final screws go in to attach brackets.
2. If you're using wall anchors, pre-drill with a 1/4" drill bit instead, then tap the wall anchors in place before drilling in the screws.




LEVEL 1 INSTALLATION

INSIDE MOUNT

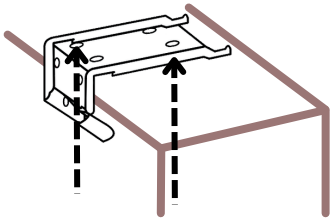

1. Ensure the bracket is at least 2" from the edge of the window opening.
2. Take a bracket and line it up with the front of the window opening. Use the holes in the top of the bracket to mark screw placement.
3. Align the brackets with the holes, and use a Phillips drill bit to install the screws.

OUTSIDE MOUNT

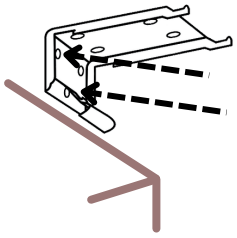


1. Make sure the top of the bracket is at least 1 1/2" above the top of the window opening. Make a mark with a pencil.
2. Align the top back of a bracket with this mark, and use the holes in the back of the bracket to mark screw placement.
3. Align the brackets with the holes, and use a Phillips drill bit to install the screws.

ATTACHING THE BLIND

1. Tilt the headrail back so that the front of the headrail can settle on the hooks of the front of the bracket.


2. While resting on the front hooks of the bracket, tilt the back of the headrail up.

3. Press the back of the headrail up firmly and the bracket will click into place.

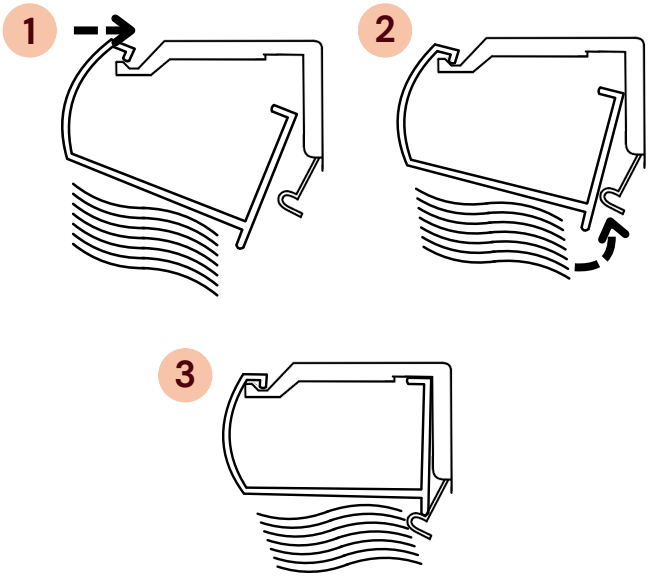


Quick pointers

OPERATION

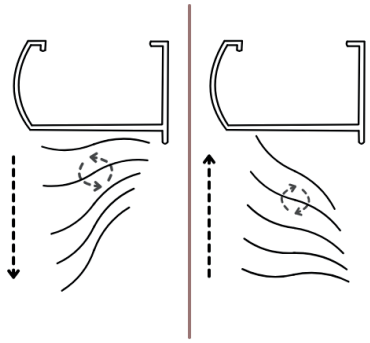

Lowering the blind tilts it down, while raising the blind tilts it up.

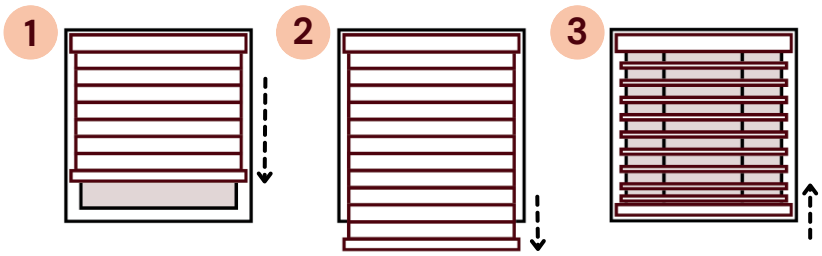

To have the blind tilted open, but fully lowered down you'll have to follow these steps:


1. Lower the blind down.
2. Move it past the bottom of the window opening
3. Raise the blind up and rest the bottom rail on the sill.

CLEANING INSTRUCTIONS

For regular maintenance, use a duster or a vacuum with a brush attachment and run it over the front and back of the blind. You may also use a damp washcloth with a mild detergent for tougher dust.

Child Friendly

CHILD SAFETY WARNING

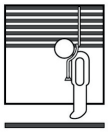

Corded window blinds and shades can be a strangulation risk or cause serious injury to young children and pets. When using corded window treatments, use the following tips to keep them safe:

- NEVER place a crib by a window!
- Move furniture that children can climb on away from the window.
- Always use cord cleats with corded products.
- Secure child-safe tensioners for continuous cord loop chains to the wall or window encasement.
- Keep cords up and away from your child's reach.