
SelectBlinds


Installation Guide:
Total Blackout Roman Shades

Cordless Lift | Motorization


HARDWARE AND PARTS INCLUDED

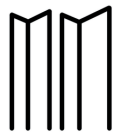

BOTTOM TRACKS
(1 Front) 2 3/8"
(1 Back) 3 1/8"



SIDE TRACKS
(2) 1 5/8"
With a Velcro Top
and Adhesive Bottom



CORDLESS HANDLE



REMOTE AND CHARGER
(MOTORIZATION)

TOOLS REQUIRED



PENCIL




TAPE MEASURE



POWER DRILL



5/64" DRILL BIT




PHILLIPS SCREWDRIVER



PHILLIPS DRILL BIT



LEVEL



STEP LADDER

Built-In Click2Fit Installation


The Built-In Click2Fit will already be attached inside the product. Please don't attempt to remove it to ensure the product operates correctly.



LEVEL 1 INSTALLATION

1. Hold the shade's headrail up to the top of the window opening and make it 1/8" from the front of the window. Push the lever up until it snaps in place.

2. To remove the shade, use a flat-head screwdriver to unlatch the lever. Make sure to hold the headrail in place when unlatching the lever; this will protect the window and shade.

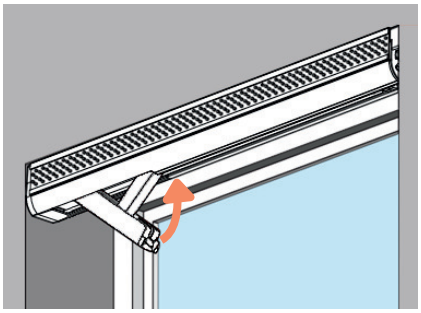

Side and Bottom Light Blockers

Quick pointers

Make sure the surface is flat to ensure the strongest hold. If you've just painted, allow 2 weeks for paint to fully dry/cure before installation.


The adhesive is VERY STRONG, so you'll need to be extra sure the area is fully wiped and ready before installation.

Bottom Light Blockers

First, "dry fit" the light blocking strips without removing the adhesive strip into the bottom of the window opening in the desired position.

There are two options for placement. Both options should have the fabric wrapped light blocker at the front closest to the edge of the window opening.

1. Placing the 3 1/8" Light Blocker at the back of the window opening.
2. Placing the 3 1/8" Light Blocker directly behind the front 2 3/8" Light Blocker.

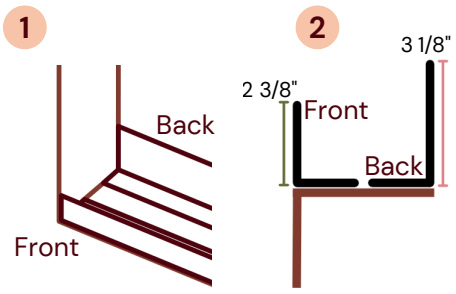


Quick pointers

"Dry fit" the side tracks without removing the adhesive strip to ensure they fit into the height of the window opening and they will fit with the headrail without issue. Make adjustments as needed.


1. Peel off the adhesive tape from the bottom of the light blocker. Then firmly place the 2 3/8" light blocker in the bottom of the window opening flush with the wall.

   Repeat step 1 with the back 3 1/8" bottom light blocker.

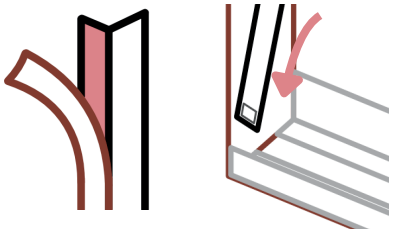


2. You'll follow the instructions in step one for the side 1 5/8" light blockers; you'll slide this one in just behind the bottom track piece with the adhesive square removed and pressed against the bottom track piece.

   The top will have a notch cutout to allow the side track to be applied just below the shade headrail. The front top of the track sit in front of the headrail fabric with a velcro strip to attach the valance for a clean look.

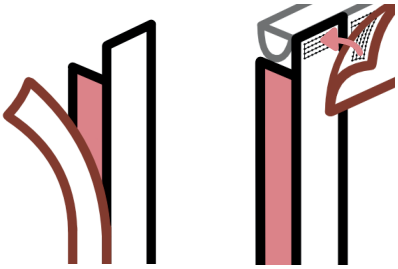

ATTACHING THE HANDLE

Cordless roman shades come with a clear plastic handle to help protect the fabric over multiple uses.

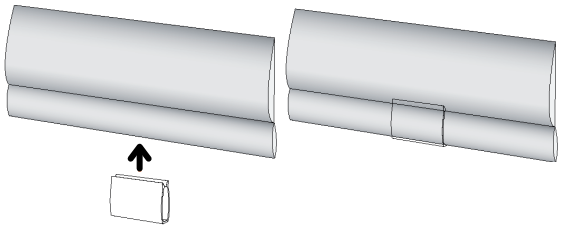

1. At the bottom pleat of the roman shade, locate the sewn-in hem bar.
2. Clip the handle to the center of the bottom hem bar.
3. To operate, grab the handle with your hand, and gently lift or lower the hem bar; the shade will stay in place when released.


CLEANING INSTRUCTIONS

1. For regular maintenance, use a duster or a vacuum with a brush attachment and run it over the front and back of the shade.
2. To spot clean stains, use a damp rag with a very mild, gentle detergent or soap. Dab at the affected spots; DO NOT RUB! Let the dampened area air dry and repeat as necessary.
3. If your roman shade has wrinkles, you can use a basic steamer to remove them. Hold the steamer roughly six inches away from the fabric and wave the steamer back and forth over the wrinkled areas.

All fabrics are different and some may be easier to clean than others. We recommend cleaning your shades as often as once a month.

Child Friendly

CHILD SAFETY WARNING



Corded window blinds and shades can be a strangulation risk or cause serious injury to young children and pets. When using corded window treatments, use the following tips to keep them safe:

- NEVER place a crib by a window!
- Move furniture that children can climb on away from the window.
- Always use cord cleats with corded products.
- Secure child-safe tensioners for continuous cord loop chains to the wall or window encasement.
- Keep cords up and away from your child's reach.

PROGRAMMING AND USING THE REMOTE

Motorization Only

Quick pointers

The Motorized Shades are pre-programmed and arrive in Sleep Mode. Please wake the motor before attempting pairing and operation. These also will arrive with only 30% charge for safety reasons, so you may need to charge the product fully before first use.

Press and Hold the Setting Button for 6 Seconds until you hear the motor move and the lights on it flash red 4 times.



5-Channel Remote



15-Channel Remote



Back of Remote



Battery Cover



Raise/Lower




Slowly Raise/Lower



Stop/Favorite




Channel Previous/Next

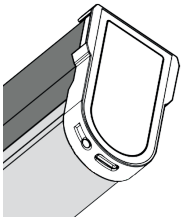


Motor Head


PAIRING THE REMOTE

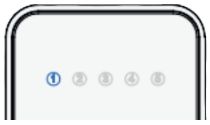


1 Select the desired channel.

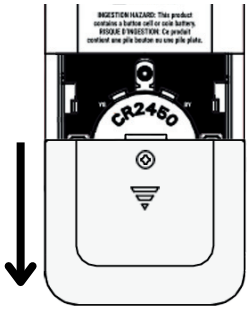


2 Remove the battery cover by unscrewing the tiny screw and sliding it off.

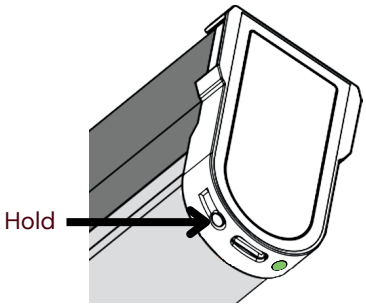

3 Hold the Setting Button on the motor until the shade moves up and down (this is called a Jog) and the light blinks green.

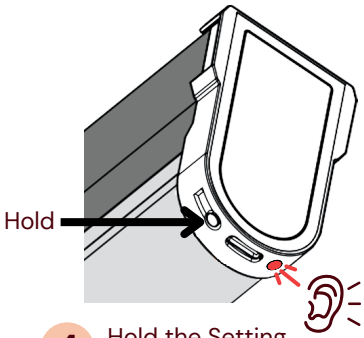


4 Hold the Setting Button again until the shade beeps and the motor light blinks red.

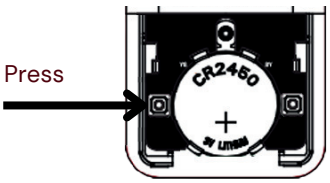


5 While the motor beeps, press the "C" button on the remote. The shade will jog to confirm.


REMOVING A SHADE FROM A CHANNEL

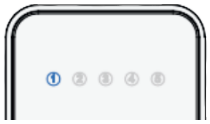

1 Select the desired channel.

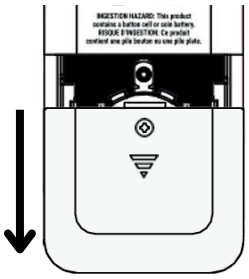


2 Remove the battery cover by unscrewing the tiny screw and sliding it off.

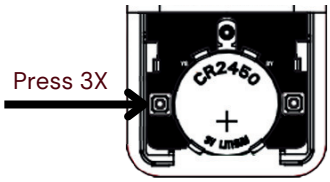


3 Press the “C” button quickly 3 times. The shade will jog and blink green to confirm.

SETTING AND REMOVING THE FAVORITE POSITION


Setting the Favorite

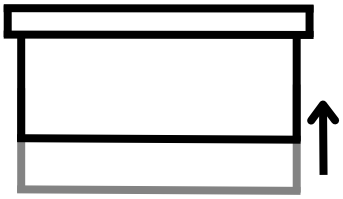

1 Set the shade to the desired Favorite Position.

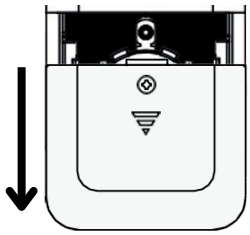

2 Remove the battery cover by unscrewing the tiny screw and sliding it off.

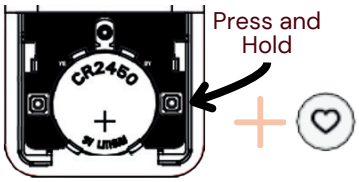

3 Press and hold the “L” Button, then quickly press and hold the Heart Button. The shade will beep and blink green to confirm.


Removing the Favorite

1 Press the Heart button to move the shade to the Favorite Position.


2 Follow steps 2-3 above to remove the shade’s favorite.

3 Repeat steps for setting the Favorite Position above to set the new Favorite Position.

Change Motor Speed

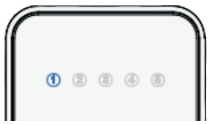


1 Ensure the remote is on the channel desired.



2 Hold the Heart button, then press the Up Button quickly. The Green light on the shade will blink confirmation.

3 Speeds: Standard, Comfort and Slow.

Changing the Battery

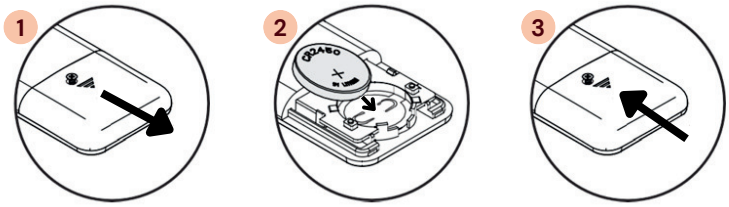

1 Unscrew the small screw on the back battery cover and slide it off.


2 Remove the old battery, and then install the new one with the Numbers and + sign facing up. Make sure it clips into the socket.

3 Slide the battery cover back on and tighten the screw to secure it.

INSTALLING THE REMOTE'S WALL MOUNT

Optional

1. Find a spot where you would like to place the remote mount.
2. Mark where you will drill the screws and install the optional anchors. Screw the screws through the holes.
3. After they're installed, insert the cap over the screws.

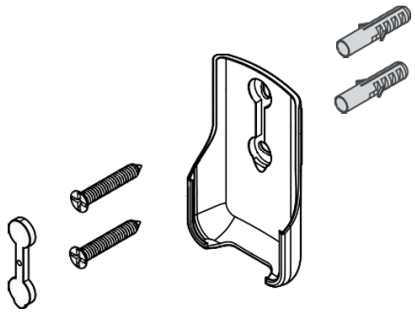

TUISS SMARTVIEW APP

Downloading and Accessing the App

1. Search for the Tuiss SmartView app in the App Store or Google Play Store or Scan the QR code on the front of the swing label attached to your shades.
2. Open the app and follow the steps to Create an Account.
3. Tap Continue. When you open the app for the first time, you'll be asked by SmartView to use your phone's Bluetooth. Enable this and then continue.



Quick pointers

Waking the Shade


Wake the motor up by pressing and holding the Setting Button on the motor for 6 seconds. The light will flash 4 times. If you've already woken the motor to add the remote, you can skip this step.

Adding the Shade



1. Select "Add my first Blind". Scan the QR code on the Back of the swing label.
2. The blind will jog or move up and down briefly to acknowledge pairing.
3. Press "Found it!" and it will jog to confirm pairing.
4. Press Save, then Done if you have no further shades. If you want to add another, select "Add new Blind"

Operation

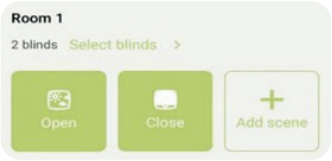

Selecting Open will move the shade to the top limit and Close to the bottom limit.

All shades assigned to the same room will move simultaneously.

To move individual shades, press the "Select blinds" option and then tick the box for the shade you'd like to use.

Drag the shade up or down to precisely position your shade.