SelectBlinds

Installation Guide: *Roman Shades*

Cordless | Continuous Cord Loop
Wireless Motorization | EVE Motorization

HARDWARE AND PARTS INCLUDED

All Lift Styles

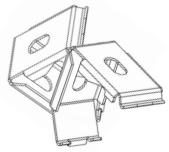

BRACKETS



SCREWS

Continuous Cord Loop Only



TENSIONER

Motorization Only





REMOTE CHARGER



BATTERY PACK

TOOLS REQUIRED



PENCIL



TAPE MEASURE



POWER DRILL



5/64" DRILL BIT



LEVEL



PHILLIPS DRILL BIT



PHILLIPS SCREWDRIVER



STEP LADDER

Quick pointers

1. If you use your own screws instead of those provided, be sure to pre-drill a small hole with a 5/64" drill bit before the final screws go in to attach brackets.
2. If you're using wall anchors, pre-drill with a 1/4" drill bit instead, then tap the wall anchors in place before drilling in the screws.



LEVEL 2 INSTALLATION

Installation

INSIDE MOUNT

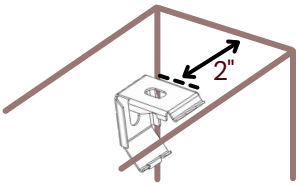

1. In the top right of your window, measure 2" from the left and right edges of your window opening. Mark these with a pencil.
2. Center your bracket over this mark with the front of the bracket in line with the top edge of the window opening. Mark the holes with a pencil.
3. Predrill holes with a 5/64" drill bit, then line the brackets up and install.

OUTSIDE MOUNT

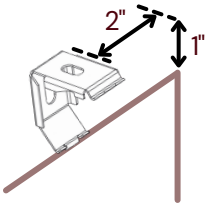

1. At the top left and right corners of the window, measure the height you'd wish to place your brackets (a minimum of 1" above the window opening) and mark it with a pencil.
2. At least 2" away from the edge the window below, line the bracket up with the top of the window opening. Mark the screw holes.
3. Predrill holes with a 5/64" drill bit, then line the brackets up and install.

ATTACHING THE SHADE

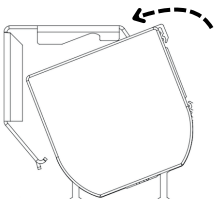

1

With the shade in hand, hook the front of the bar onto the front hook of the bracket. Push the shade back and tilt the back up to lock it in place.

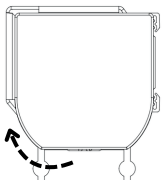

2

Locate the idle end (on the left side) and pull the pin out that is keeping the shade locked in place for shipment. It's now ready to use!

INSTALLING THE TENSIONER

Continuous Cord Loop Only

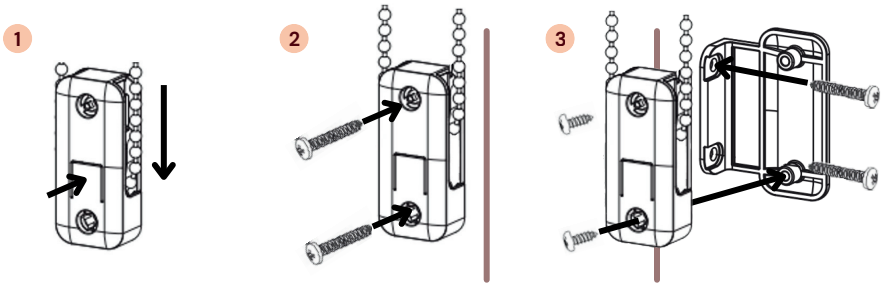

1. Pull the tensioner down to unlock the tensioner while simultaneously pulling the continuous cord loop taut. Follow step 2 for Inside Mount and step 3 for Outside Mount.
2. Hold the tensioner to the wall while keeping the cord taut, and screw in the long screws to secure it in place.
3. Keep the tensioner taut and attach it to the bracket. Mark a line on the wall above and below the bracket. Center the bracket between these lines and screw it into the wall. Then reattach the tensioner to the bracket with the screws.

CLEANING INSTRUCTIONS

1. For regular maintenance, use a duster or a vacuum with a brush attachment and run it over the front and back of the shade.
2. To spot clean stains, use a damp rag with a very mild, gentle detergent or soap. Dab at the affected spots; DO NOT RUB! Let the dampened area air dry and repeat as necessary.
3. If your roman shade has wrinkles, you can use a basic steamer to remove them. Hold the steamer roughly six inches away from the fabric and wave the steamer back and forth over the wrinkled areas.

   All fabrics are different and some may be easier to clean than others. We recommend cleaning your shades as often as once a month.

Child Friendly

CHILD SAFETY WARNING



Corded window blinds and shades can be a strangulation risk or cause serious injury to young children and pets. When using corded window treatments, use the following tips to keep them safe:

- NEVER place a crib by a window!
- Move furniture that children can climb on away from the window.
- Always use cord cleats with corded products.
- Secure child-safe tensioners for continuous cord loop chains to the wall or window encasement.
- Keep cords up and away from your child's reach.

PROGRAMMING AND USING THE REMOTE

Motorization Only

Quick pointers

Before starting programming, attach the included battery pack. Please plug the charger into the shade to activate it from shipping mode. If you are satisfied with the current limits, you can use the shade as is. Otherwise, follow the steps below to walk through programming new limits for this shade.

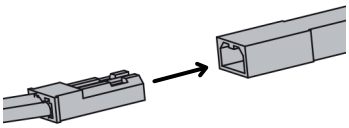

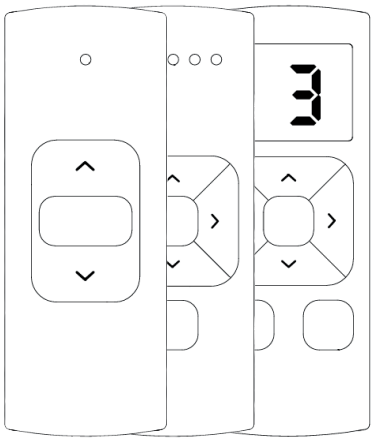

1-Channel Remote | 5-Channel Remote | 15-Channel Remote

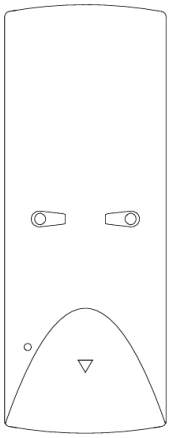

Back of Remote

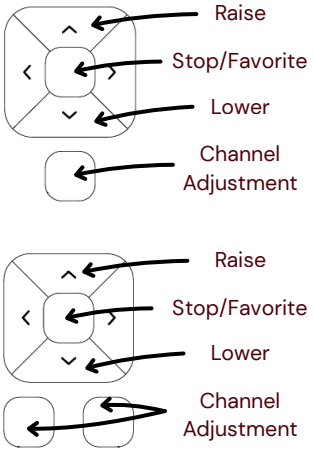

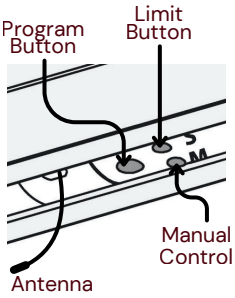

Motor
Located near center of headrail

PAIRING THE REMOTE

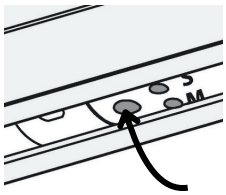

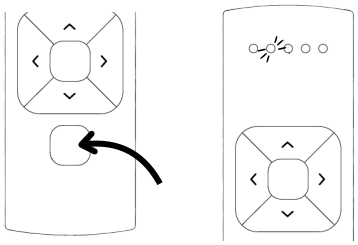

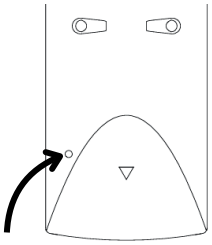

1. Quick press the setting button on the motor. The shade will raise and lower in place noting programming mode is activated.
2. While the shade is "stepping" up and down, select which channel the shade will be on the remote.
3. Flip the remote over and press the pair button on the remote. The shade will stop moving briefly to confirm.

POLARITY

1. Press the down button on the remote to check if it moves the right direction. If it's going the right direction, skip to the next page.
2. Stop the shade, then press and hold up and down on the remote. The shade will stop moving briefly to confirm.
3. Test the shade to make sure it's going the correct direction.

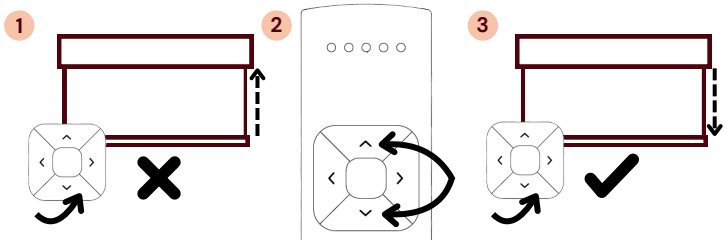

Setting Limits

Motorization Only

Lower Limit

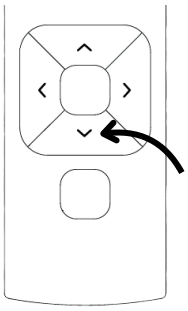



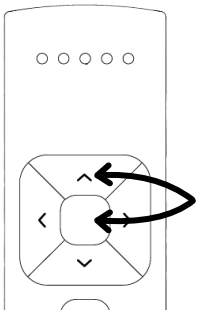

1. Press the down button to move the shade.
2. Once down, make sure you have it in the desired position.
3. Press and hold the up and stop button to set the lower limit.

Upper Limit

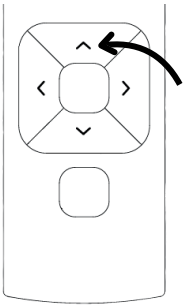



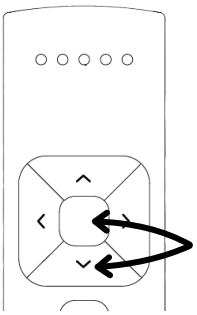

1. Press the up button to move the shade.
2. Raise the shade, then make sure to stop it before rolling up into the headrail.
3. Press and hold the down and stop button to set the upper limit.

Favorite Limit

1. Quick press the setting button on the motor. The shade will raise and lower in place noting programming mode is activated.
2. While the shade is “stepping” up and down, select which channel the shade will be on the remote.

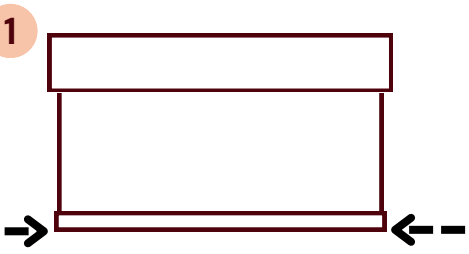

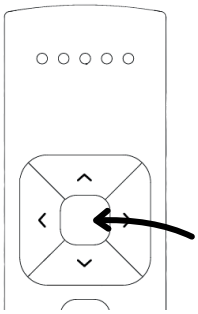

Deactivate Program Mode

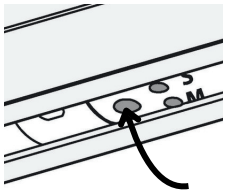

Shortly press the program button to deactivate program mode. The shade will stop moving up and down signaling the shade is ready for normal use.

Shortly press the program button if you need to make any additional changes using the steps above for each limit as necessary.

PROGRAMMING AND USING THE REMOTE

EVE Motorization Only

Quick pointers

Before starting programming, please plug the charger into the shade to activate it from shipping mode. If you are satisfied with the current limits, you can use the shade as is.

The Eve MotionBlinds motor can be controlled by operating the pull wand, using an optional remote, or by connecting the shade to a Smart Home hub with Thread Border Router functionality, using the built-in Matter/Thread technology.

While this is Smart Home Compatible, if you don't own a smart home device or don't want to operate it with an app, skip down to the remote pairing and setup section.

Pairing the App and the Shade

Scan the Matter Setup Code through the app from the smart home platform of your choice to add Eve Motionblinds to the platform.

Eve MotionBlinds needs end positions to work properly.

End positions can be programmed in two ways:

In the Eve app or by the end position programming button on your blind (see the "Setting Limits" page below.



Example QR

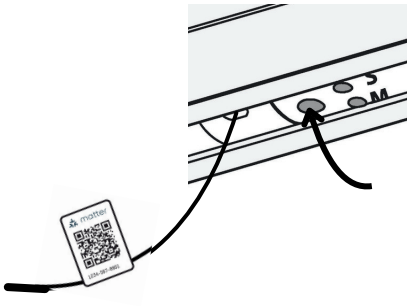

After scanning, you can hide your Matter Setup Code.

For help on adding EVE Motionblinds to your Matter or Thread smart home capable application, scan the QR code to the left.

PROGRAMMING AND USING THE REMOTE

EVE Motorization Only

Quick pointers

Before starting programming, attach the included battery pack. Please plug the charger into the shade to activate it from shipping mode. If you are satisfied with the current limits, you can use the shade as is. Otherwise, follow the steps below to walk through programming new limits for this shade.

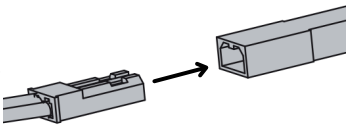

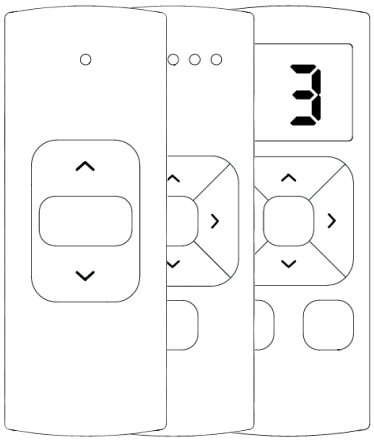

1-Channel Remote | 5-Channel Remote | 15-Channel Remote

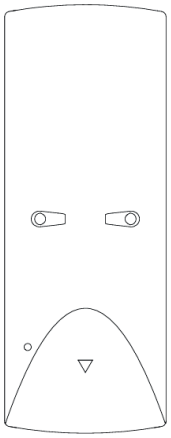

Back of Remote

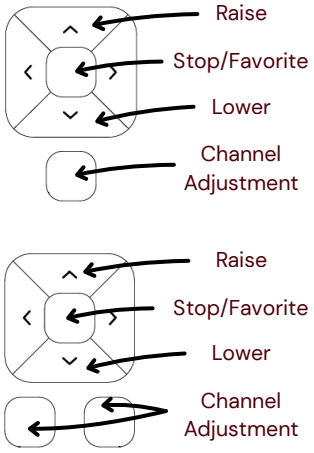

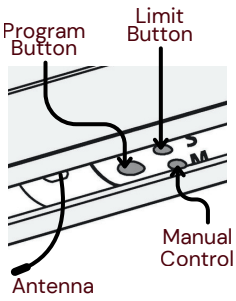

Motor
Located near center of headrail

PAIRING THE REMOTE

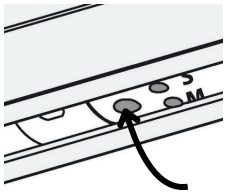

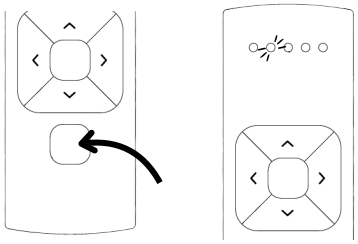

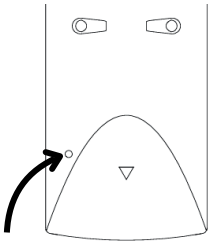

1. Quick press the setting button on the motor below the pull cord. The shade will raise and lower in place noting programming mode has started.
2. While the shade is "stepping" up and down, select which channel the shade will be on the remote.
3. Flip the remote over and press the pair button on the remote. The shade will stop moving briefly to confirm.

POLARITY

1. Press the down button on the remote to check if it moves the right direction. If it's going the right direction, skip to the next page.
2. Stop the shade, then press and hold up and down on the remote. The shade will stop moving briefly to confirm.
3. Test the shade to make sure it's going the correct direction.

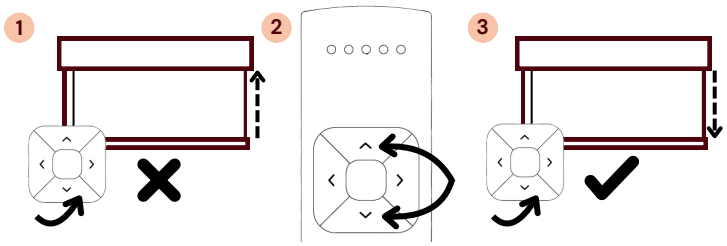

Setting Limits

Motorization Only

Lower Limit

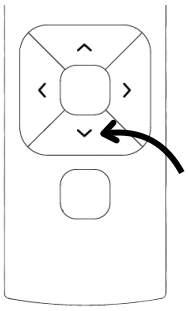



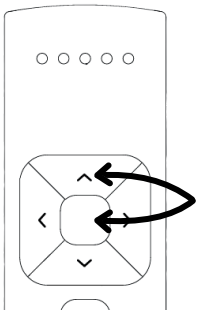

1. Press the down button to move the shade.
2. Once down, make sure you have it in the desired position.
3. Press and hold the up and stop button to set the lower limit.

Upper Limit

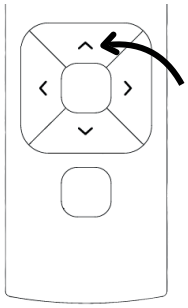



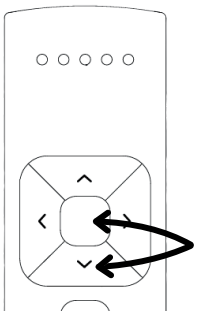

1. Press the up button to move the shade.
2. Raise the shade, then make sure to stop it before rolling up into the headrail.
3. Press and hold the down and stop button to set the upper limit.

Favorite Limit

1. Quick press the setting button on the motor. The shade will raise and lower in place noting programming mode is activated.
2. While the shade is “stepping” up and down, select which channel the shade will be on the remote.



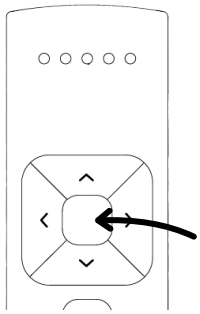

Deactivate Program Mode

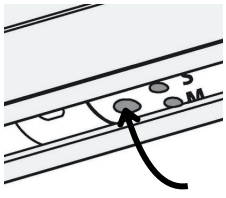

Shortly press the program button below the cord to deactivate program mode. The shade will stop moving up and down signaling the shade is ready for normal use.

Shortly press the program button below the cord if you need to make any additional changes using the steps above for each limit as necessary.