

# MEASURE INSTRUCTIONS

---

## CONTENTS:



### INSIDE MOUNT

**PAGE 2–4**

---



### OUTSIDE MOUNT

**PAGE 5–7**

---



### CAFE STYLE

**PAGE 8–14**


**MEASURE INSTRUCTION**

---


# INSIDE MOUNTED SHUTTERS

---


Measuring for shutters is easy. Just follow these simple steps and you will be on your way to ordering beautiful new shutters for your windows. Before you start, you will need:

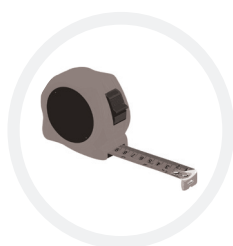

**A STEEL  
MEASURING TAPE**  
(1/8" increments)

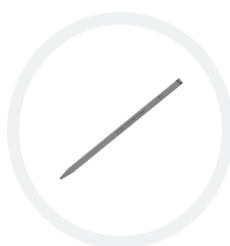


**PENCIL**

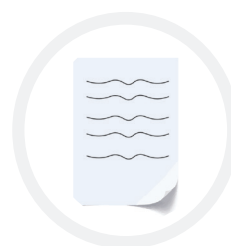



**PIECE OF  
PAPER**

You can also download our handy printable measuring worksheet found on all [Selectblinds.com](https://www.selectblinds.com) product pages.


**If you want your shutters to hang inside your window frame, you must first make sure the window is deep enough for an inside mount.** Measure the depth from the glass to the outer edge of your window casing. If the depth is less than 2 1/4", you will need to choose outside mount.

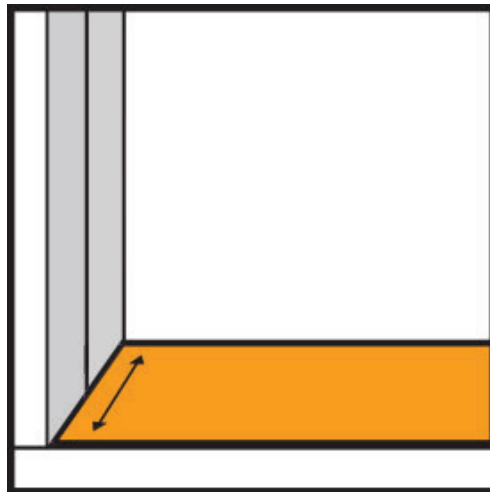

**For inside mount, you will measure the window in 6 locations.** First, measure the exact width from left to right of the inside edge of the window frame in 3 places; the top, middle, and bottom. If these measurements are different, record the smallest width measured to the nearest 1/8".

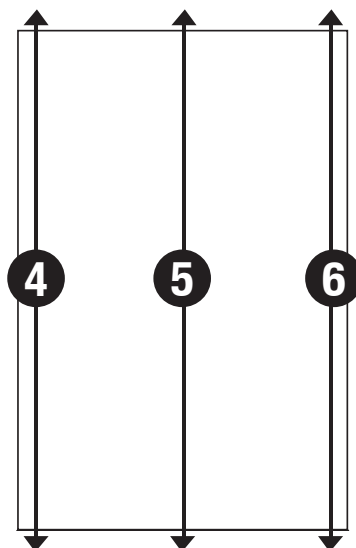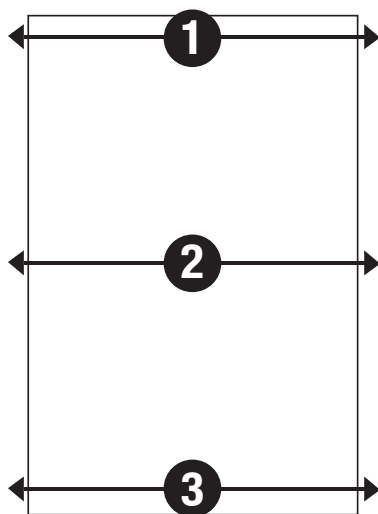

Repeat these steps for the height, but measure from the top to bottom of the window casing in three places; top left, center, and the top right down to the window sill. Record the smallest height measured to the nearest 1/8".

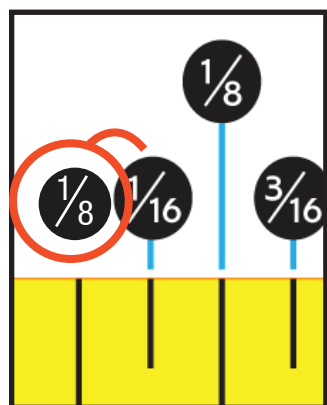

**Please remember that if you are coming up with 1/16" increments, you will need to round down to the nearest 1/8".**

**Don't stress**, if you need extra help measuring or ordering your new shutters, feel free to contact our customer service team by phone at **888-257-1840** or by using the Live Chat feature on our website. Our friendly agents are shutter experts and are always happy to help.

\*Representantes que hablan espanol estan disponibles.

You also might want to check out our FAQ's or Glossary page for general window covering questions.  
[www.selectblinds.com](http://www.selectblinds.com)

**MEASURE INSTRUCTION**

---

# OUTSIDE MOUNTED SHUTTERS


---

Measuring for shutters is easy. Just follow these simple steps and you will be on your way to ordering beautiful new shutters for your windows.


**Before you start, you will need:**



**A STEEL  
MEASURING TAPE**  
(1/8" increments)

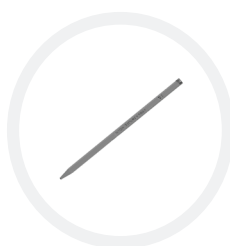


**PENCIL**

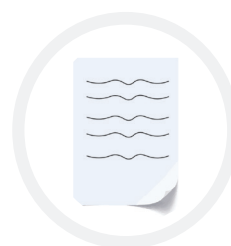

**PIECE OF  
PAPER**

You can also download our handy printable measuring worksheet found on all [Selectblinds.com](https://www.selectblinds.com) product pages.

**Measure the inside of the window in 6 locations.** First, measure the exact width from left to right of the inside edge of the window frame in 3 places; the top, middle, and bottom. If these measurements are different, record the largest width measured to the nearest 1/8".


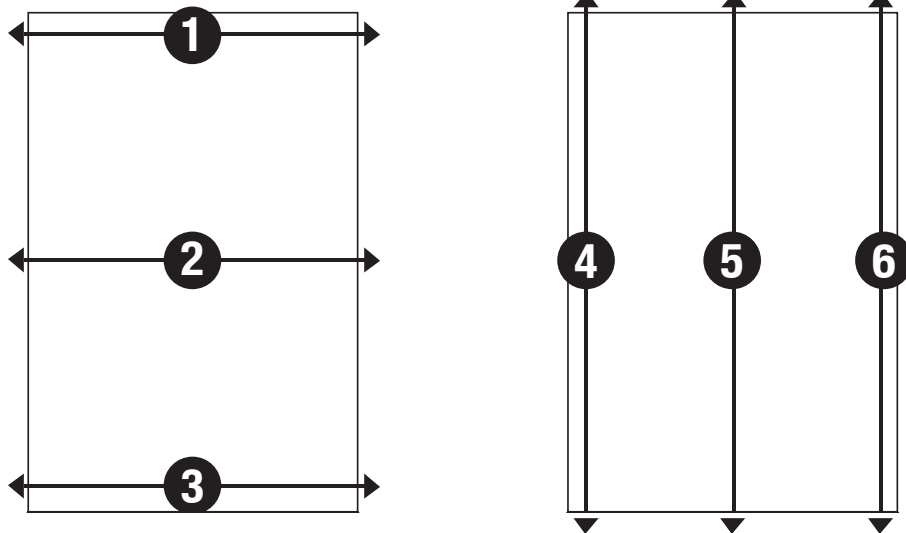


Repeat these steps for the height, but measure from the top to bottom of the window casing in three places; top left, center, and the top right down to the window sill. **Record the largest height measured to the nearest 1/8".**



**If you are choosing a Standard L Frame shutter, you will add 4" to the width measurement.** For this frame type, you will need to add 2" to the height measurement if you have a window sill, or add 4" to the height if your window does not have a sill.

**If you prefer the Designer Frame**, you will add 5" to the width measurement. For this frame type you will need to add 2 ½" to the height measurement if you have a window sill, or add 5" to the height if your window does not have a sill.

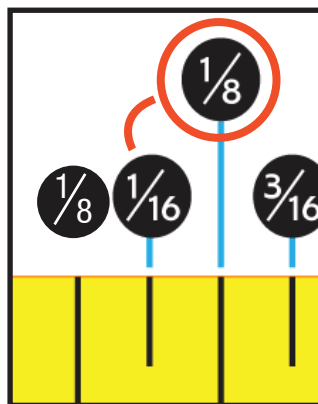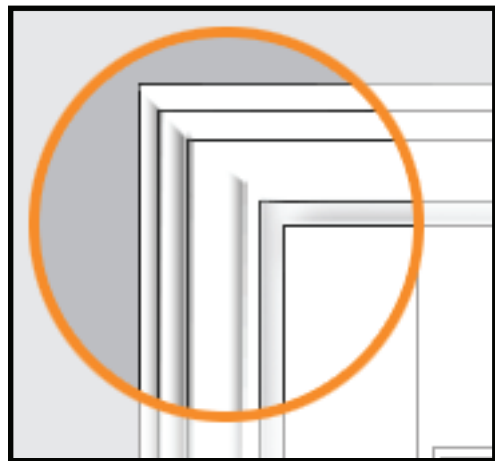


**Please remember if you are coming up with 1/16" increments, you will need to round up to the nearest 1/8" .**

**Don't stress**, if you need extra help measuring or ordering your new shutters, feel free to contact our customer service team by phone at **888-257-1840** or by using the Live Chat feature on our website. Our friendly agents are shutter experts and are always happy to help.


\*Representantes que hablan espanol estan disponibles.

You also might want to check out our FAQ's or Glossary page for general window covering questions.  
[www.selectblinds.com](http://www.selectblinds.com)


**Determine the depth of your window:** Measure the depth between the two stops that extend in front of the window frame. Try to measure the shortest point to determine the overall depth that you will have, and write down that number as you will use it during the ordering process when you select the louver size for your shutters.

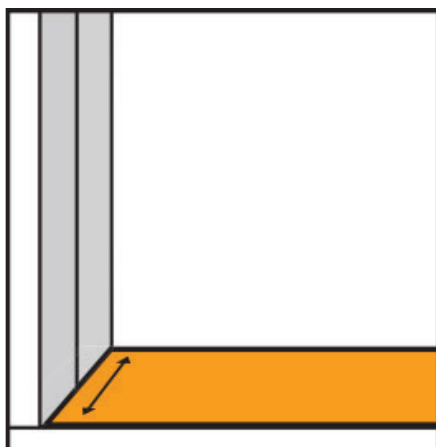

A minimum recess depth of 2 1/4" is required for a **2 1/2" louver**

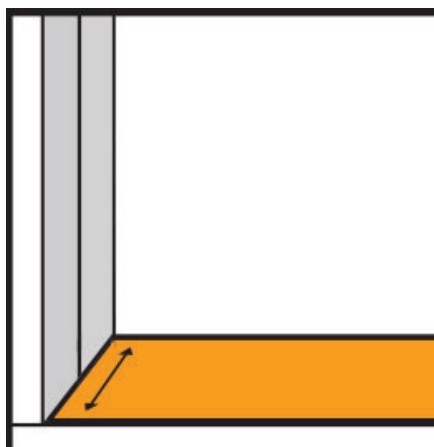

A minimum recess depth of 2 7/8" is required for a **3 1/2" louver**

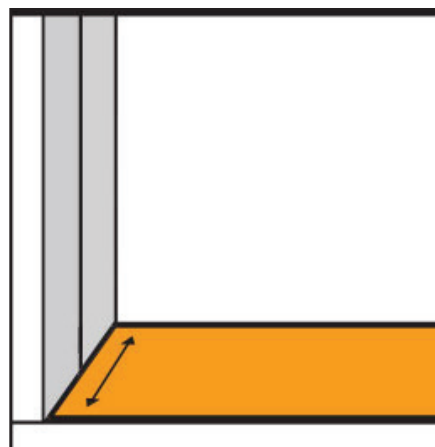


A minimum recess depth of 3 1/2" is required for a **4 1/2" louver**


**Please note:** Our factory will make all necessary deductions to the exact window measurements that you provide us to ensure your product will fit perfectly in your window. **Do not make your own deductions. Also, it is very important that you do not add to the width to make up for these deductions.**




**Frame Sides:** Selecting the number of sides for your shutter frames is crucial to the ordering process.

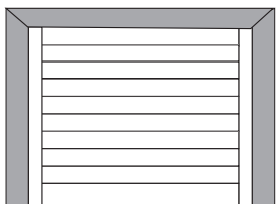


3-Sided Frame— Used for windows with stone, granite, or marble window sills

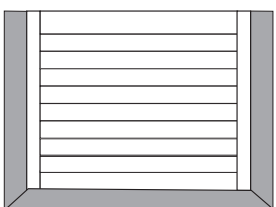

3-Sided Frame for Doors— To be used only if the shutter panel will take the place of a door. (Not to be used for French Doors.)

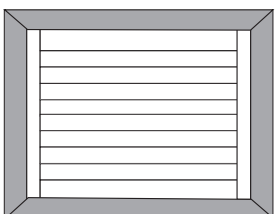


4-Sided Frame— Most common application for windows without protruding sills, handles or cranks.

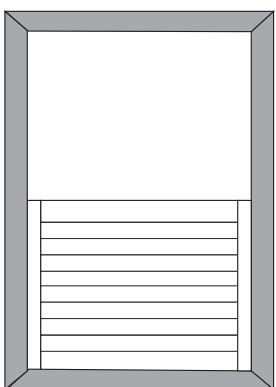


4-Sided Frame for Windows with Extending Sill— Used on window applications that have a wooden sill, the bottom of the frame will rest flat on the sill

At this point, you will need to choose the **frame style** that will suit your needs.

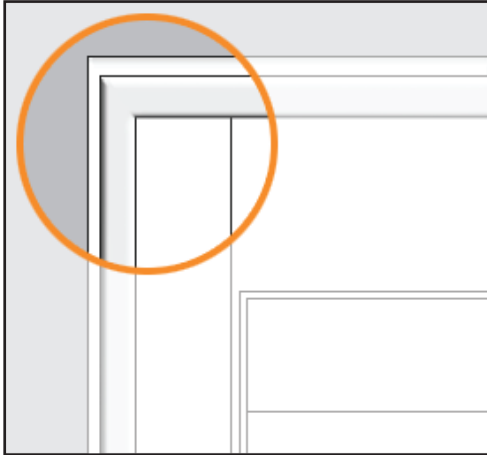

The **Standard L Frame** will not add decorative molding to your window.

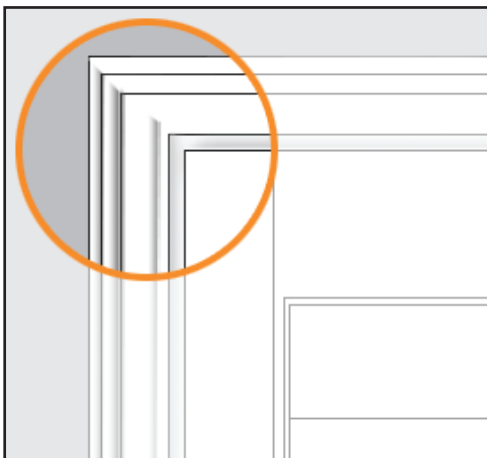

The **Standard T Frame** will add decorative molding to your window.

– We highly suggest ordering a Trim (T) Frame if you do not have existing molding around your window. Since this frame will add the appearance of decorative molding around your window it is very easy to install and hides any imperfections, and if your window is out-of-square within  $\frac{1}{4}$ " the frame will cover any gaps that you may have.

## KEEP IN MIND

We always recommend ordering samples of all our products. If you would like samples of the color you are welcome to place that order online or by phone. If you would like for us to send you out samples of our frames to see what works best for you, please call an agent at **888-257-1840** and we would be happy to request those directly from the factory.

**Don't stress**, if you need extra help measuring or ordering your new shutters, feel free to contact our customer service team by phone at **888-257-1840** or by using the Live Chat feature on our website. Our friendly agents are shutter experts and are always happy to help.

\*Representantes que hablan espanol estan disponibles.

You also might want to check out our FAQ's or Glossary page for general window covering questions.  
[www.selectblinds.com](http://www.selectblinds.com)