


Installation Guide: Everyday Cordless Shade

Cordless Lift | Adjustable Headrail

HARDWARE AND PARTS INCLUDED



MOUNTING
BRACKETS



VALANCE
CLIP



VALANCE
CORNER



HANDLE



SCREWS



VALANCE
RETURN

TOOLS REQUIRED



PENCIL



TAPE MEASURE



POWER DRILL



5/64" DRILL BIT




LEVEL



PHILLIPS DRILL BIT




PHILLIPS SCREWDRIVER

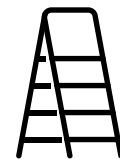

STEP LADDER


Adjustable Headrail

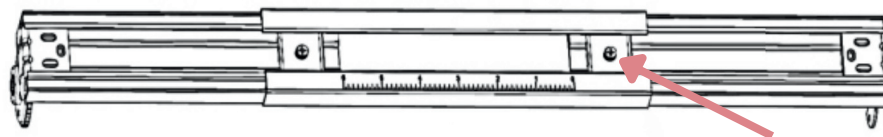

- Loosen the screws on right side of the headrail (The ruler etched into it will be facing you).
- Contract the headrail to the width needed and then resecure the screw.
- For Inside Mount, make sure the width is 1/8" smaller than the total window width at the top.

Quick pointers

Clip on the fascia brackets before installing the headrail for ease of installation.

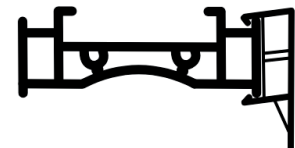

Installation

INSIDE MOUNT




- 1 Line up the brackets with the predrilled holes. Hold the headrail into the top of the window opening flush with the wall.




- 2 Drill through the predrilled holes and secure the brackets into the top of the window opening.

OUTSIDE MOUNT

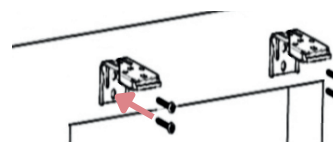


- 1 Install the brackets about 1" away from the edge of the window opening.

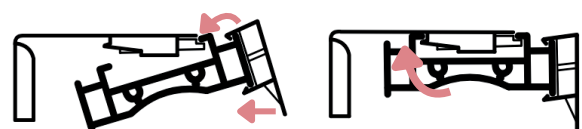

- 2 Hook the front lip of the headrail onto the front hook of the bracket. Push the headrail back and then rotate the back of the headrail up. You may hear a click.


Installing the Roller

1

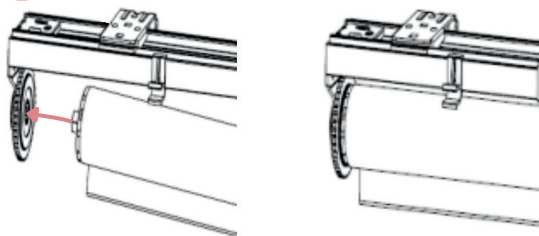

Insert the spring loaded retractable pin end of the roller into the left side of the headrail roller bracket.


2

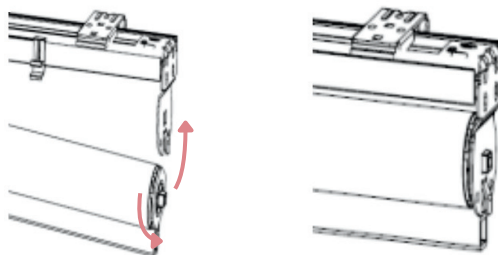

Rotate the clear dial on the other end of the roll to retract the other pin. Slide it up and into the headrail roller bracket and seat it into the square shaped hole.


3

Remove the tension pin from the spring loaded retractable end of the roller. Rotate the dial down towards you on the left side of the roller to increase tension. Rotate the dial up and away to decrease tension.

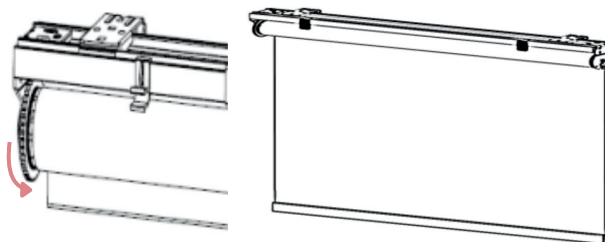


Installing the Valance and Handle

1

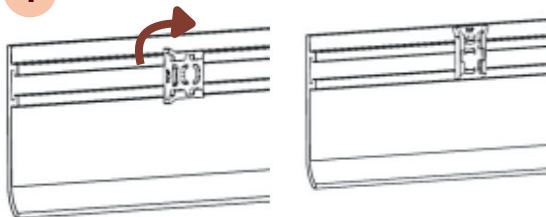


Place the funnel-shaped valance clip in the groove on the back of the valance. Rotate it so the wide end is facing up. Slide the valance clip left or right to line it up with the valance headrail clip.

2

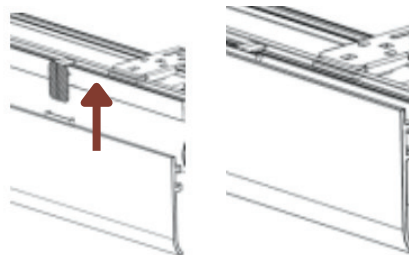

Slide the valance up onto the headrail valance clip. You'll hear a series of clips signifying that it's clipping in place.

Valance Return (Outside Mount Only)

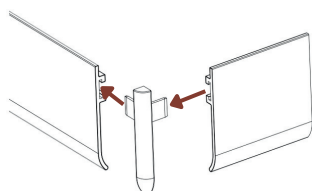

Slot the corner connector into the groove on the back of the valance with the curved side facing down. Slide the short valance return into the other side of the corner bracket.

Attaching the Handle




Hook the top of the handle on the top of the bottom rail. Rotate the handle downward so that the bottom of the handle clicks onto the bottom of the bottom rail. Test out shade operation.

Installation Guide: *Everyday Cordless Shade*

Cordless Lift | Exposed Roll

HARDWARE AND PARTS INCLUDED

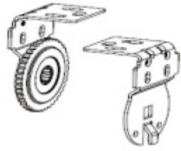

MOUNTING
BRACKETS



HANDLE



END CAPS



SCREWS

TOOLS REQUIRED



PENCIL



TAPE MEASURE



POWER DRILL




5/64" DRILL BIT




LEVEL



PHILLIPS DRILL BIT

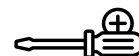

PHILLIPS SCREWDRIVER

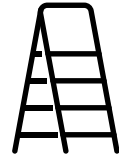

STEP LADDER

Installation

INSIDE MOUNT

Top Mount

Place a bracket in each corner of the window opening, lined up flush with the wall. Mark the screw hole placement with a pencil through the top of the bracket and then predrill your holes.



Install the bracket with the included screws. Make sure the bracket width is about 1/8" smaller than the window width.

Side Mount

Place a bracket in each corner of the window opening, lined up flush with the wall. Mark the screw hole placement with a pencil through the side of the bracket and then predrill your holes. Install the bracket with the included screws.




OUTSIDE MOUNT

- 1 Turn the bracket 90 degrees so the flat part will be placed against the wall. Make sure the window width is subtracted from the total width of the roller.
- 2 Whatever is left over, divide that number in half and mark that distance on each side of the window opening.
- 3 About 2"-2 1/2" above the window opening, above the marks you've made for the edge of the brackets, make another mark. This will be where the top edge of the bracket will be.
- 4 Hold your bracket up to the top mark with the flat edge of the bracket lined up. Make a mark for the holes and predrill your holes. Screw the brackets in place with the provided screws.




Installing the Roller

1

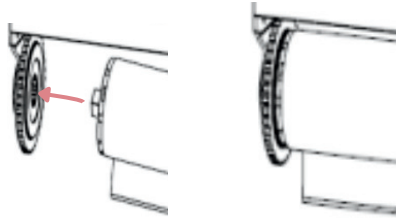

Insert the spring loaded retractable pin end of the roller into the left side of the headrail roller bracket.


2

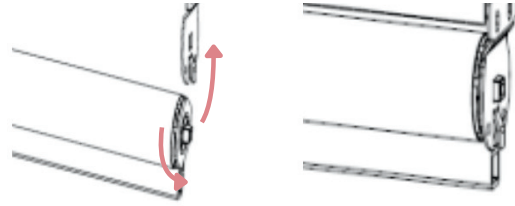

Rotate the clear dial on the other end of the roll to retract the other pin. Slide it up and into the headrail roller bracket and seat it into the square shaped hole.

3

Remove the tension pin from the spring loaded retractable end of the roller. Rotate the dial down towards you on the left side of the roller to increase tension. Rotate the dial up and away to decrease tension.

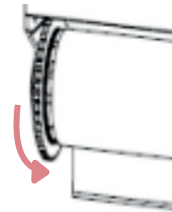


Installing the End Caps and Handle

End Cap Install (Outside Mount Only)



Slide the end caps over the brackets to provide it a smooth and minimalist side for the roller. You'll hear a click when they lock in place.

Attaching the Handle

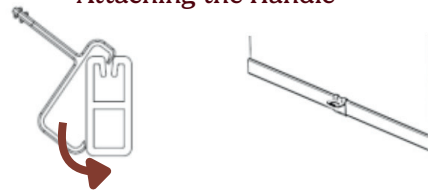

Hook the top of the handle on the top of the bottom rail. Rotate the handle downward so that the bottom of the handle clicks onto the bottom of the bottom rail. Test out shade operation.

CLEANING INSTRUCTIONS

1

For regular maintenance, use a duster or a vacuum with a brush attachment and run it over the front and back of the shade.

2

To spot clean stains, use a damp rag with a very mild, gentle detergent or soap. Dab at the affected spots; DO NOT RUB! Let the dampened area air dry and repeat as necessary.

3

All fabrics are different and some may be easier to clean than others. We recommend cleaning your shades as often as once a month.