

SelectBlinds® Installation Guide: Wood Blinds

Cordless Lift




Installation
Inside Mount



Installation
Outside Mount

HARDWARE AND PARTS INCLUDED




BRACKETS



SCREWS



VALANCE CLIPS



CENTER SUPPORT
BRACKET

TOOLS REQUIRED



PENCIL




TAPE MEASURE



POWER DRILL



5/64" DRILL BIT




PHILLIPS SCREWDRIVER



PHILLIPS DRILL BIT



LEVEL

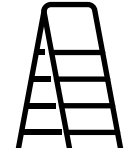

STEP LADDER


Quick pointers

- 1 If you use your own screws instead of those provided, be sure to pre-drill a small hole with a 5/64" drill bit before the final screws go in to attach brackets.
- 2 If you're using wall anchors, pre-drill with a 1/4" drill bit instead, then tap the wall anchors in place before drilling in the screws.



LEVEL 1 INSTALLATION

INSIDE MOUNT

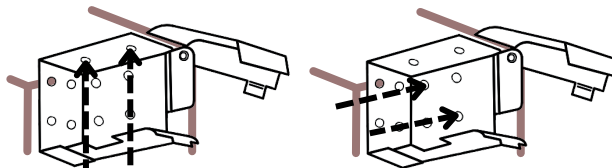

1

Position the bracket in the top corner of the window.


2

Mark the holes either on the top or side of the bracket.

3

Align the brackets with the holes and use a Phillips drill bit to install the screws.

OUTSIDE MOUNT

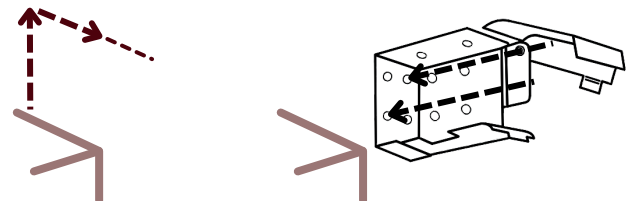

1

Measure 3" up from the top of the window opening. Take your width and subtract it from the width of the window. Divide this in half and make a mark this distance away from the edge of the window opening.

2

Align the top back of a bracket with this mark, and use the holes in the back of the bracket to mark screw placement.


3

Align the brackets with the holes, and use a Phillips drill bit to install the screws.


CENTER SUPPORT INSTALL

For Inside Mount, line these up with the edge of the window opening in-line with the side brackets. Mark placement, then screw in through the top of the bracket.

For Outside Mount, mark a line 3" above the window opening. Line the bracket up with this line and then mark the screw holes for the bracket. Install the screws through the back of the bracket.

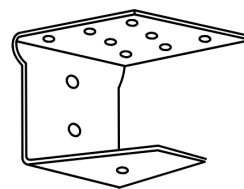


ATTACHING THE BLIND

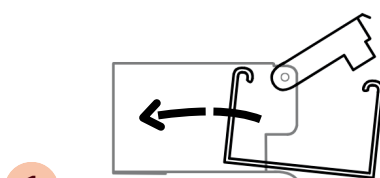


1

Tilt the headrail forward so that the back of the headrail can slide into each of the box brackets.

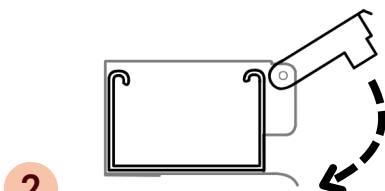

2

Slide it back to rest inside the bracket on the left and right side.

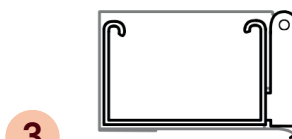

3

Swing the front arm of the bracket down and latch it into place.

ATTACHING THE VALANCE

1


Turn the valance magnet clip 90 degrees to the left or right so it can slot into the back of the valance groove.

2

Turn the valance magnet clip so that the hook will be facing up at the top of the valance.

3

Hook the clips onto the lip on the top of the headrail and let the magnet attach for a strong hold.

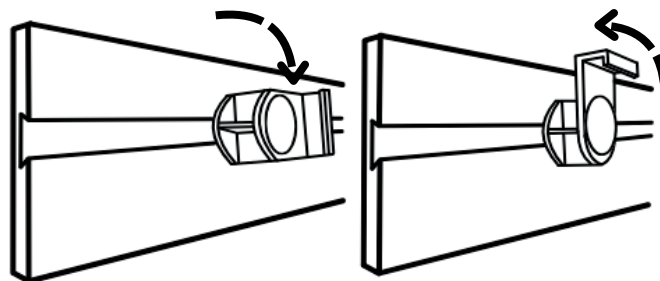


CLEANING INSTRUCTIONS

For regular maintenance, use a duster or a vacuum with a brush attachment and run it over the front and back of the blind.



CHILD SAFETY WARNING

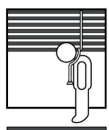

Corded window blinds and shades can be a strangulation risk or cause serious injury to young children and pets. When using corded window treatments, use the following tips to keep them safe:

● NEVER place a crib by a window!

- Move furniture that children can climb on away from the window.
- Always use cord cleats with corded products.
- Secure child-safe tensioners for continuous cord loop chains to the wall or window encasement.
- Keep cords up and away from your child's reach.