

Installation Guide: No-Drill Stick On Curtain Track

TOOLS REQUIRED



PENCIL



TAPE MEASURE



LEVEL



WASH CLOTH



STEP LADDER

Quick pointers

Make sure the surface is flat to ensure the strongest hold. If you've just painted, allow 2 weeks for paint to fully dry/cure before installation.




LEVEL 1 INSTALLATION

The adhesive is VERY STRONG, so you'll need to be extra sure the area is fully wiped and ready before installation.


Installing the Track

Inside Mount

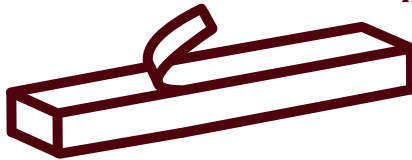

1

Peel off the adhesive from the top of the track. Make sure not to get anything stuck to it before you place it on the wall. Only peel the adhesive when you're ready to install.

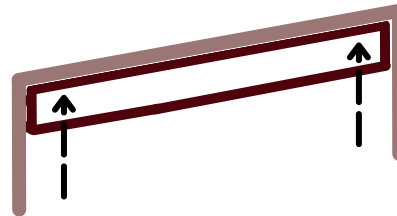

2


Slide the shade into the opening and press the track firmly up on the top of the window opening for about 30 seconds. Allow the shade 24 hours for the adhesive to fully set.

Hanging the Curtains

After the track has fully set, make sure you adjust the curtain hooks to the same height.

Then start hooking them onto the rings, starting from one side and working your way to the other.

Test the curtain operation by moving it along the track from side to side.

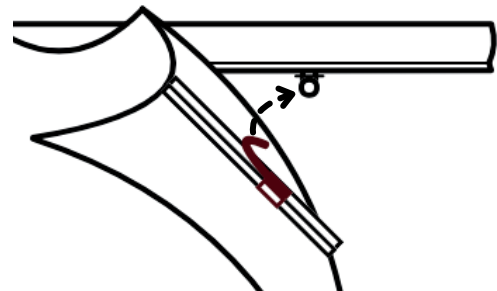

CLEANING INSTRUCTIONS

1

For regular maintenance, use a duster or a vacuum with a brush attachment and run it over the front and back of the shade.

2

To spot clean stains, use a damp rag with a very mild, gentle detergent or soap. Dab at the affected spots; DO NOT RUB! Let the dampened area air dry and repeat as necessary.

All fabrics are different and some may be easier to clean than others. We recommend cleaning your shades as often as once a month.