



Installation Guide: Total Blackout Stick On Vertical Cellular Shade

HARDWARE AND PARTS INCLUDED

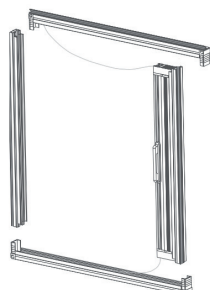

RAILS AND SHADE

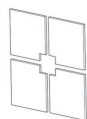

CORNER CAPS



LIGHT
SEALING STRIP

TOOLS REQUIRED



TAPE MEASURE



LEVEL




STEP LADDER




LEVEL 3 INSTALLATION


Installing the rails

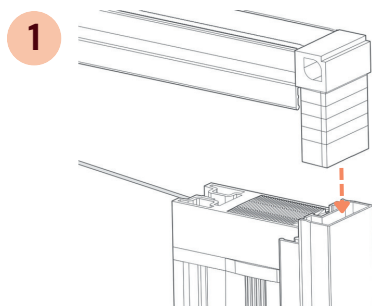

1 Slot the bottom and top rail into the side rails, keeping the overhanging rail piece on the same side of the rail when facing the same direction.

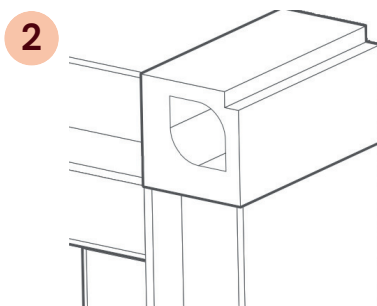


2 Ensure the side frames are slotted onto the guide blocks and seat them flush.

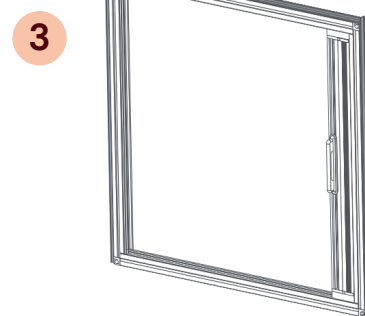

3 Make sure all sides are attached and that the frames are lined up and flush.

Light Blocking Strip

Apply the Light-Blocking strip to the top and sides of the shade, but don't apply it to the bottom. The bottom will rest directly on the sill of the window, so there should automatically be no light gaps there.

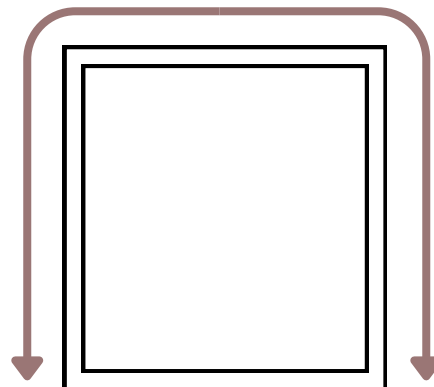


Installing the Shade

1



Remove the bottom adhesive strip from the bottom rail.

2

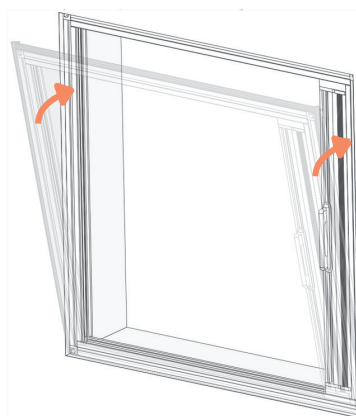


Rest the bottom of the shade on the window sill and lift the top of the shade back until it lines up with the top of the window opening and is flush with the wall.


Corner Covers

Attach the corner covers over the corner connector holes.

Test the shade out and make adjustments as needed.

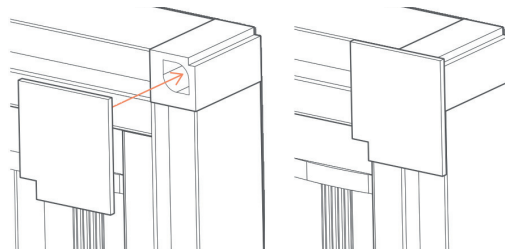

CHILD SAFETY WARNING

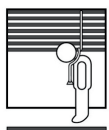

Corded window blinds and shades can be a strangulation risk or cause serious injury to young children and pets. When using corded window treatments, use the following tips to keep them safe:

- NEVER place a crib by a window!
- Move furniture that children can climb on away from the window.
- Secure child-safe tensioners for continuous cord loop chains to the wall or window encasement.
- Always use cord cleats with corded products.
- Keep cords up and away from your child's reach.