


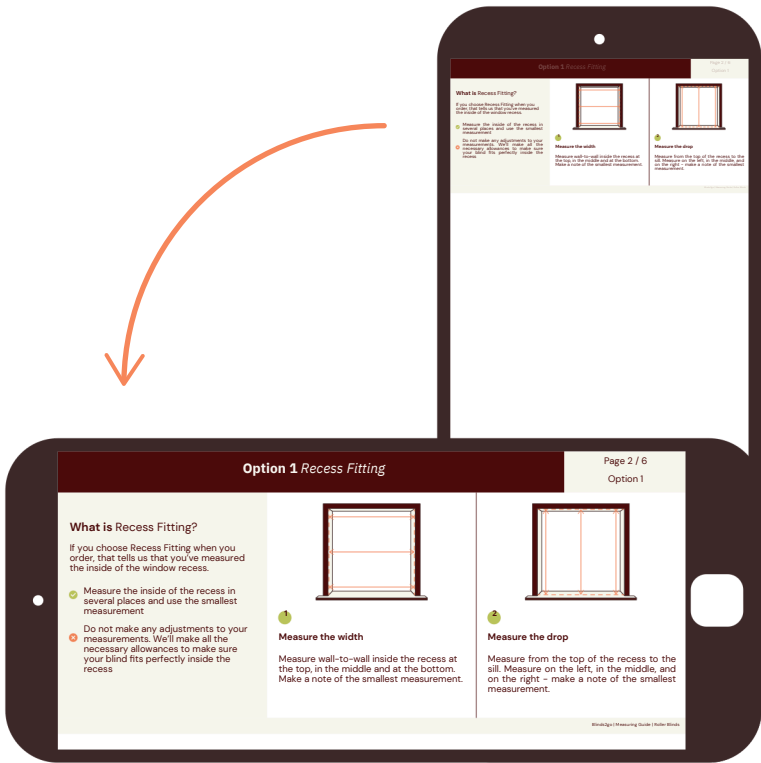


Turn your phone or tablet

Our guides are best viewed in landscape if you're viewing on your phone or tablet.

Designed for DIY

Our Complete Blackout Curtains are designed to be installed by you, without installation specialists, even if you don't have much DIY experience.

Please read each page of this guide carefully during installation, following along one step at a time.

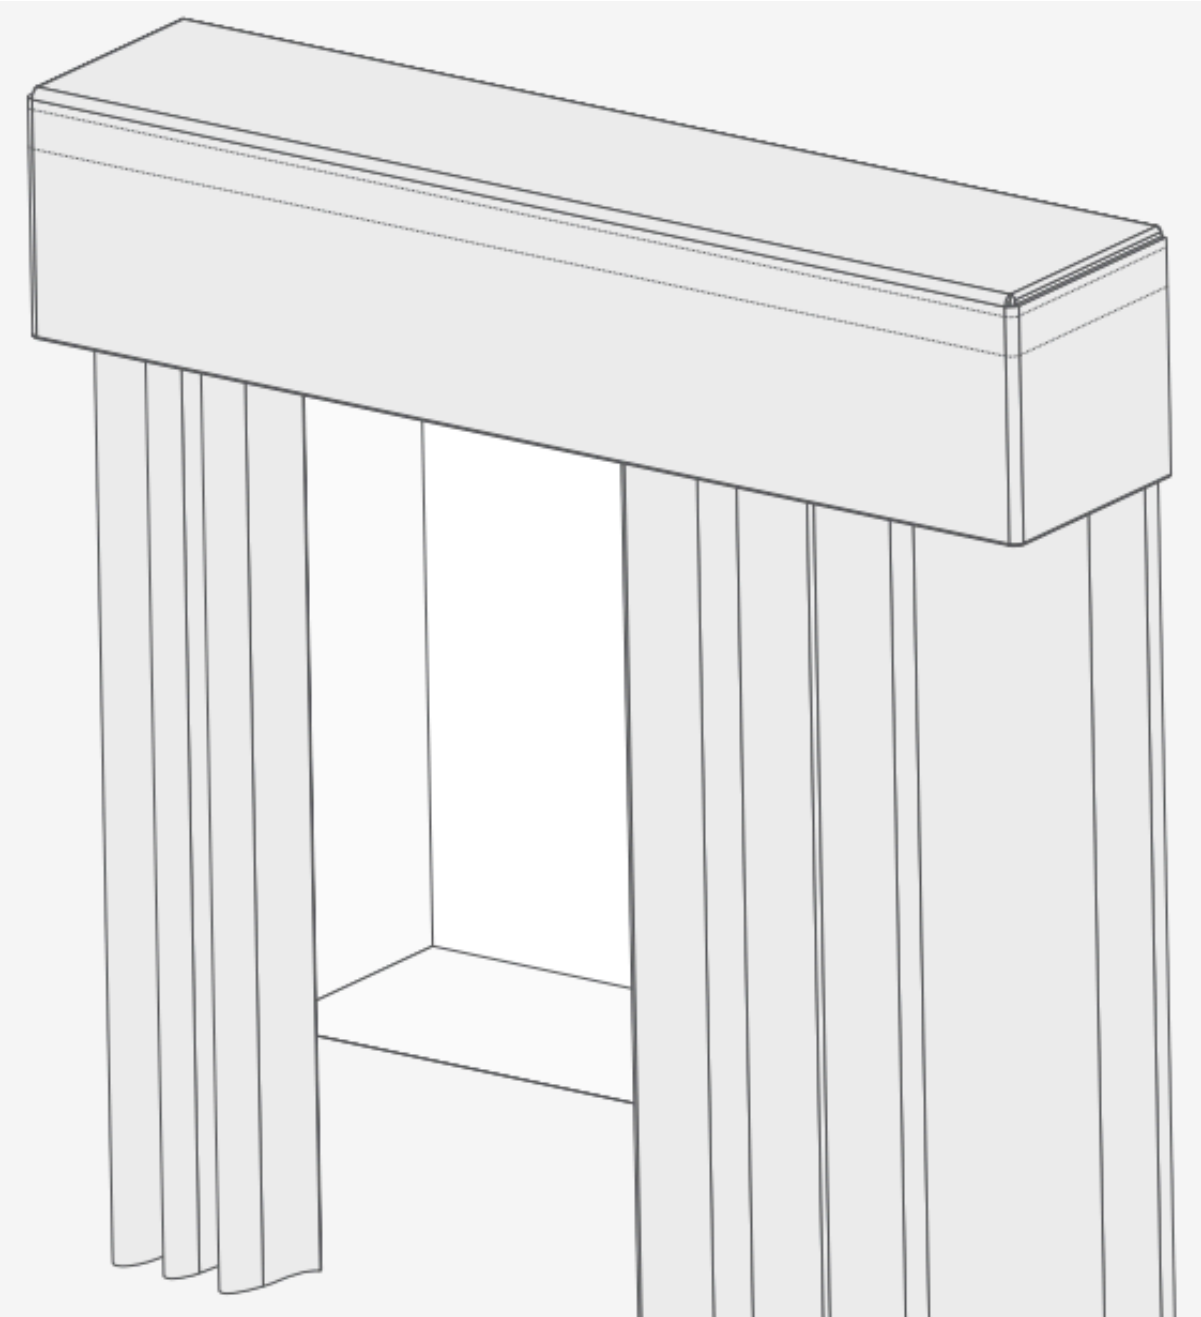


Section 1 *Parts & Tools* - Outside Mount

Tools required for this install:

- ✓ Handheld drill
- ✓ 4mm masonry drill bit
- ✓ Phillips screwdriver / driver bit
- ✓ Mallet / hammer
- ✓ Pen / pencil

Parts included in your order:

- | | |
|---------------------------------------|-----------------------|
| 1 Fabric Valance | 4 Mounting brackets |
| 2 Curtain rail | 5 Screws & wall plugs |
| 3 Valance rail | 6 Valance rail screws |
| 7 Joining plate (wider curtains only) | |

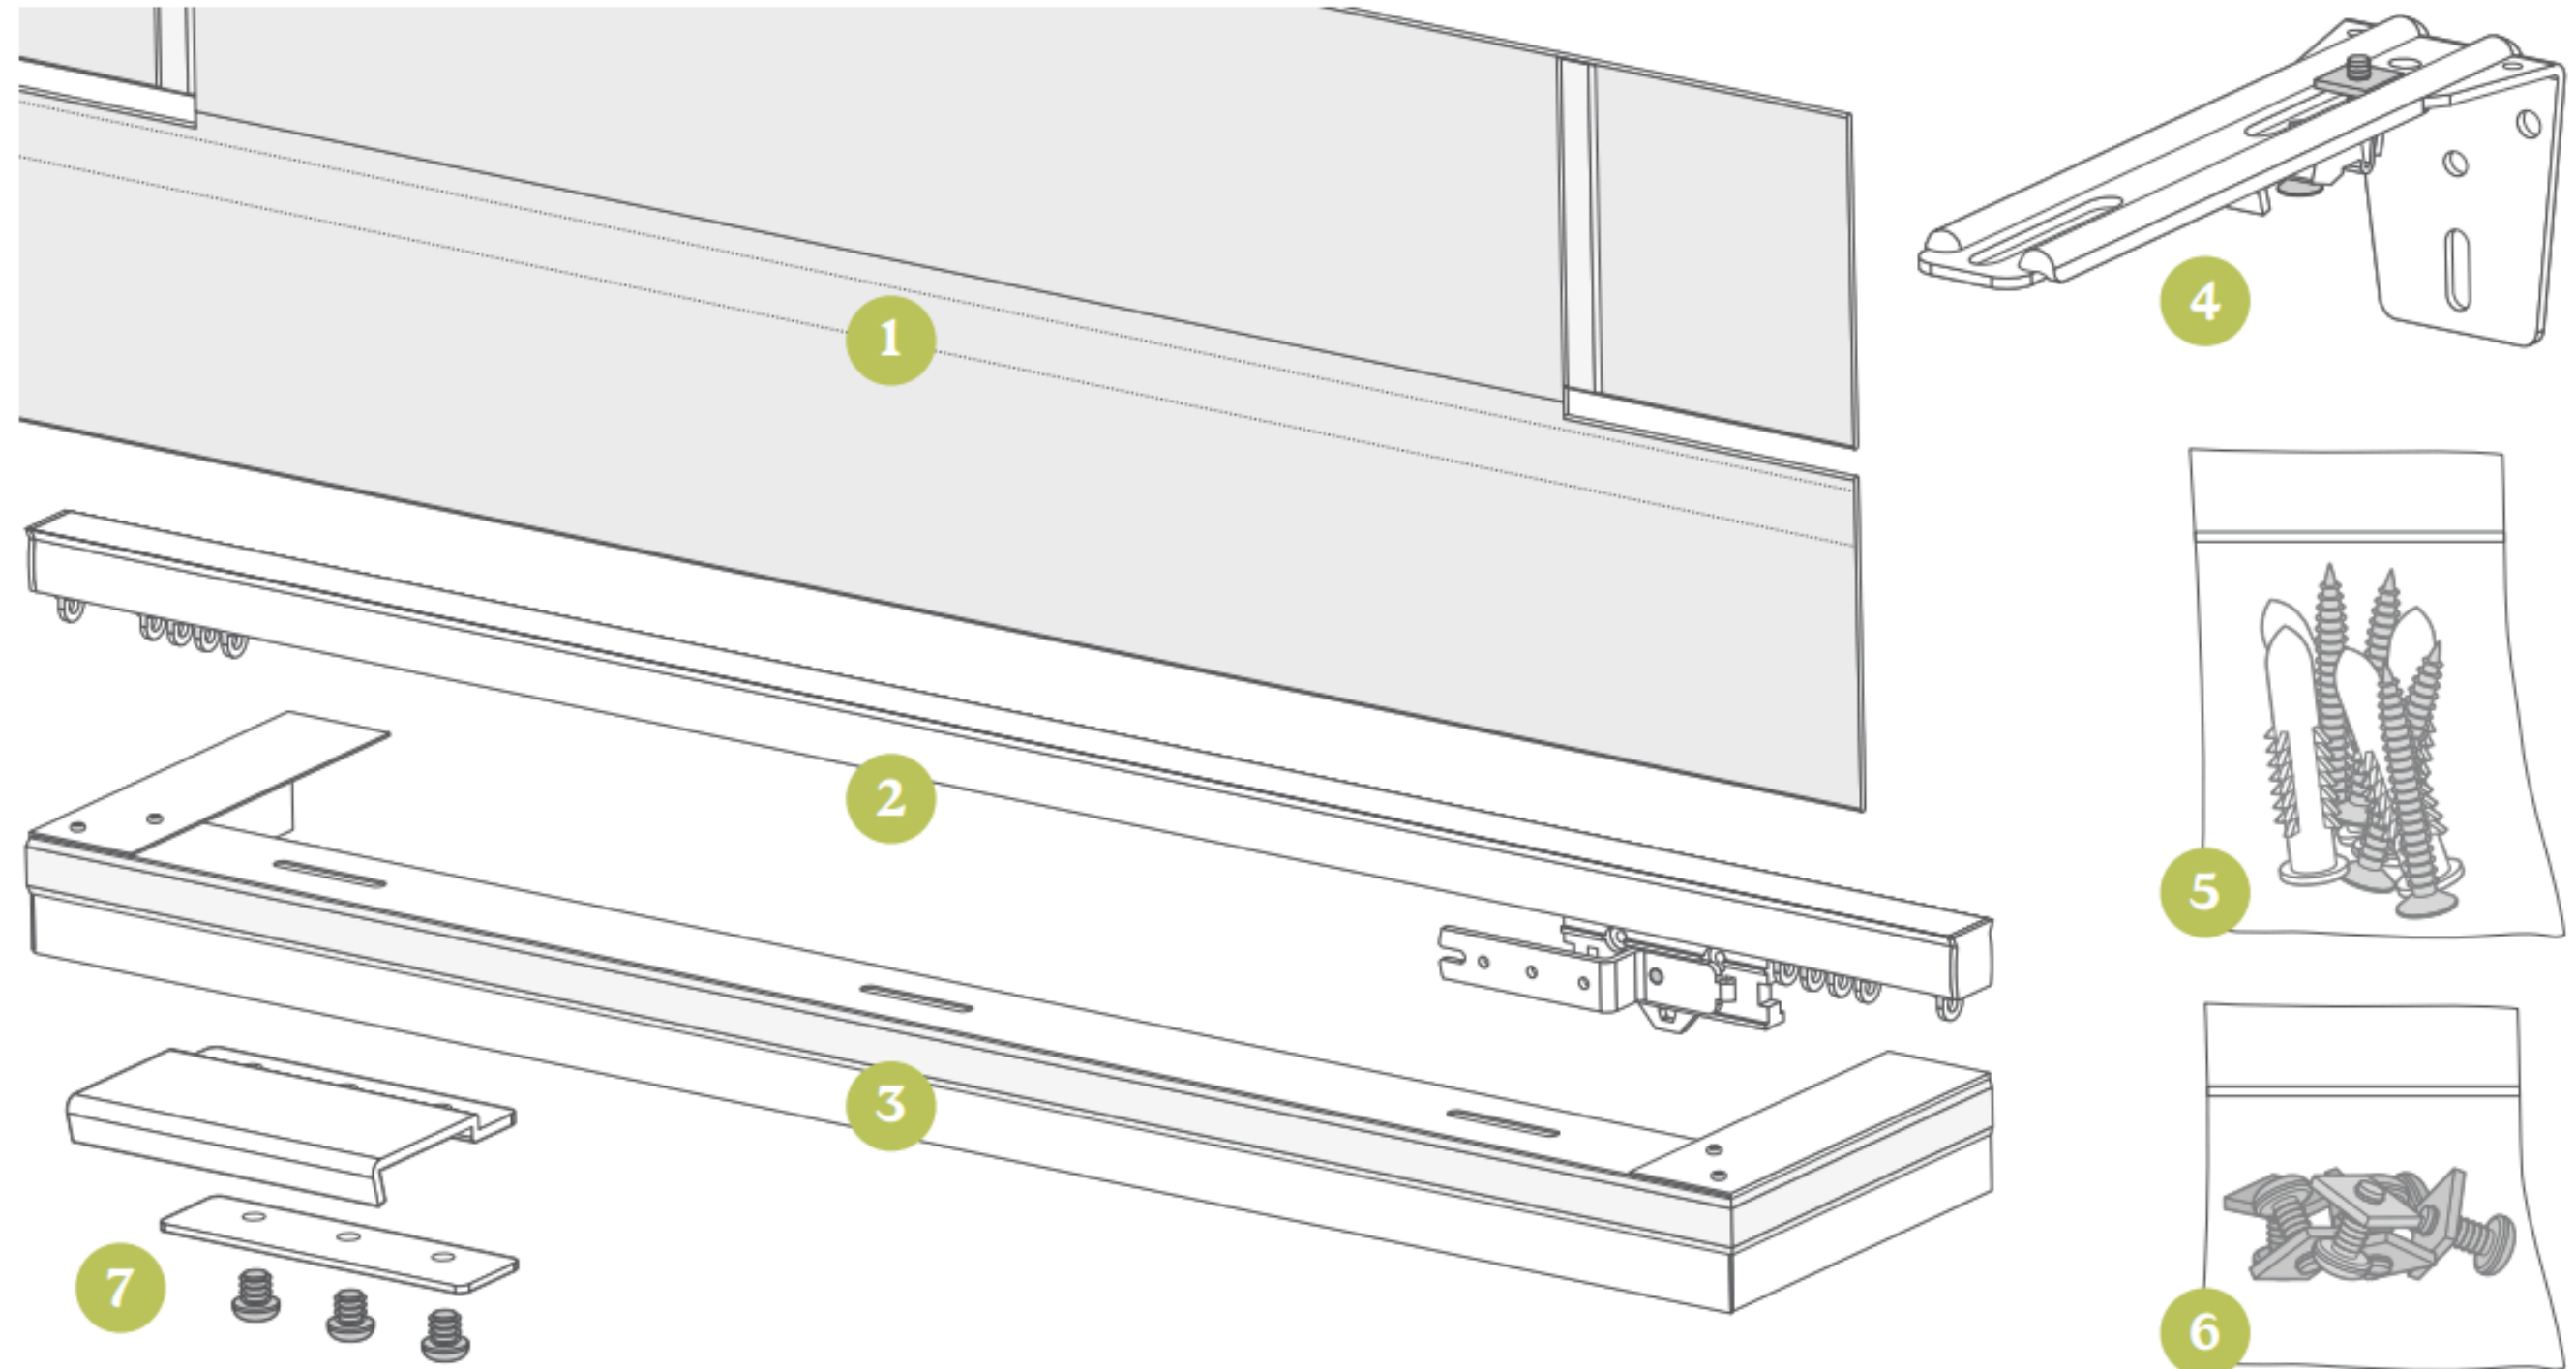

Section 2 *Installing the Brackets & Curtain Rail* - Outside Mount

Page 3 / 15
Section 2

Tools required for this section:

- ✓ Handheld drill
- ✓ 4mm masonry drill bit
- ✓ Phillips screwdriver / driver bit
- ✓ Mallet / hammer
- ✓ Pen / pencil


Parts required for this section:

Curtain rail

Mounting brackets



Screws & wall plugs

Curtain rail joining plate (if supplied)

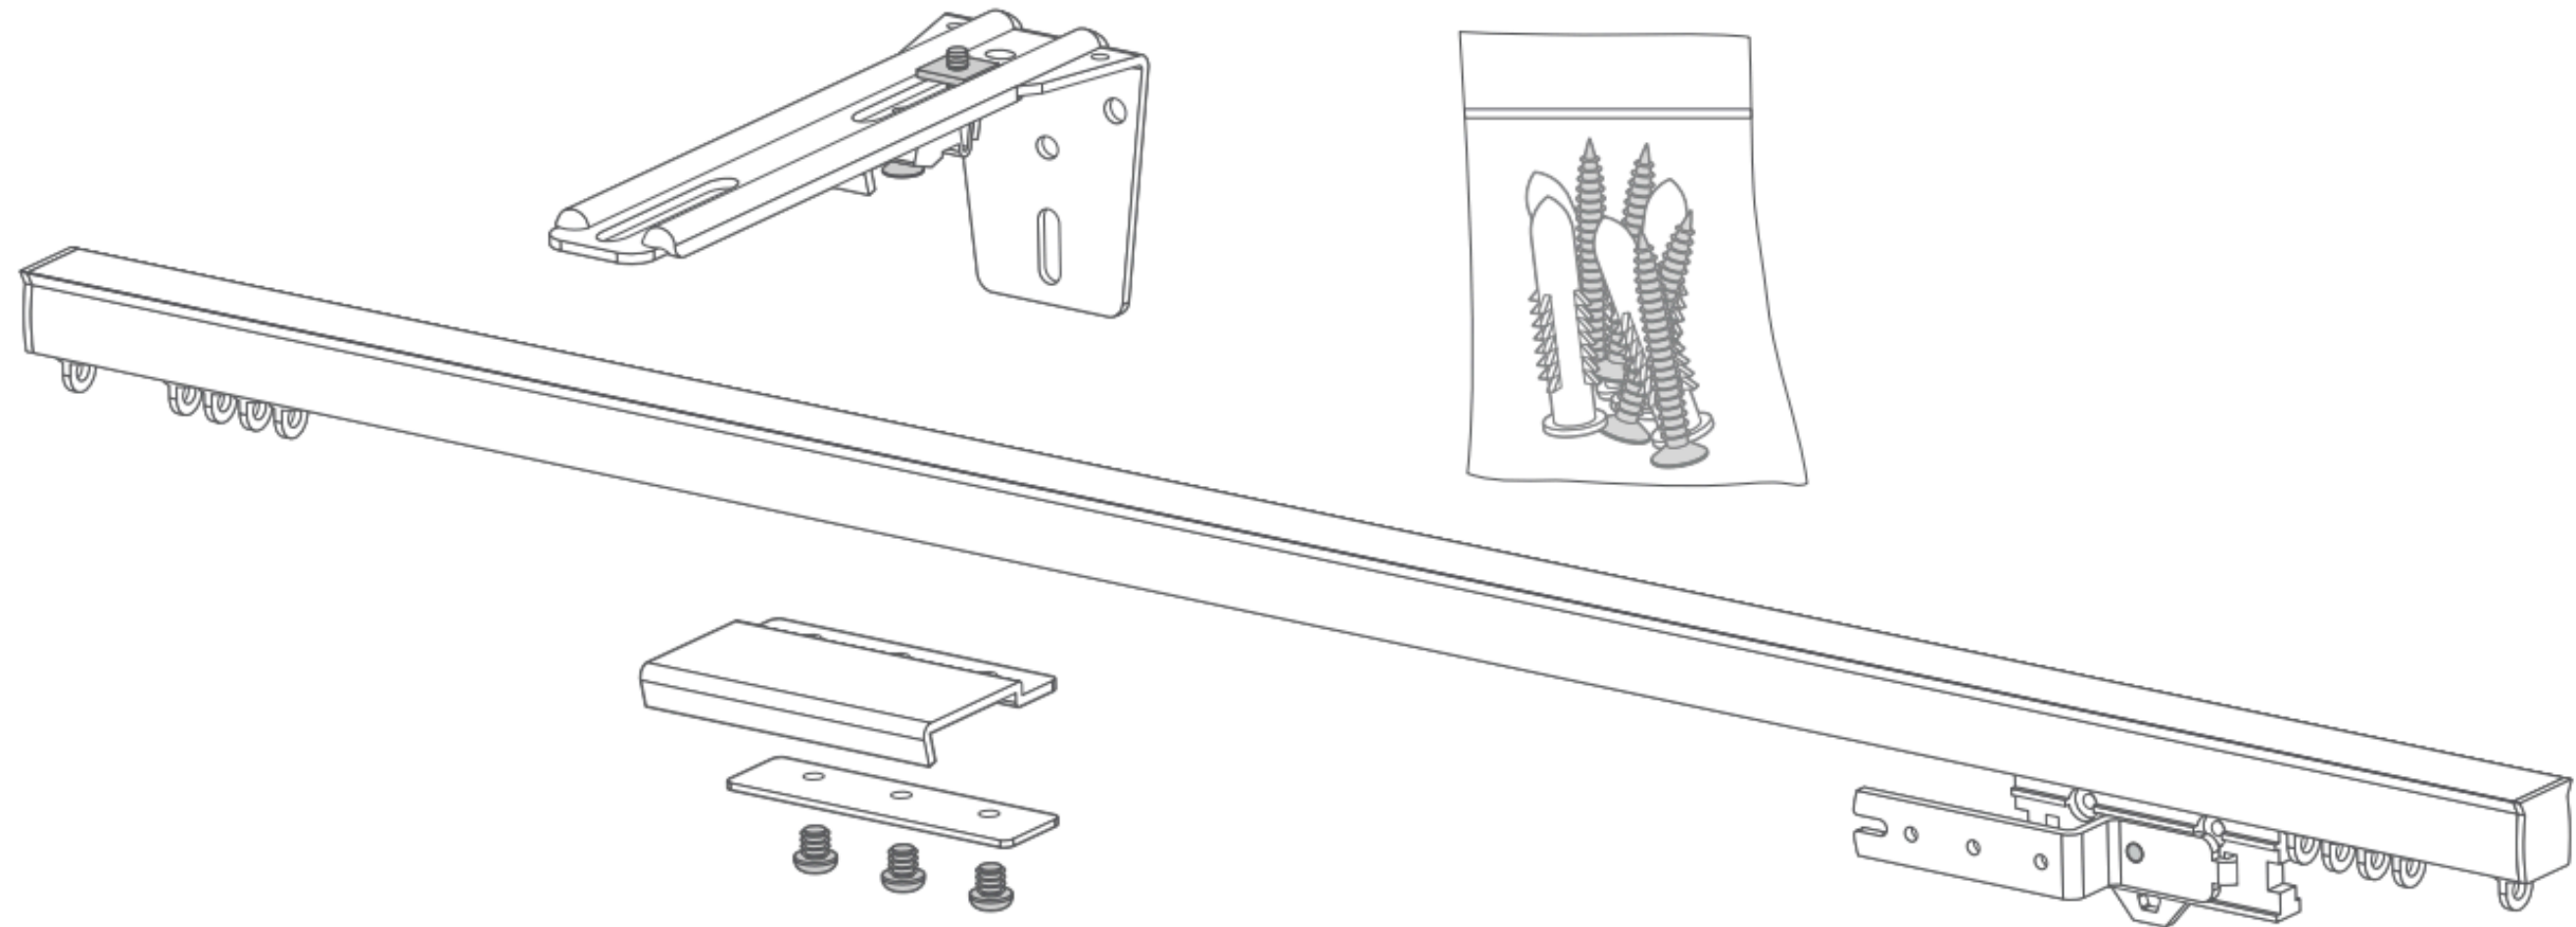

Section 2 *Installing the Brackets & Curtain Rail* - **Outside Mount**


Page 4 / 15
Section 2.1

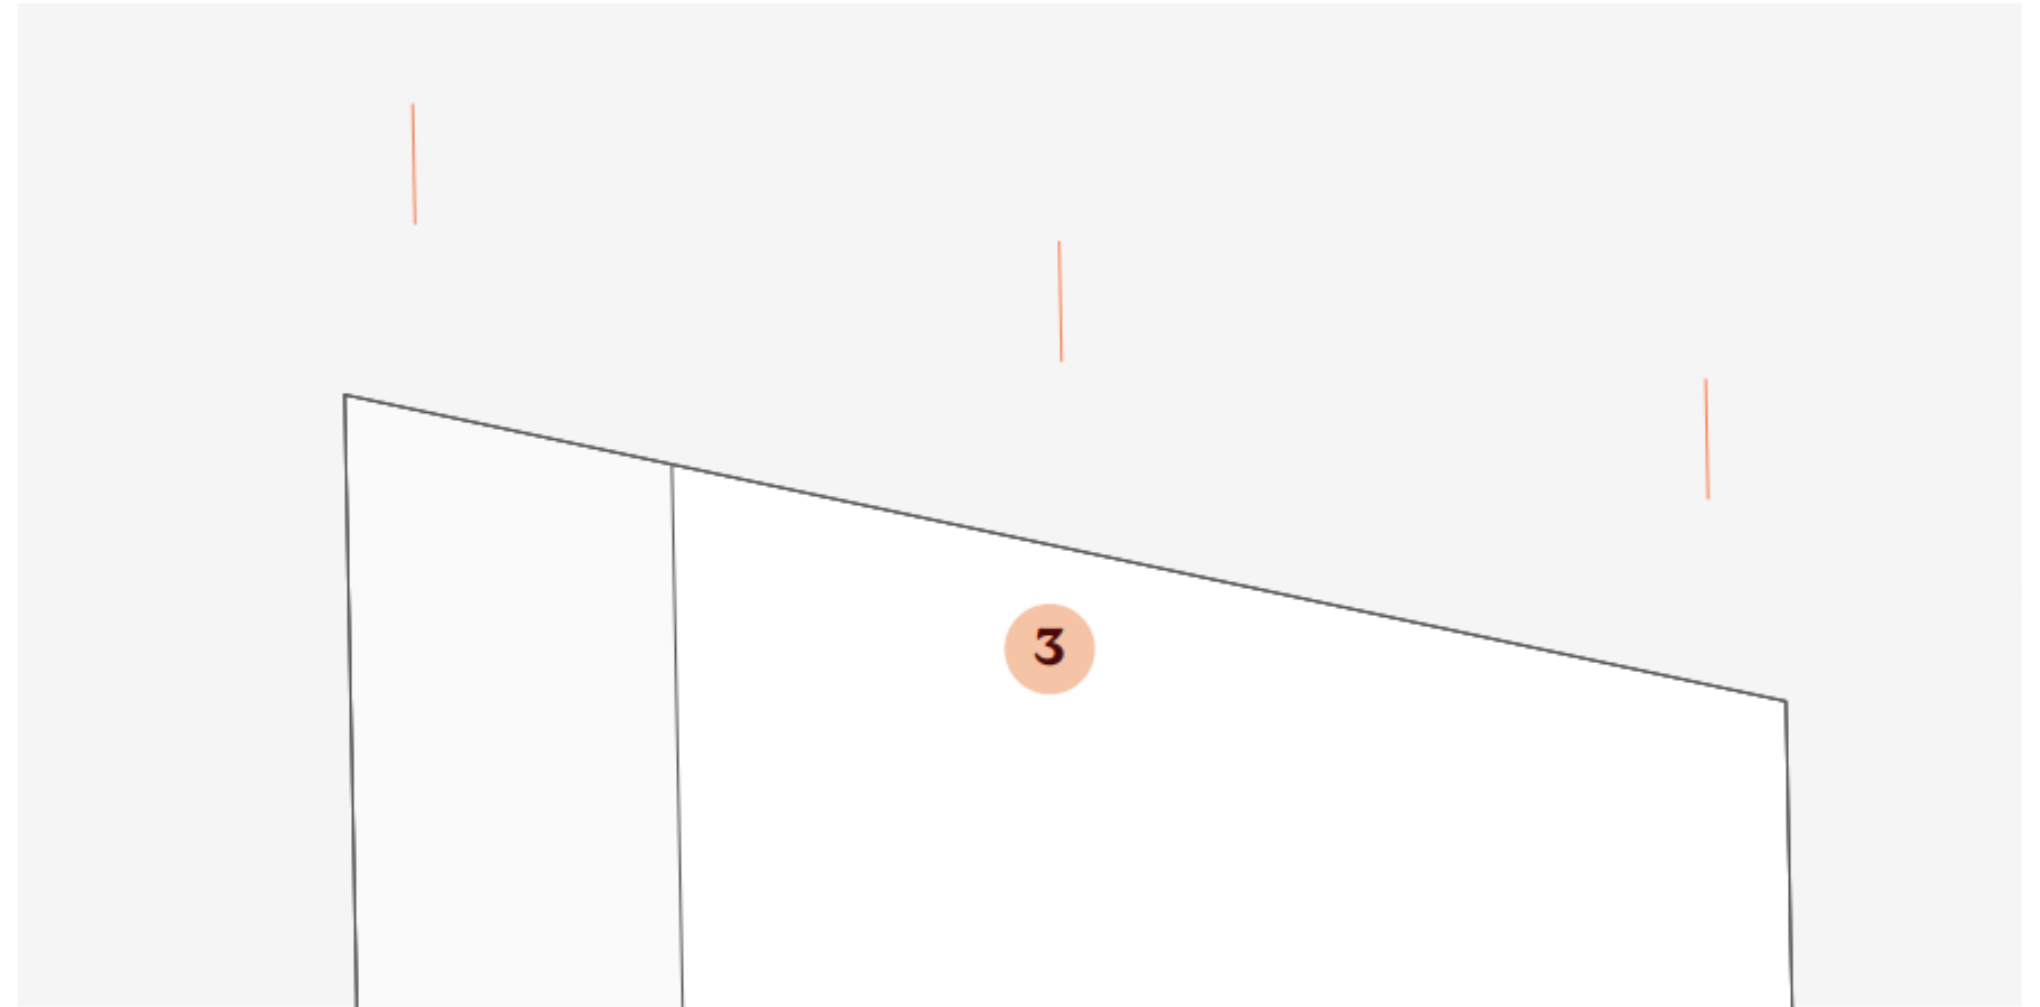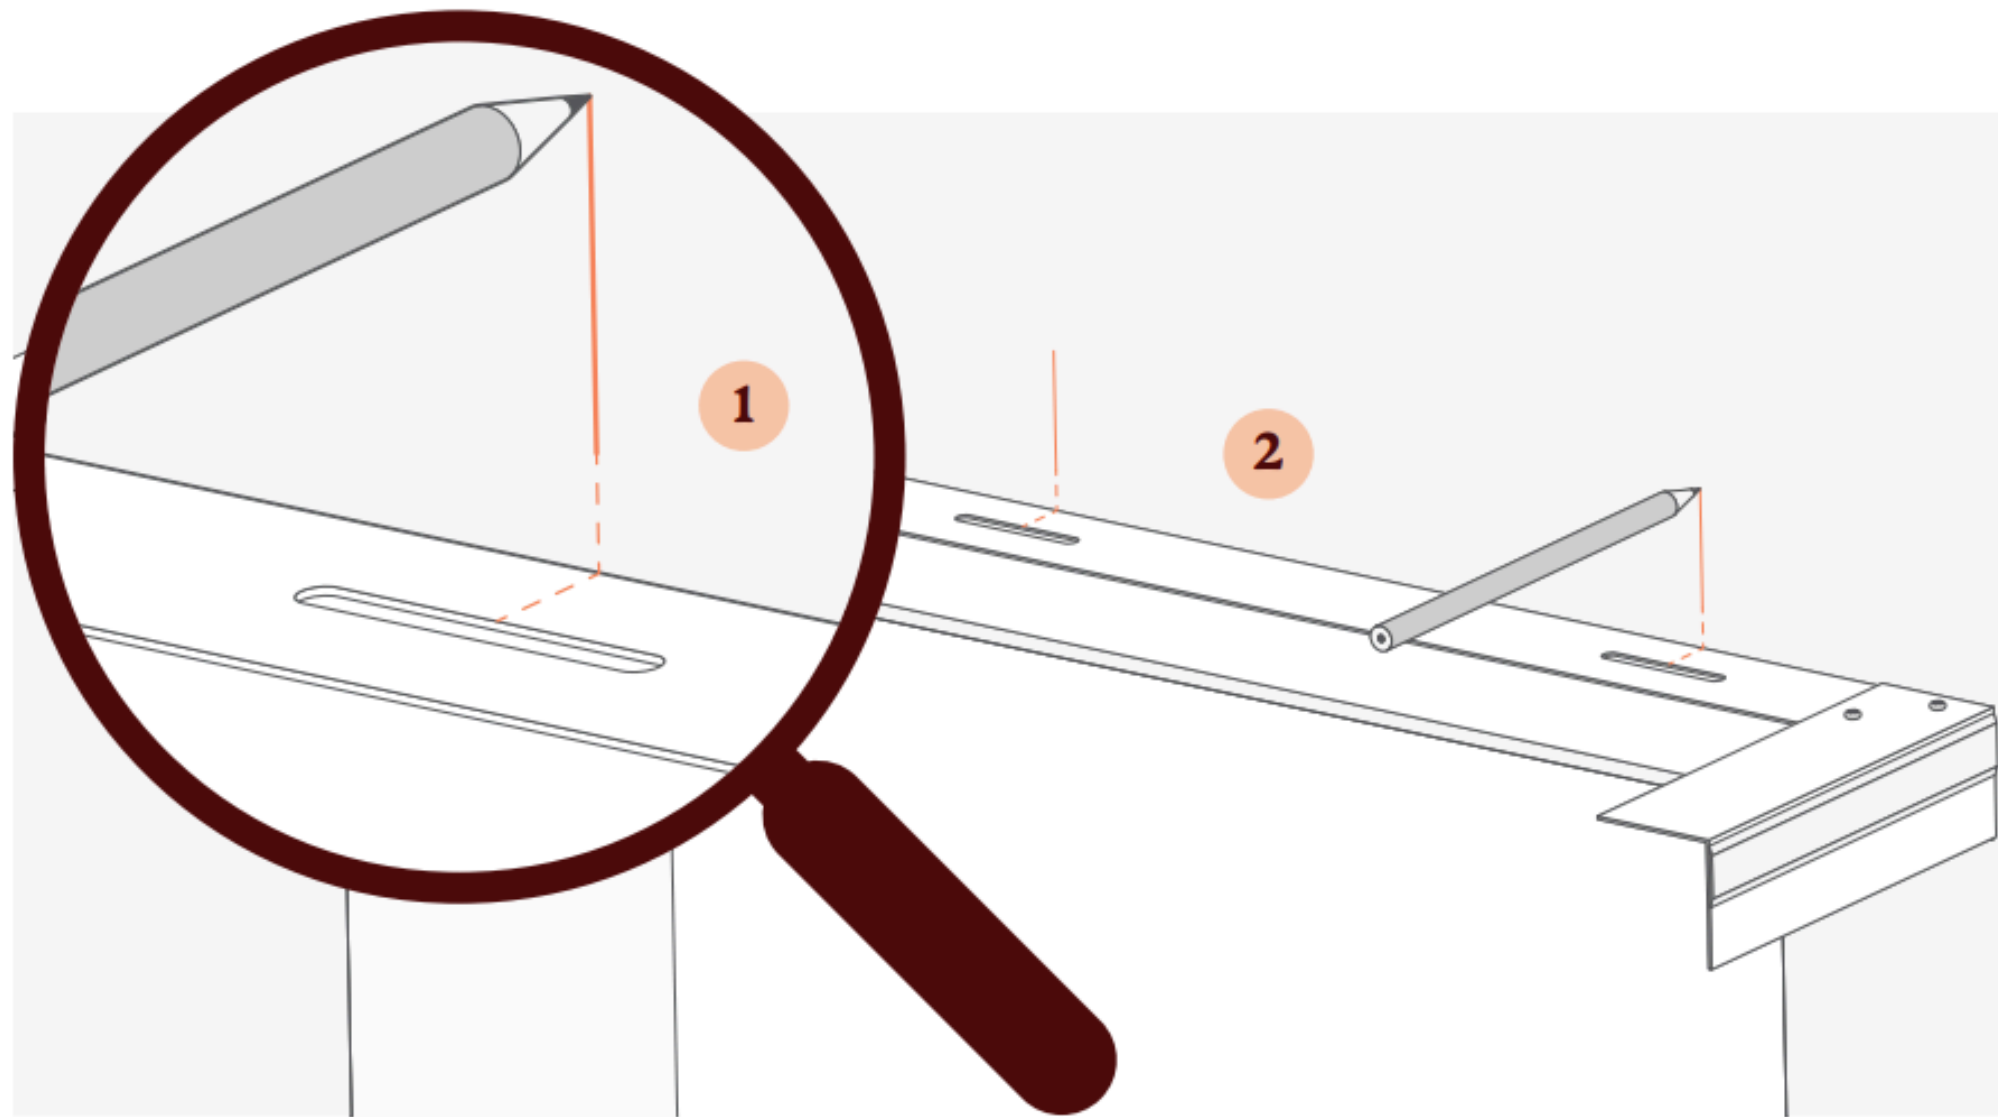

Using the valance rail as a guide, mark where your brackets should be positioned. Each bracket should be centred on the slots in the valance rail (1 / 2 / 3).


Section 2 *Installing the Brackets & Curtain Rail* - **Outside Mount**

Page 5 / 15
Section 2.2

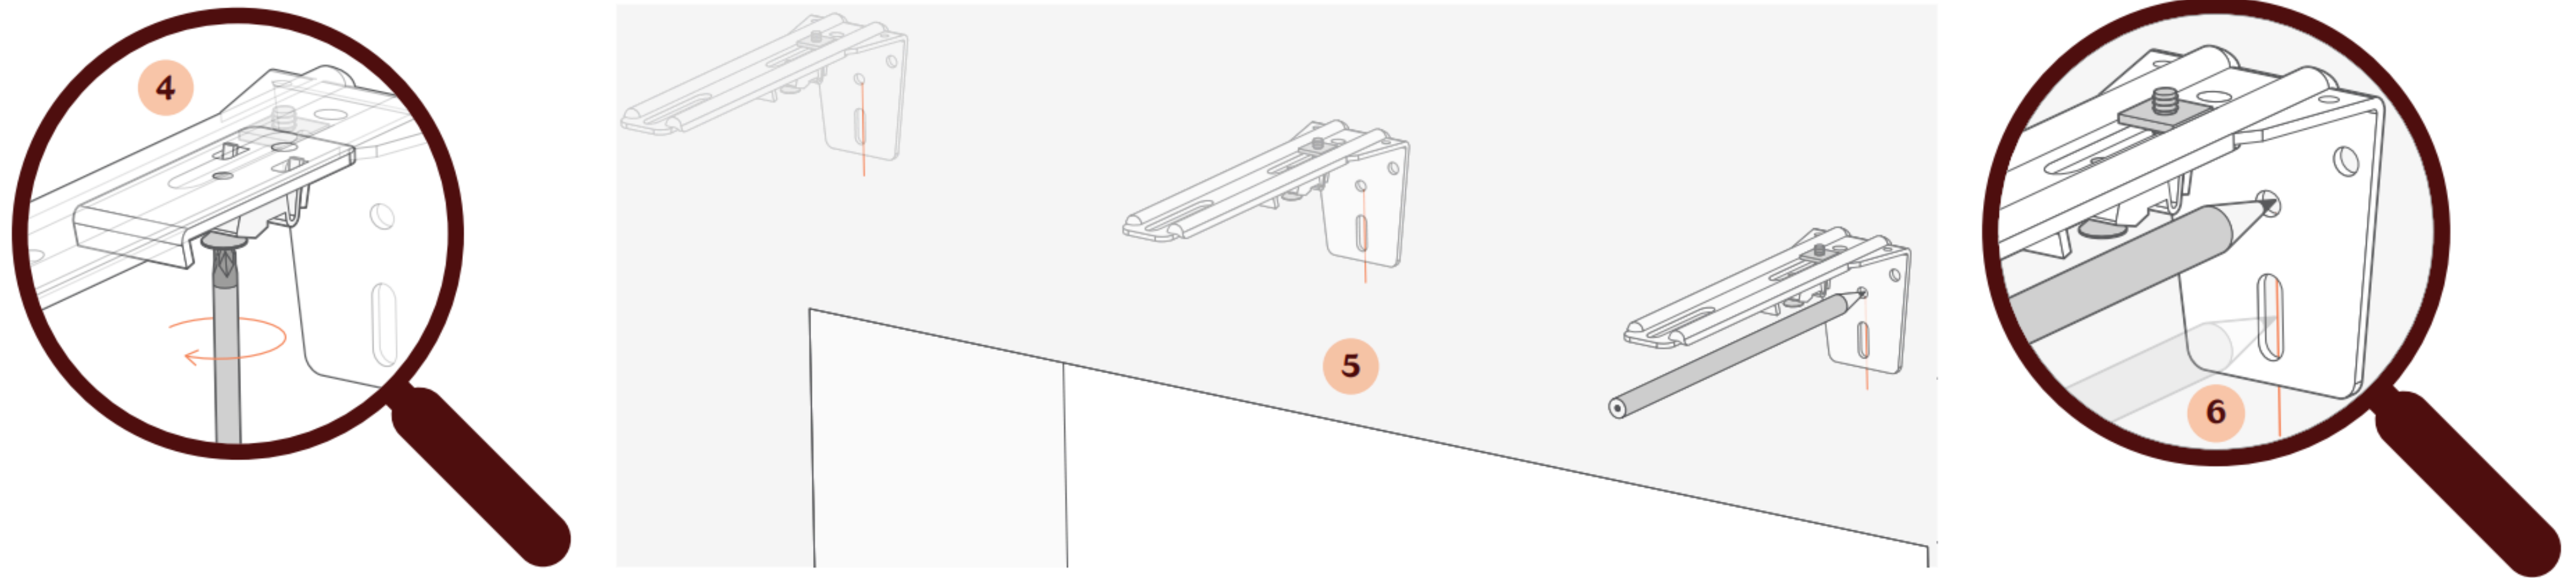

On each of the brackets, loosen (do not remove) the front screw so that the locking block is loose (4). Hold the brackets up in position against the wall (where you made your first marks) and mark the locations of their fixing holes (5). The fixing holes are the two centre holes in the back plate (6).

Section 2 *Installing the Brackets & Curtain Rail - Outside Mount*

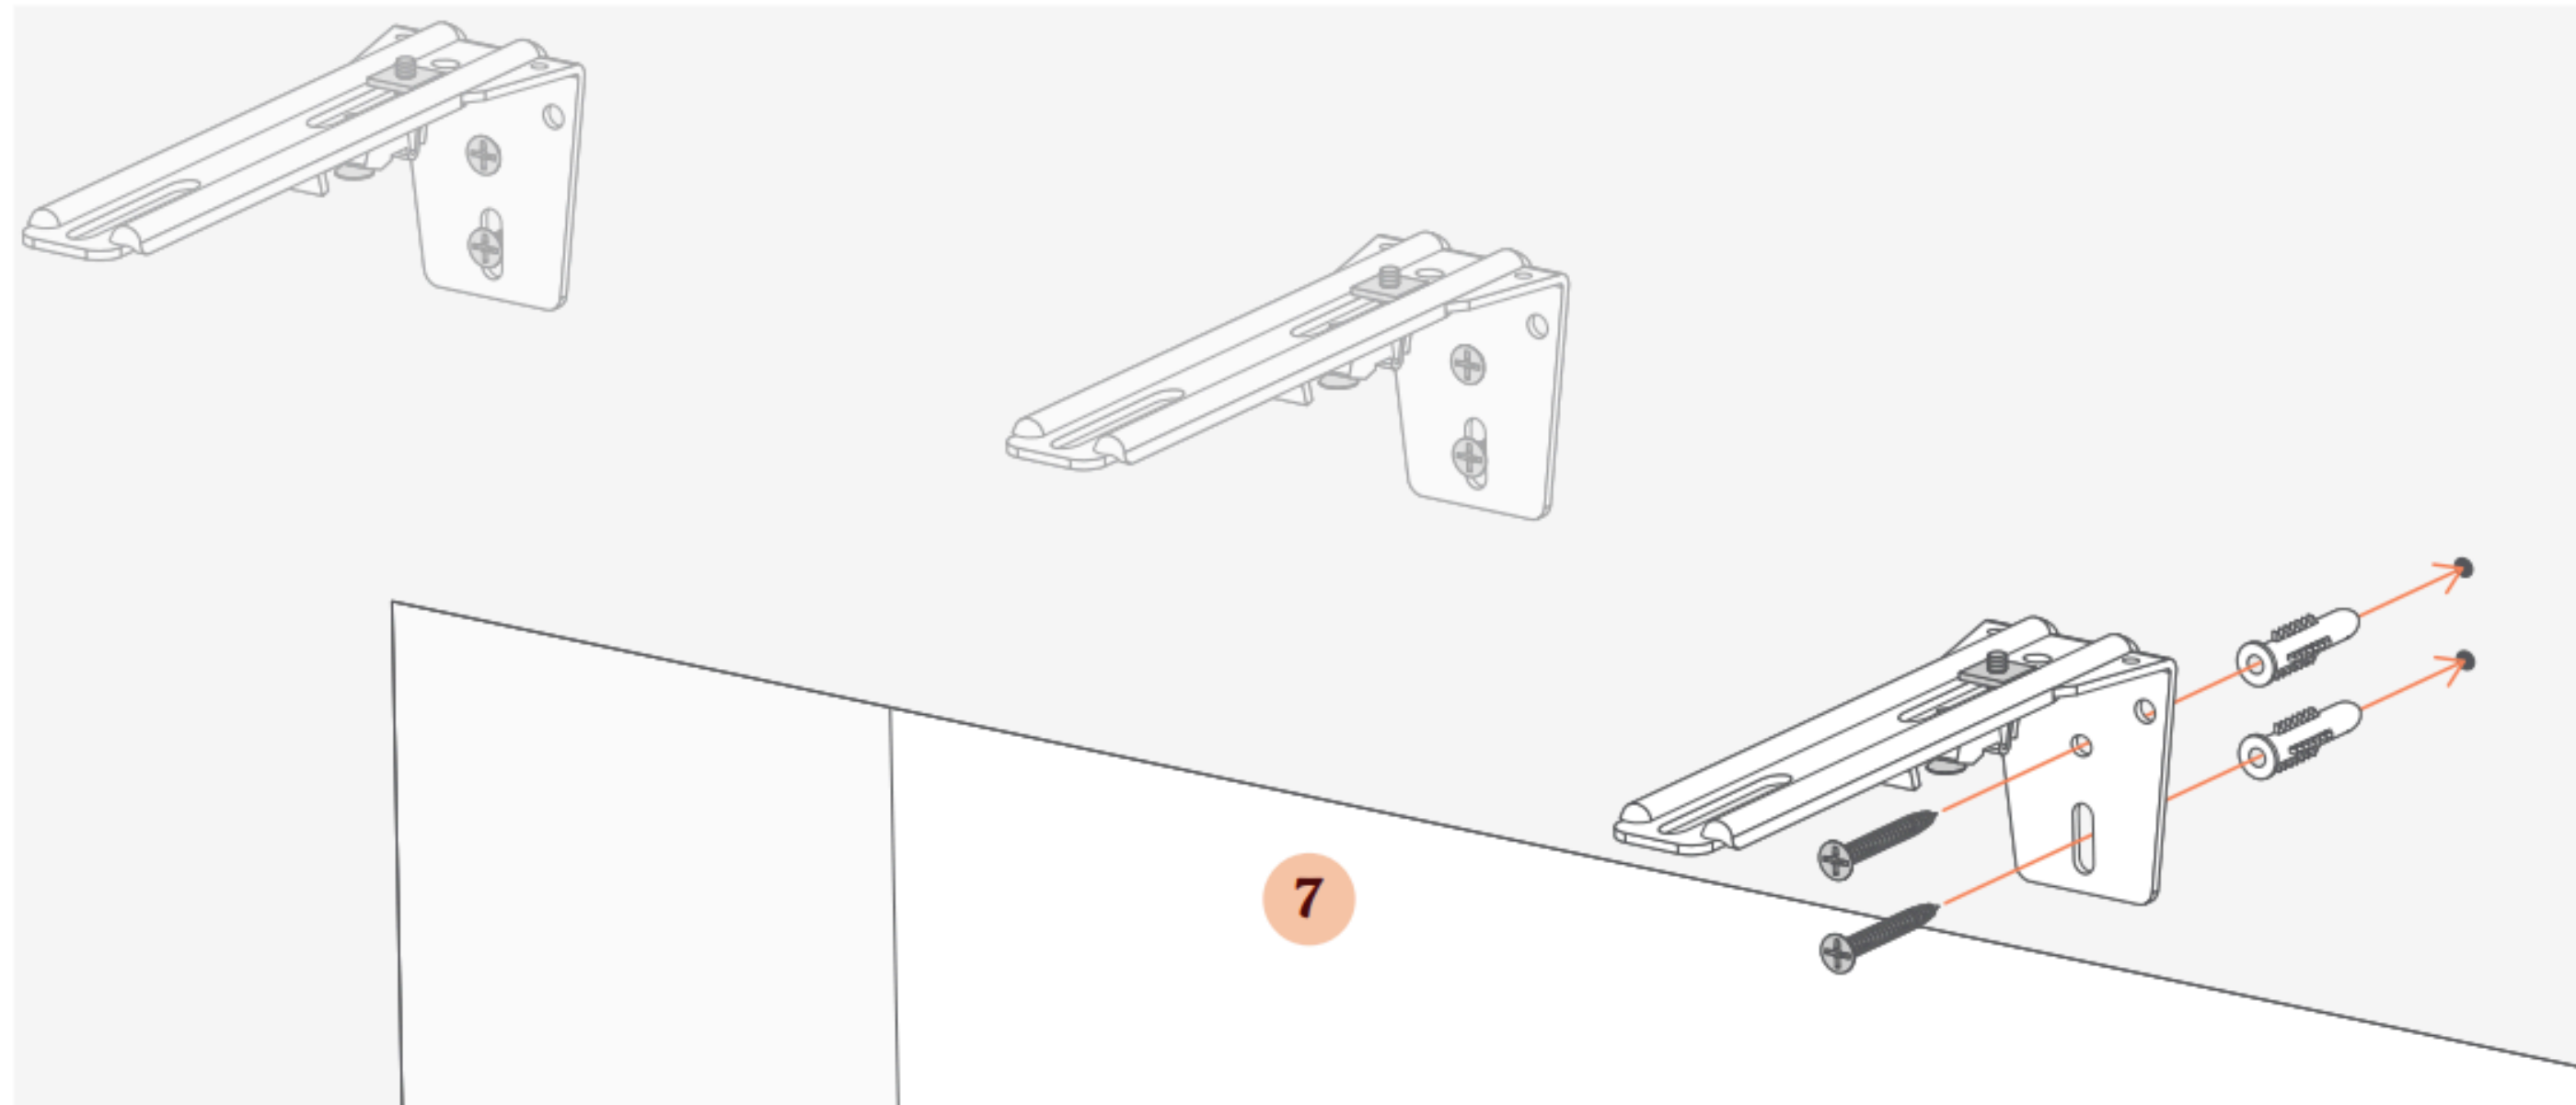


Drill a hole at each mark then use the screws and plugs provided to secure the brackets in position (7).

Section 2 *Installing the Brackets & Curtain Rail* - **Outside Mount**


Page 7 / 15
Section 2.4

If you only have a single rail to install, you can skip this page

Wider curtains will be supplied with two curtain rails, which can be joined in the centre with a joining plate before installing.

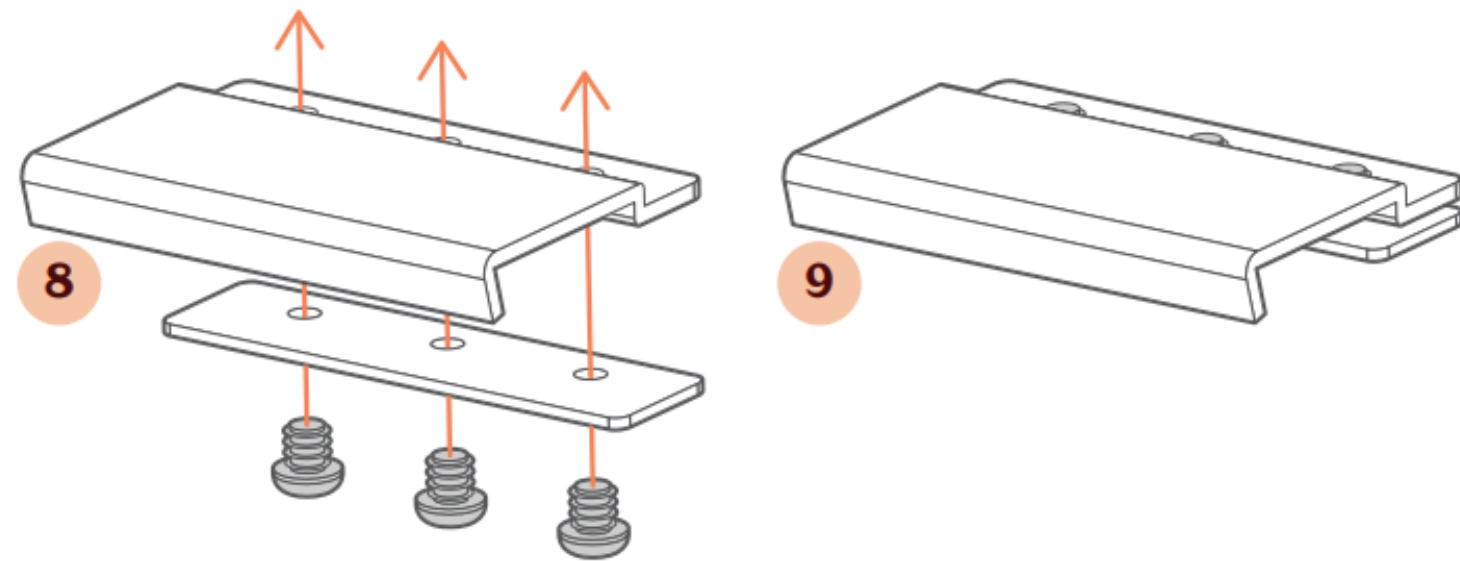


Use the screws provided to attach the two parts of the plate together, loosely for now (8 / 9).

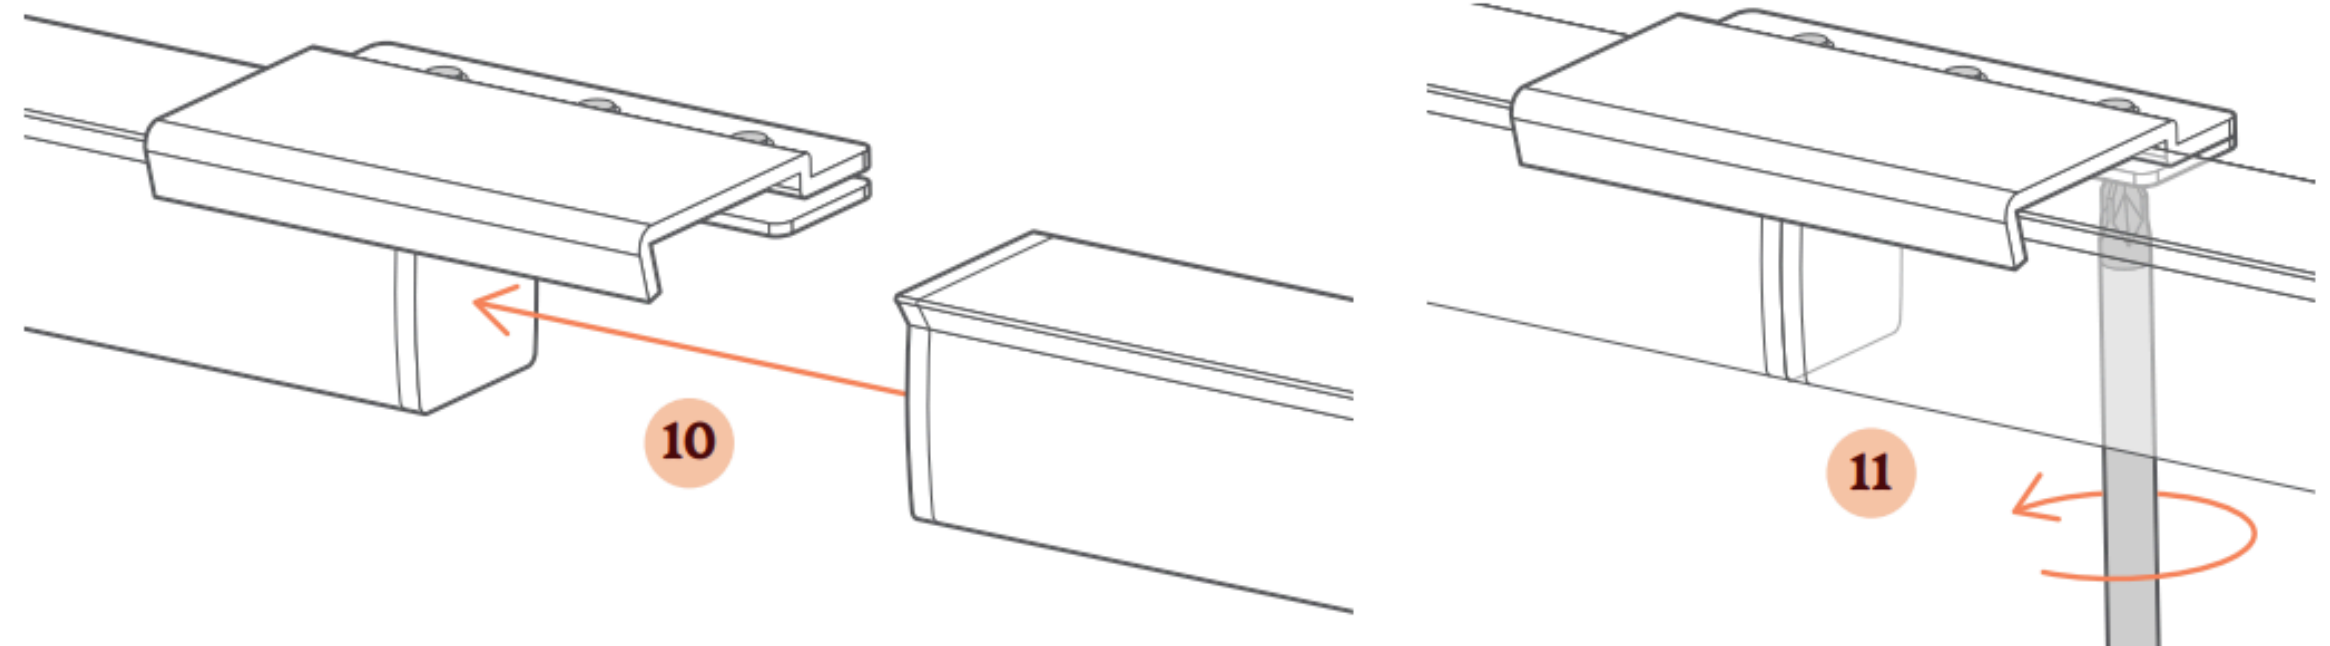

Slide the inner ends of the curtain rails into the joining plate so that they're flush with each other (10). Holding everything securely in position, tighten the screws in the joining plate (11).

Section 2 *Installing the Brackets & Curtain Rail - Outside Mount*

Page 8 / 15
Section 2.5

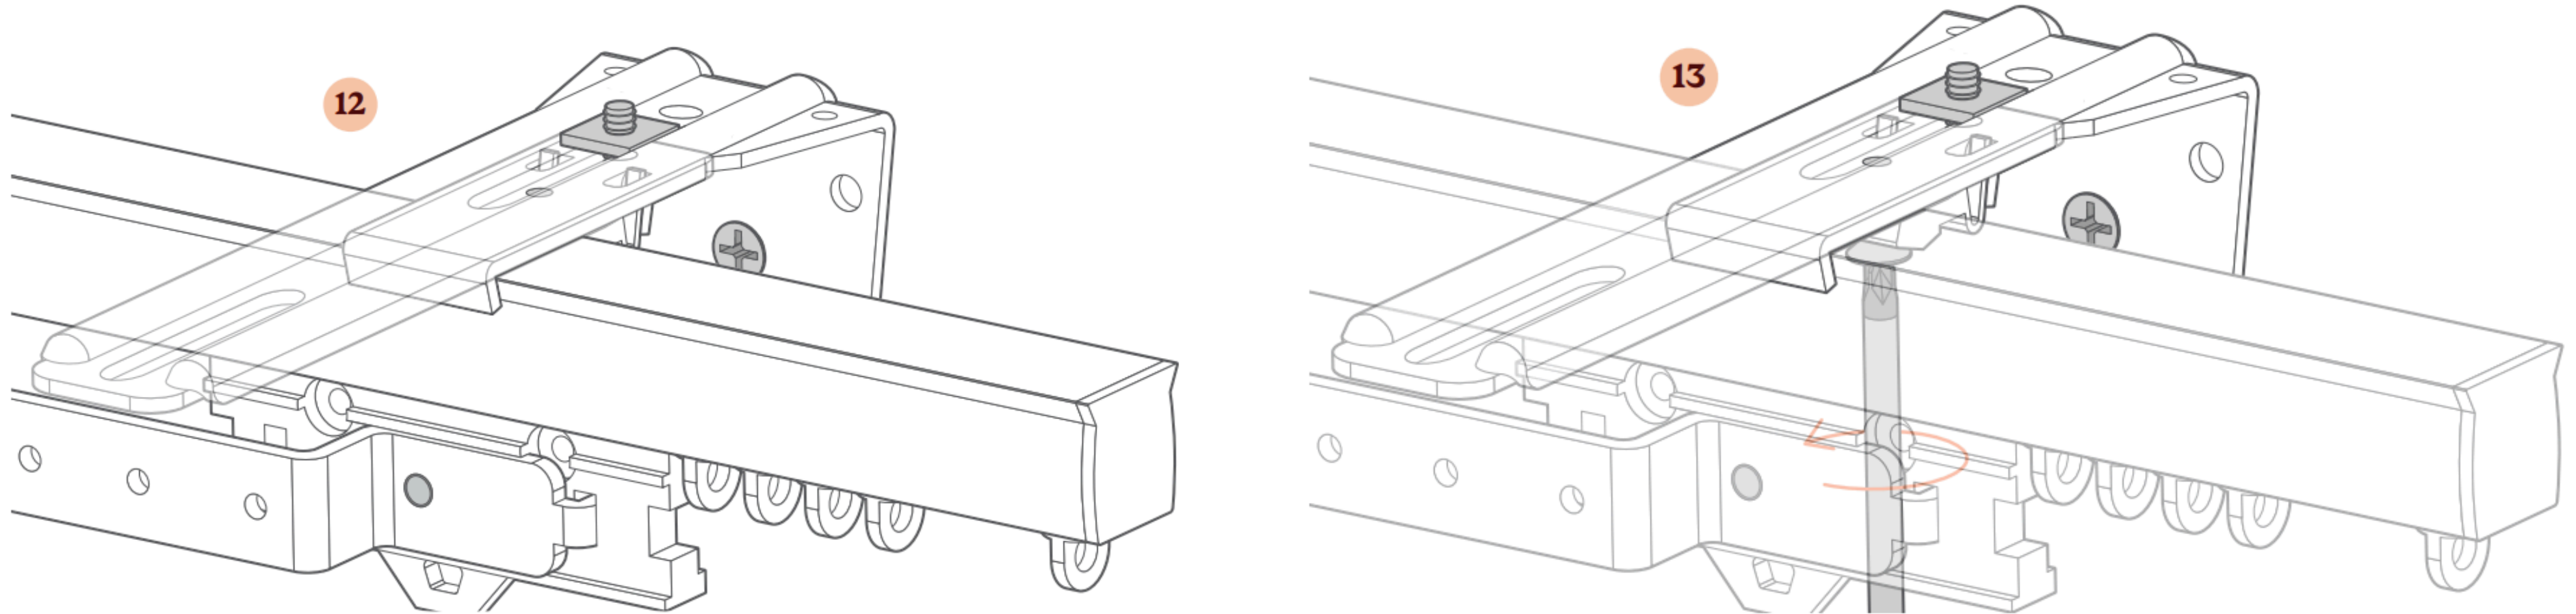

Raise the curtain rail to the brackets and clip it into place between the bracket's front hook and the locking block (12). Then tighten the locking screw (the screw you loosened at the start of this section) on each of the brackets (13).

Section 3 *Installing the Valance Rail & Valance* - **Outside Mount**

Page 9 / 15
Section 3

Tools required for this section:


✔️ Phillips screwdriver

Parts required for this section:

Valance rail



Fabric Valance

Valance rail screws

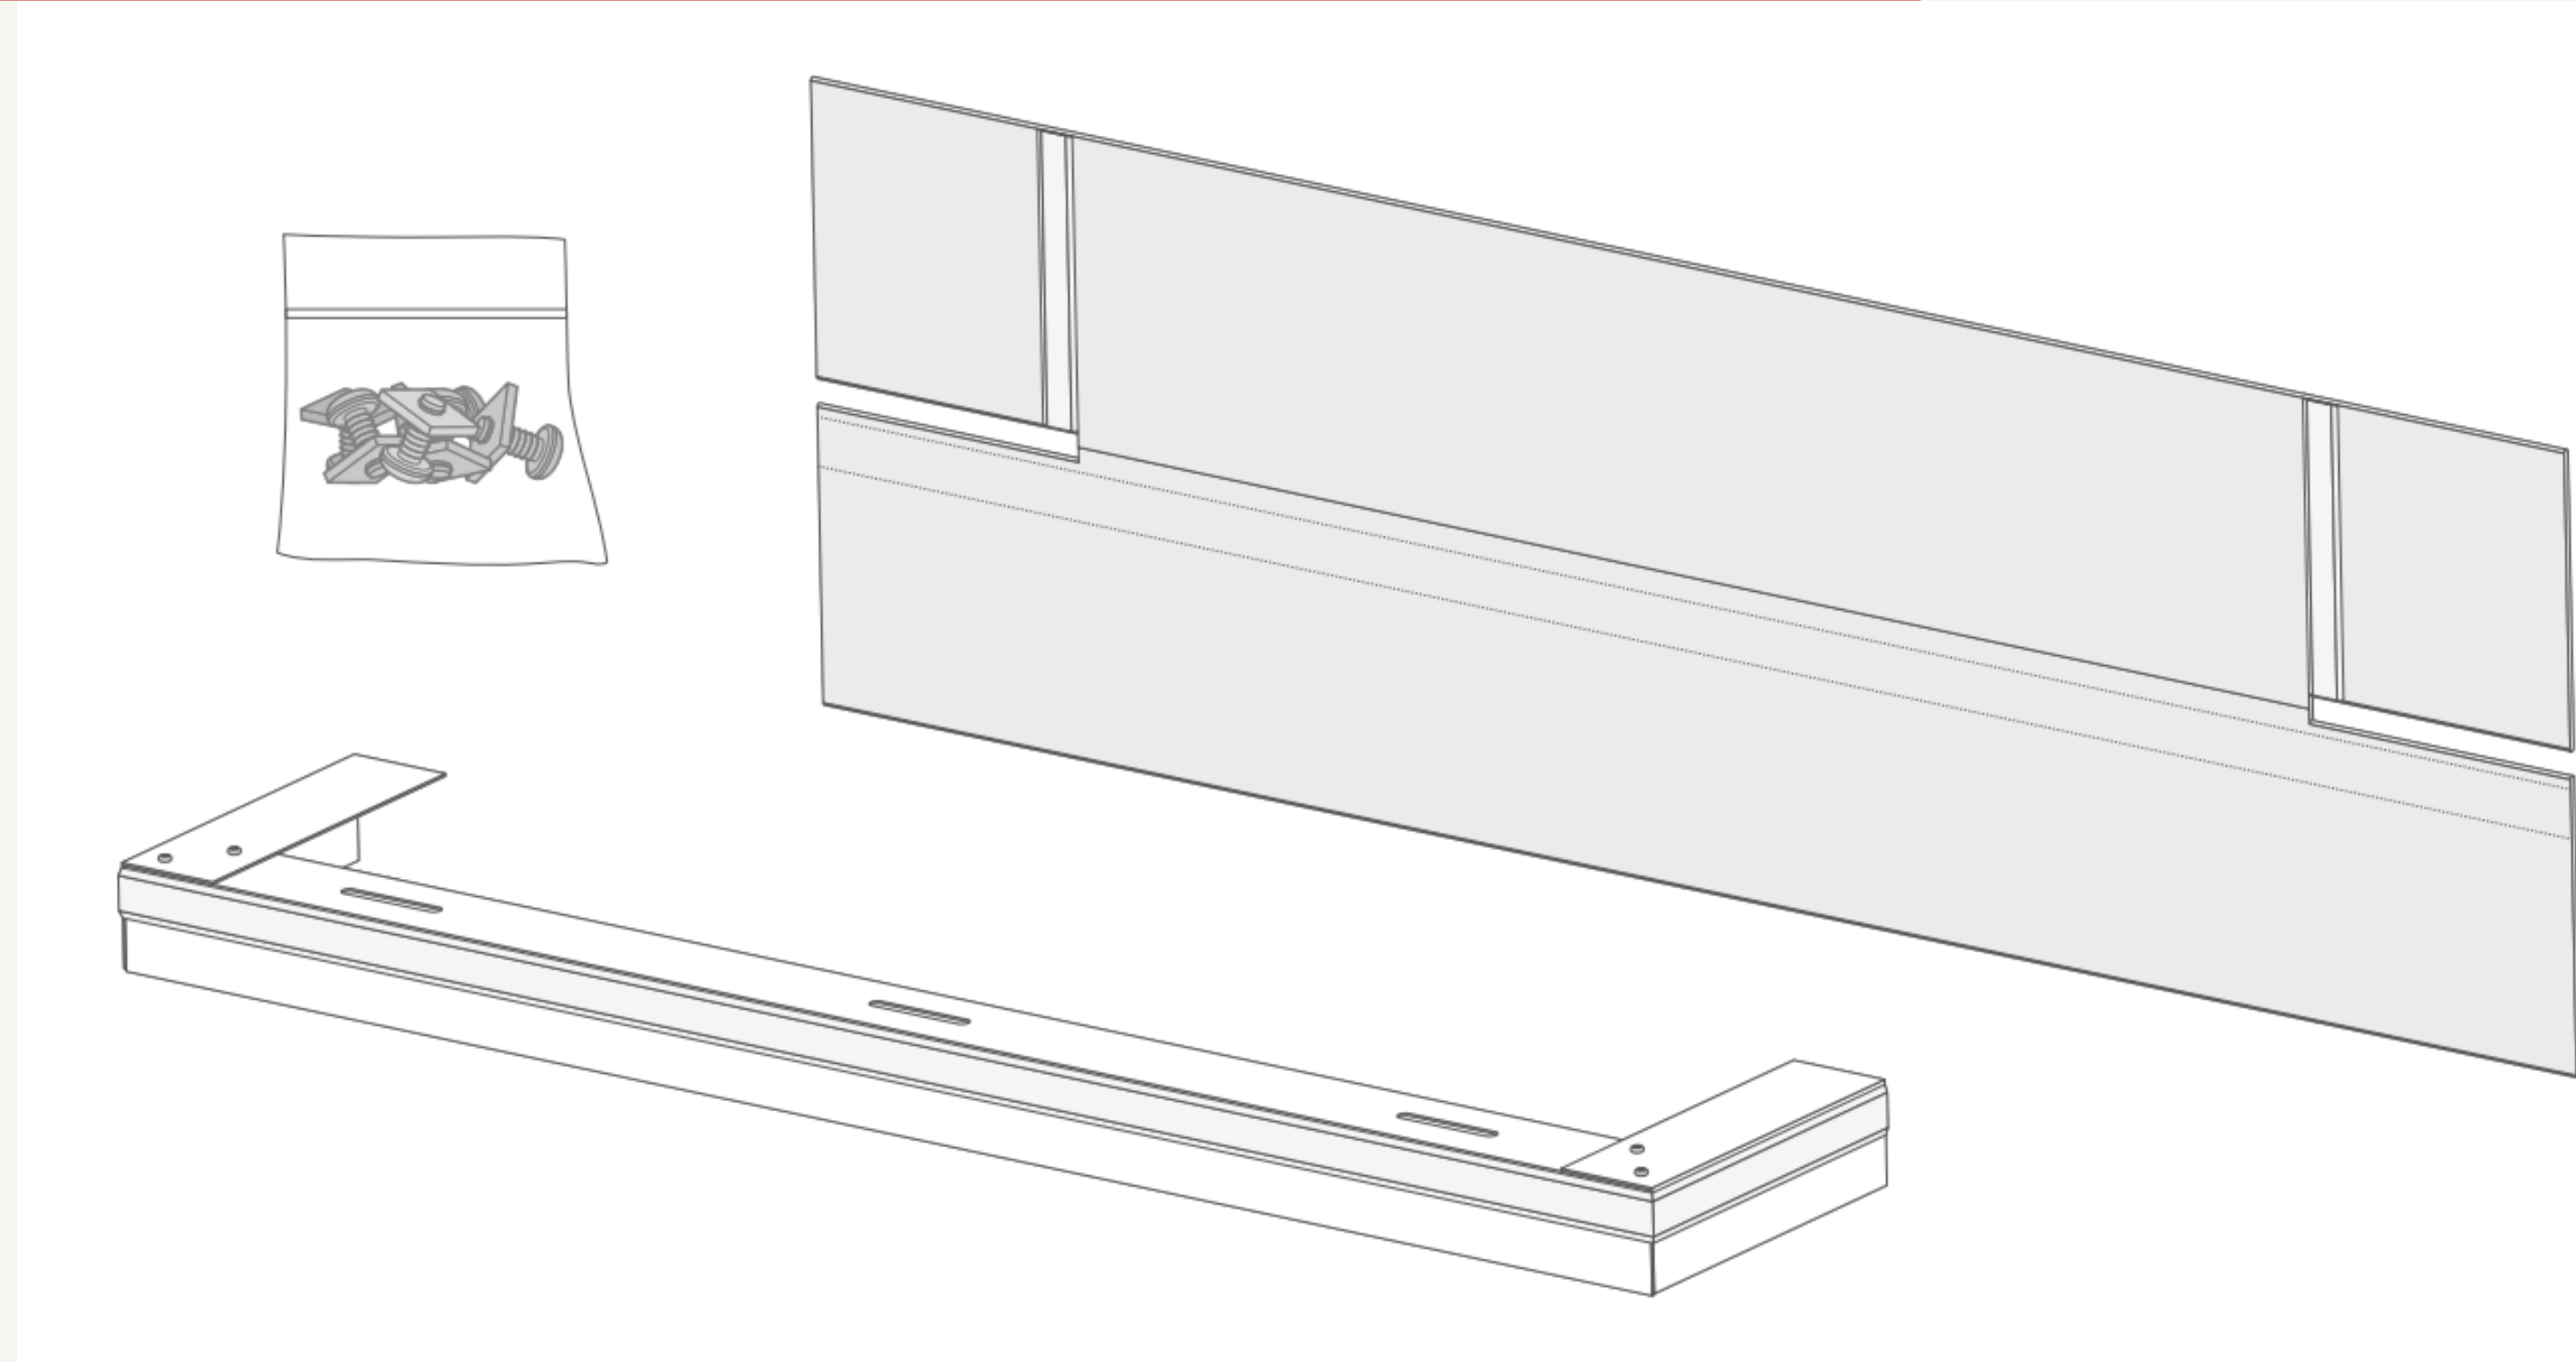

Section 3 *Installing the Valance Rail & Valance* - **Outside Mount**


Page 10 / 15
Section 3.1

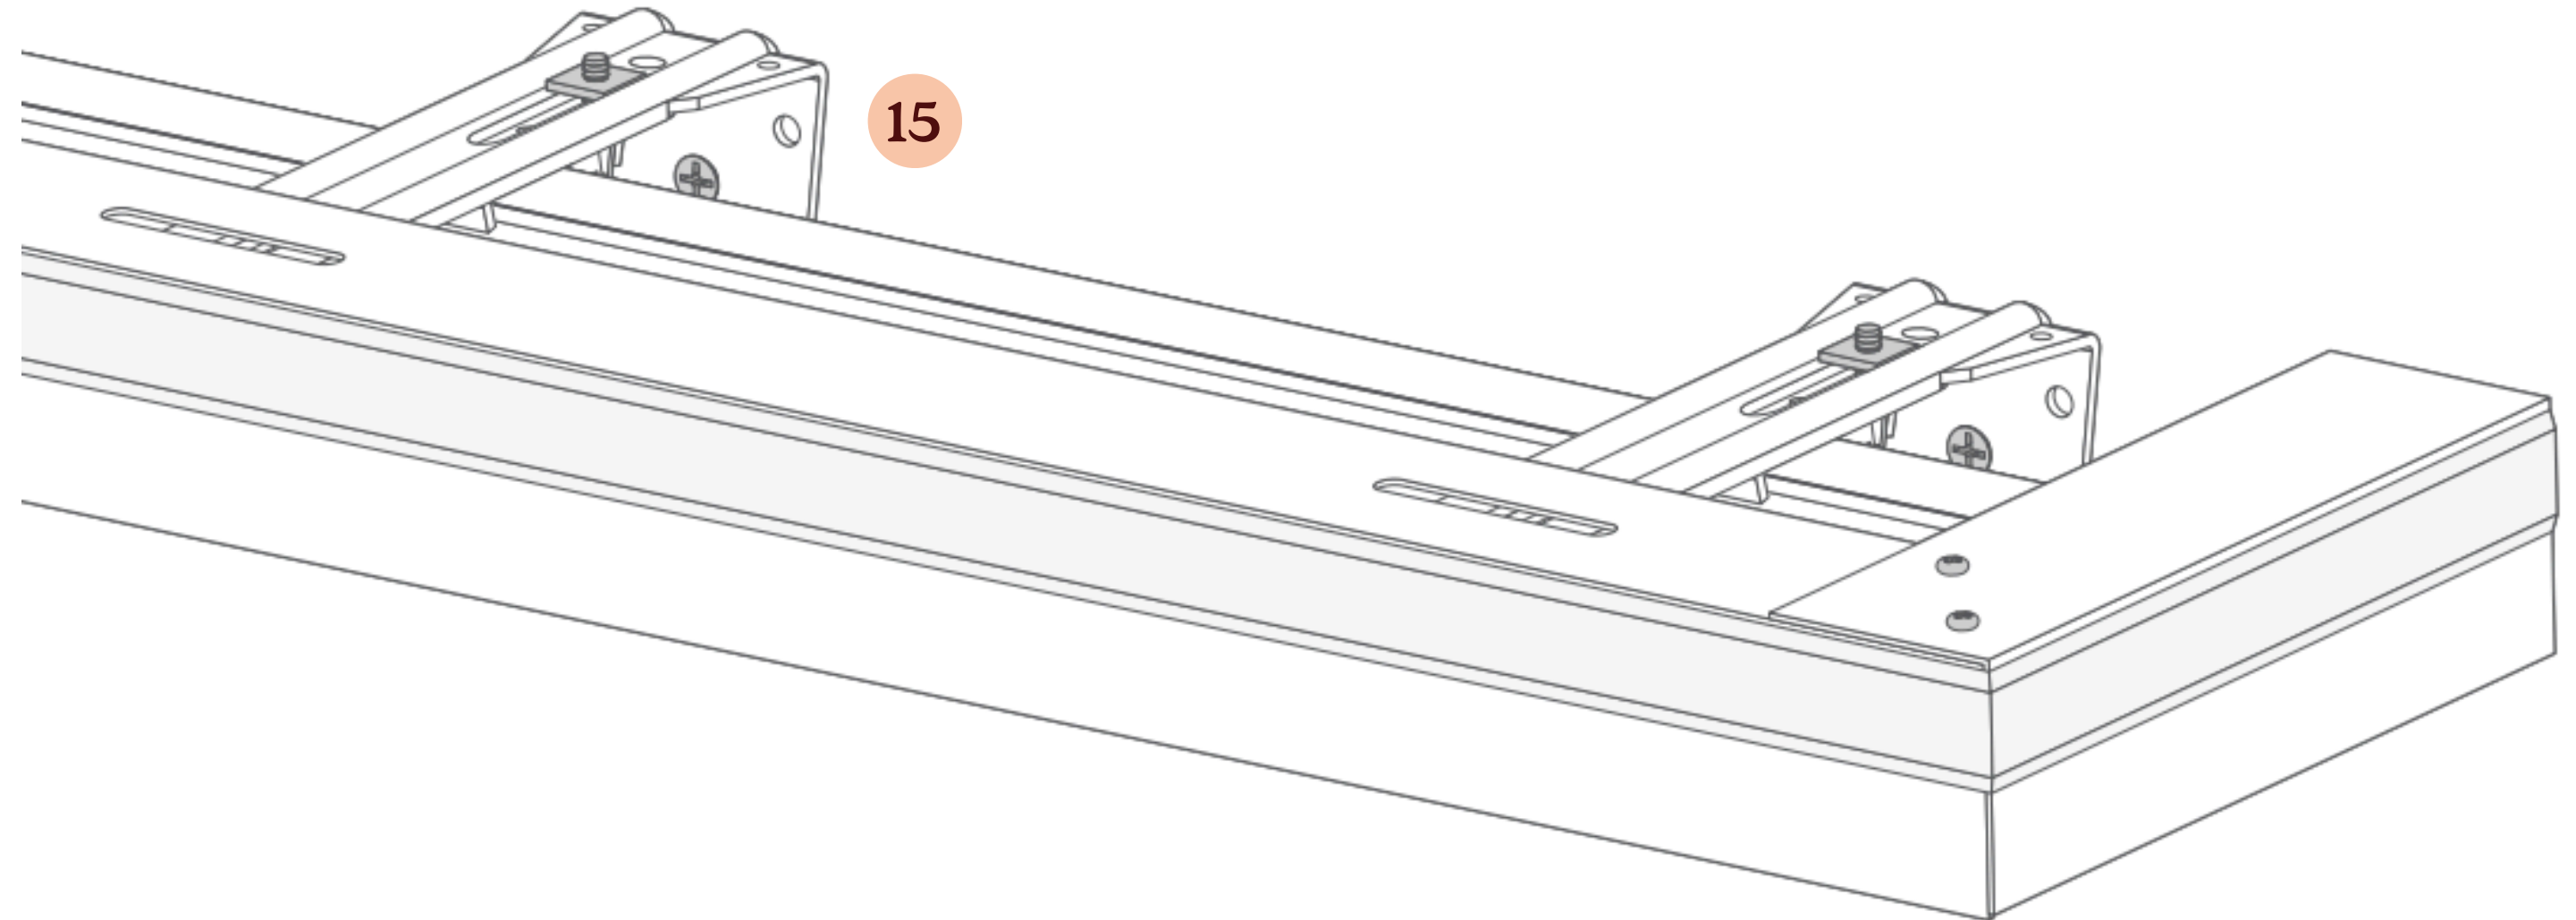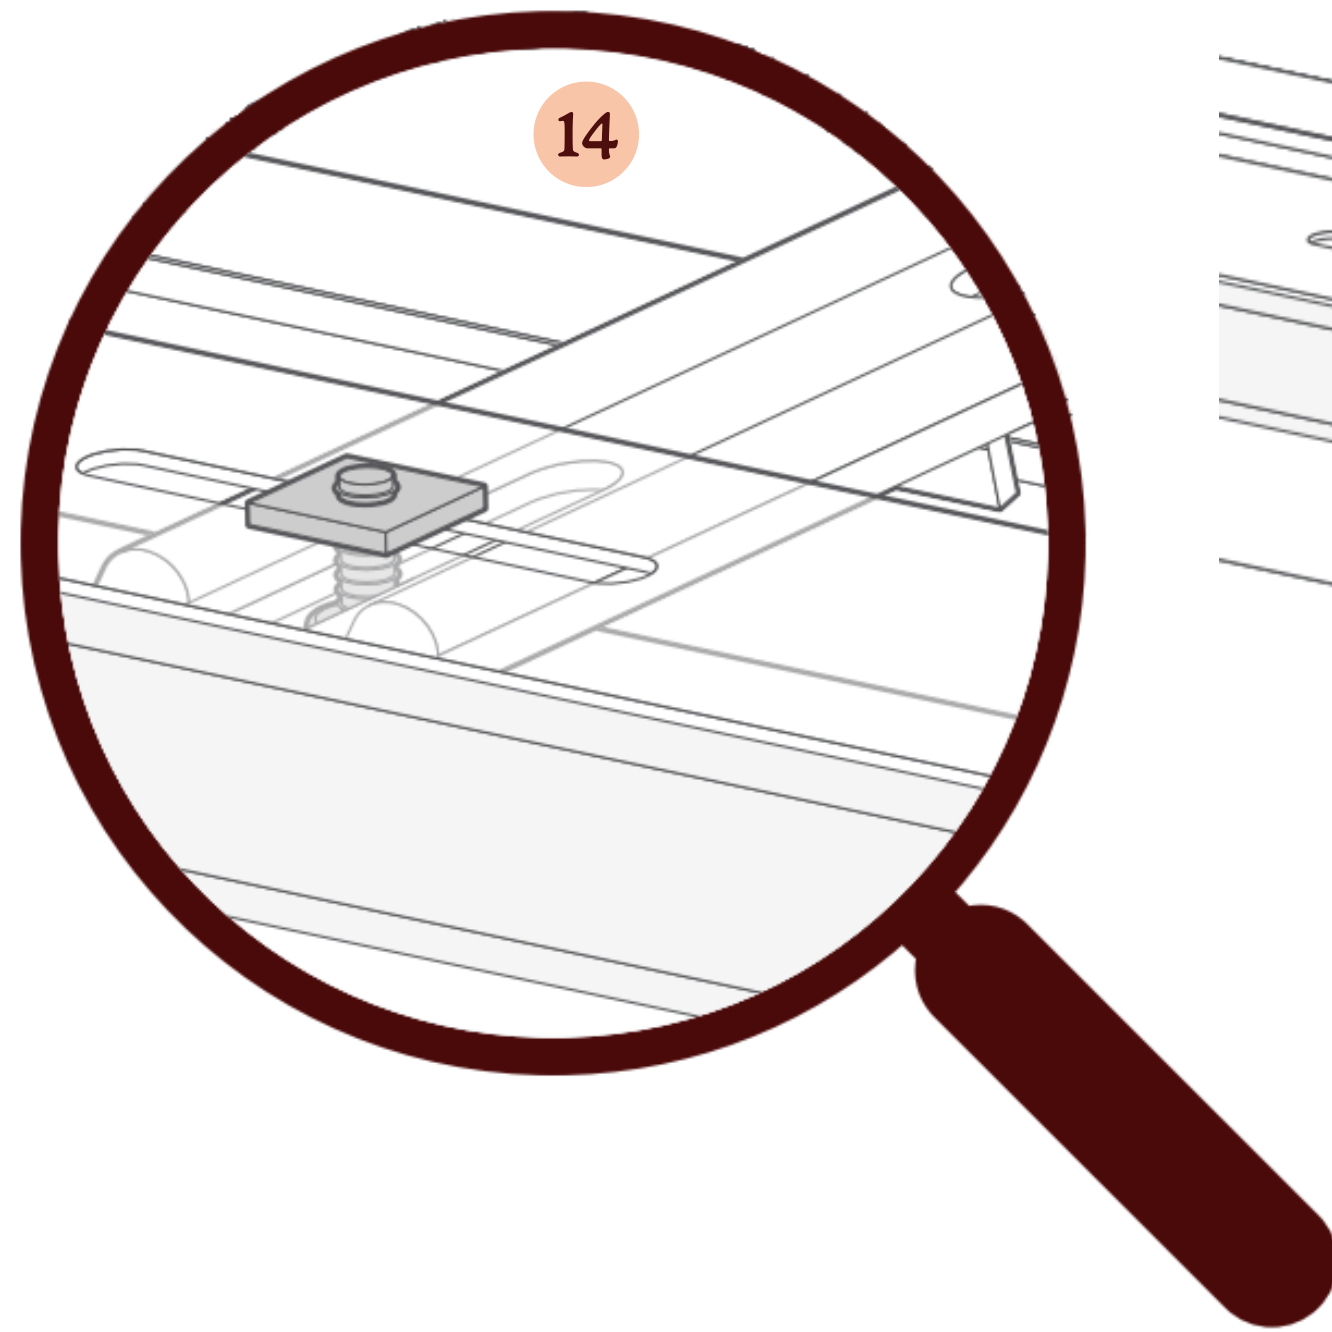


Rest the valance rail on top of the brackets, lining up the slots in the rail with the long front slots on the brackets (14). Use a valance rail screw to secure the rail to each of the brackets (15).

Section 3 *Installing the Valance Rail & Valance* - **Outside Mount**


Page 11 / 15
Section 3.2

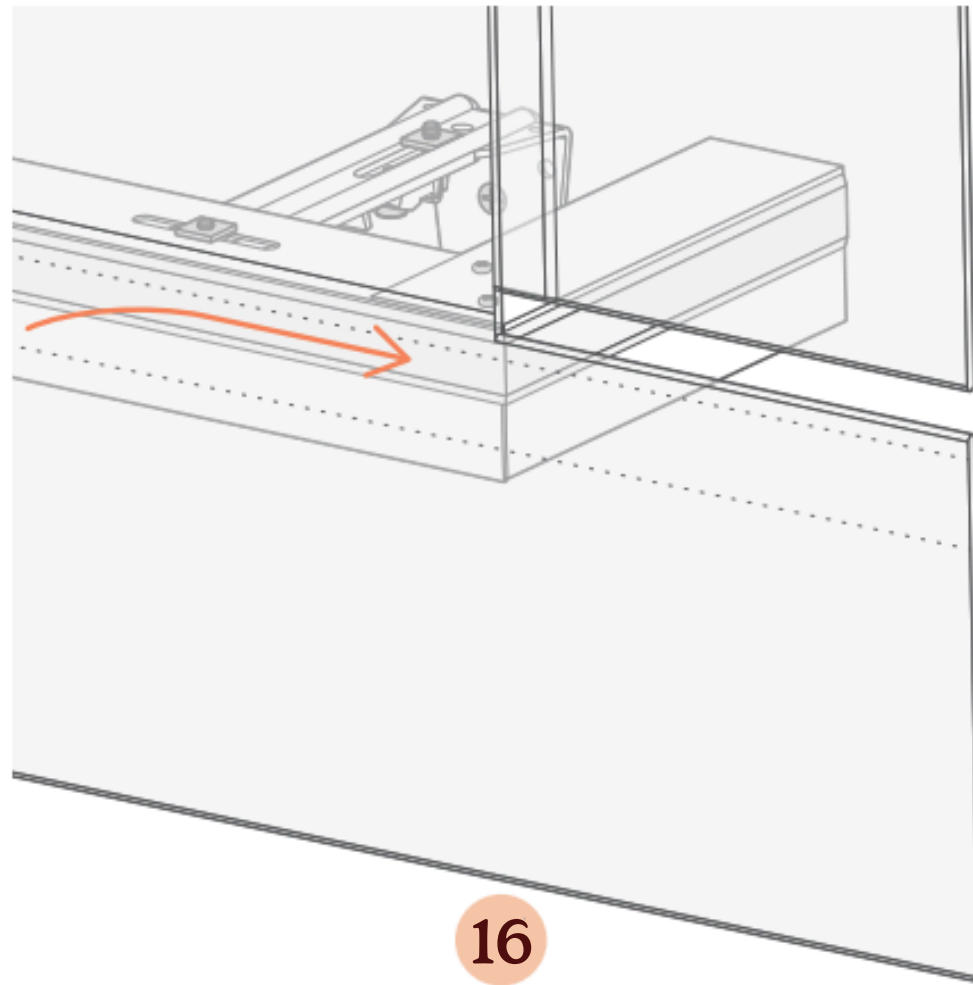


Attach the fabric valance to the front of the rail using the velcro strip on the back (16).

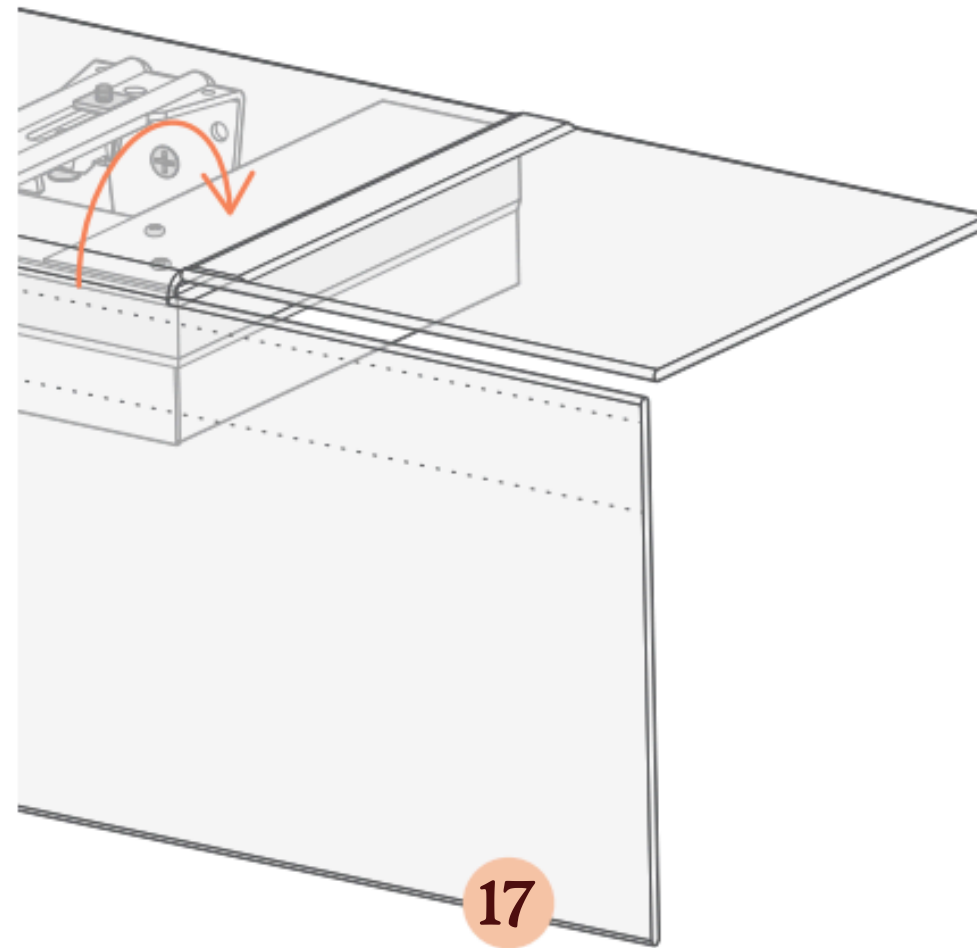

Fold the top of the fabric valance over the top of the valance rail (17).

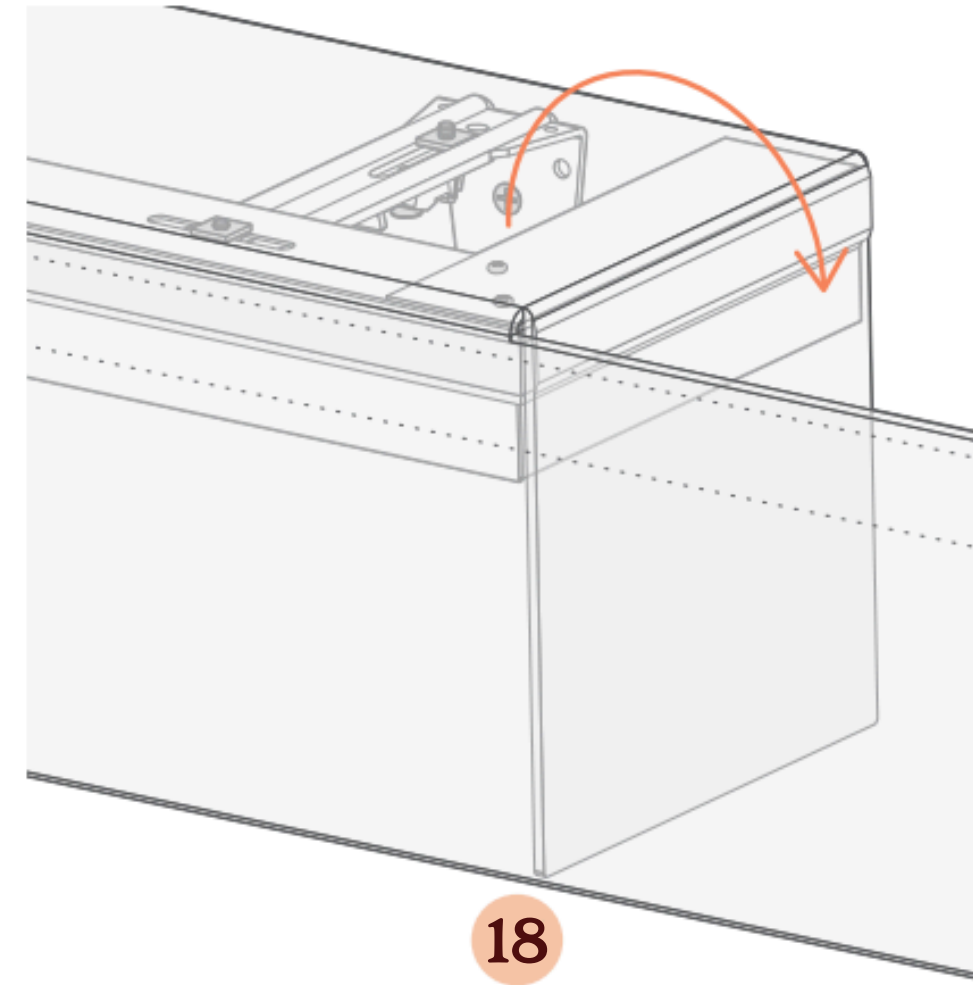


Fold down the top flaps at both ends (18).

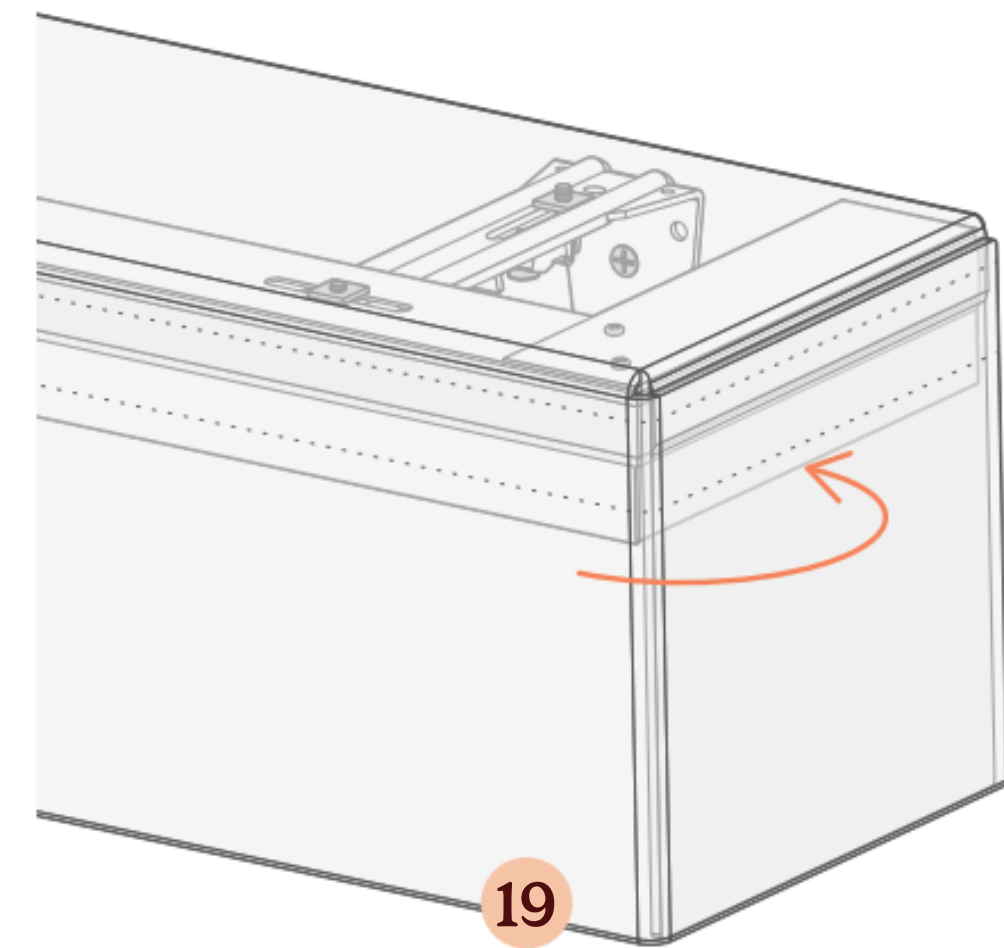


Finally, fold back the front flaps at each end (19).

Section 4 *Hanging the Curtains*

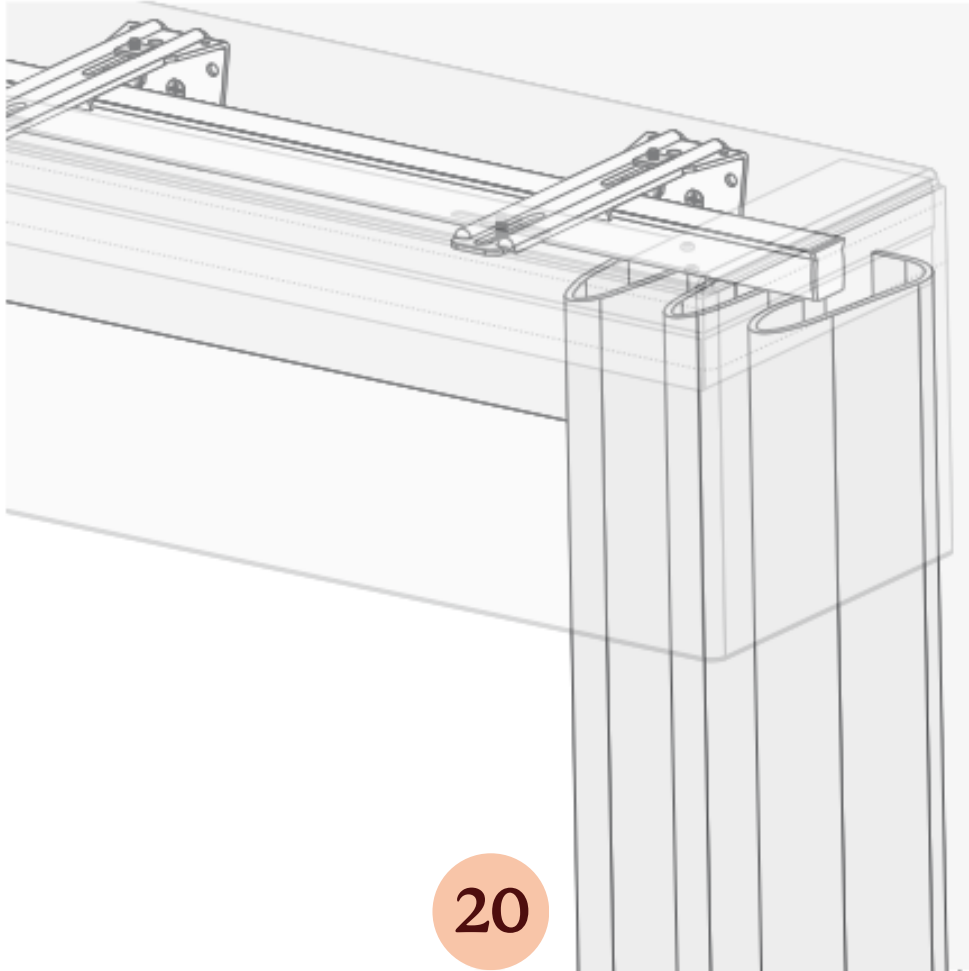


Use the hooks provided to hang the curtains onto the rail (20).

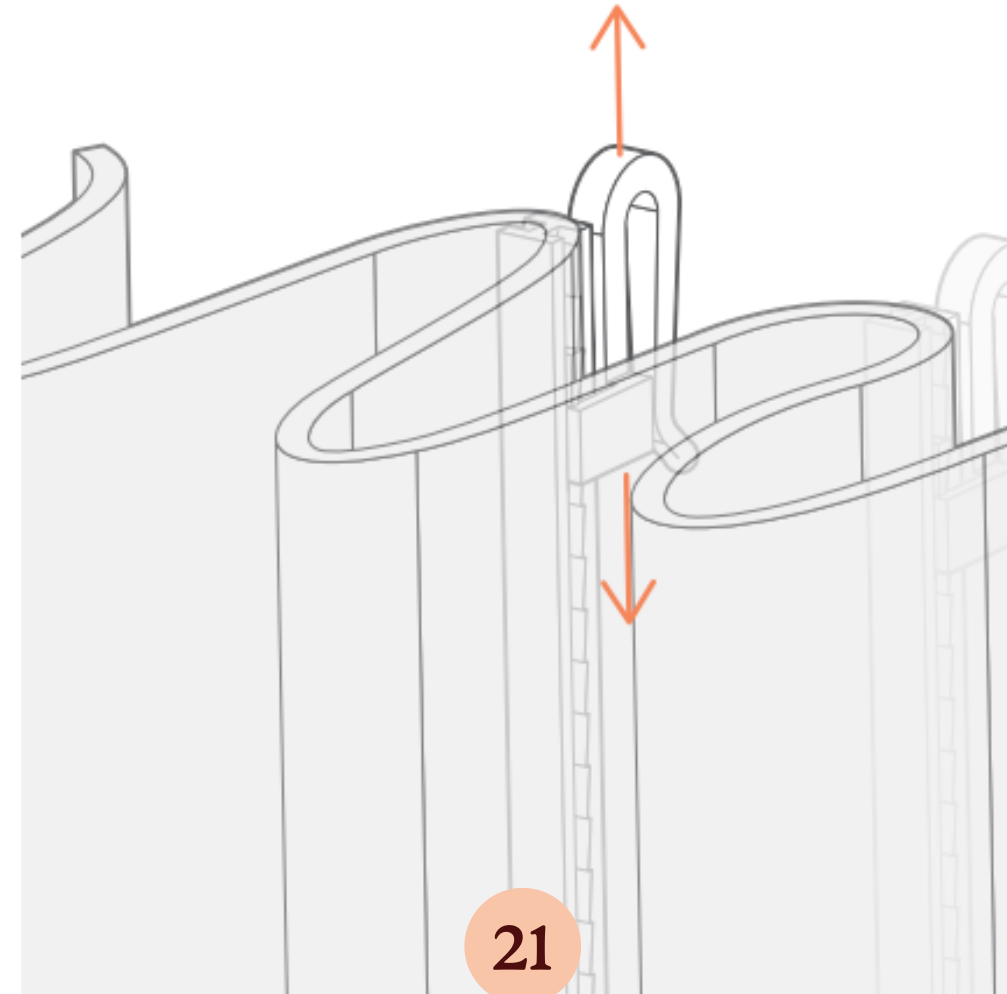


The curtain hooks are adjustable, so you can have your curtains sitting slightly higher or lower when hooked onto the track than the pre-set position (21). We recommend leaving the hooks at this pre-set, but it's possible for them to slip in transit so it's best to check they're all in the same position before hanging the curtains. More details on the next page.

Section 4 *Hanging the Curtains*


Page 13 / 15
Section 4.1

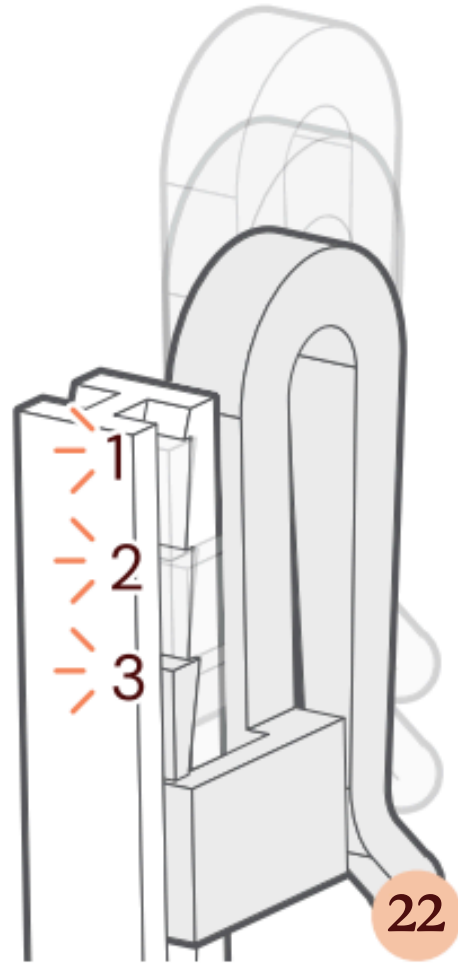

The pre-set position of the hooks is '3 clicks down' on their runners (22).

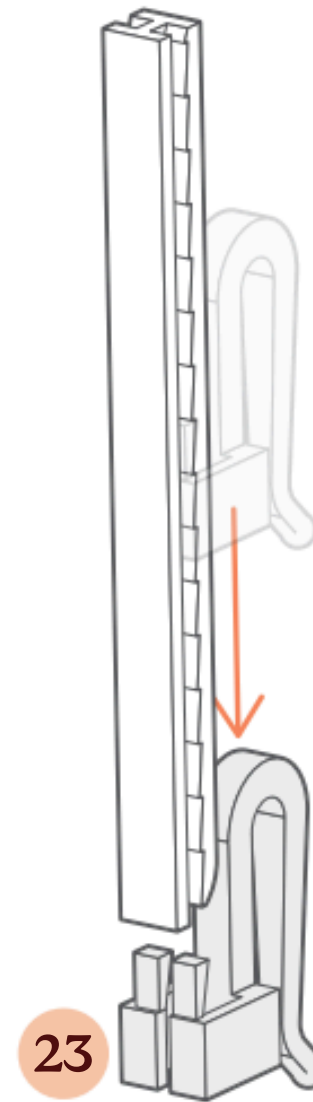




If any of the hooks are not in this position, simply slide them down until they come off the bottom of the runner (23).

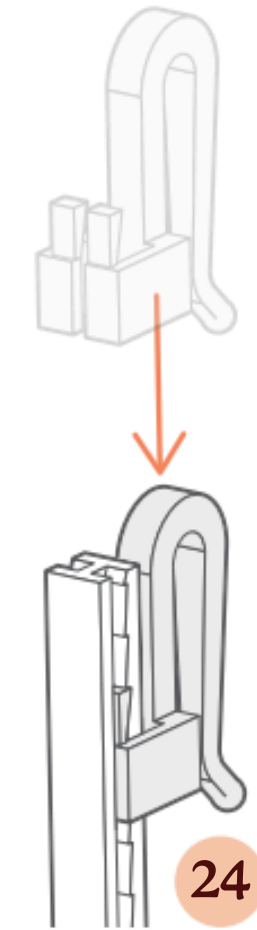

Then, slide them back onto the top of the runner (24) and carefully push them down until they're '3 clicks down'.


Section 4 *Hanging the Curtains*

Page 14 / 15
Section 4.3

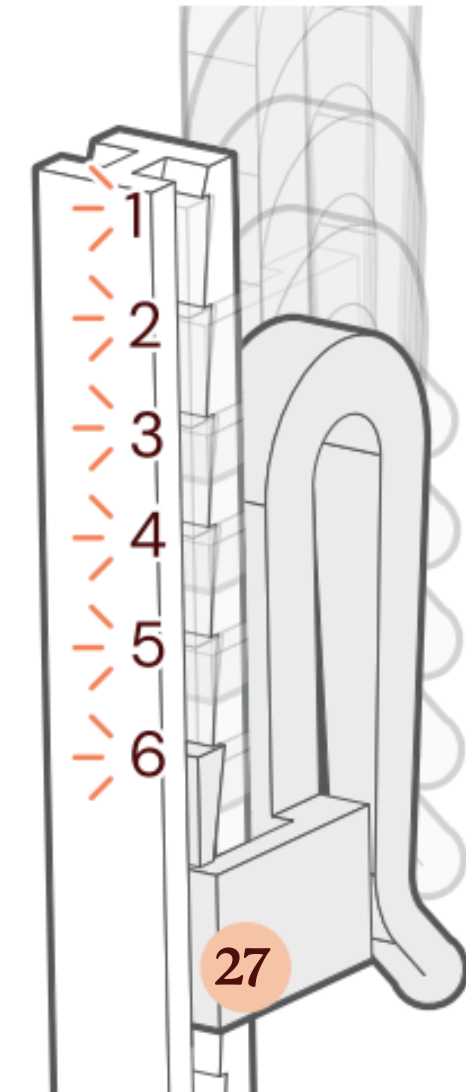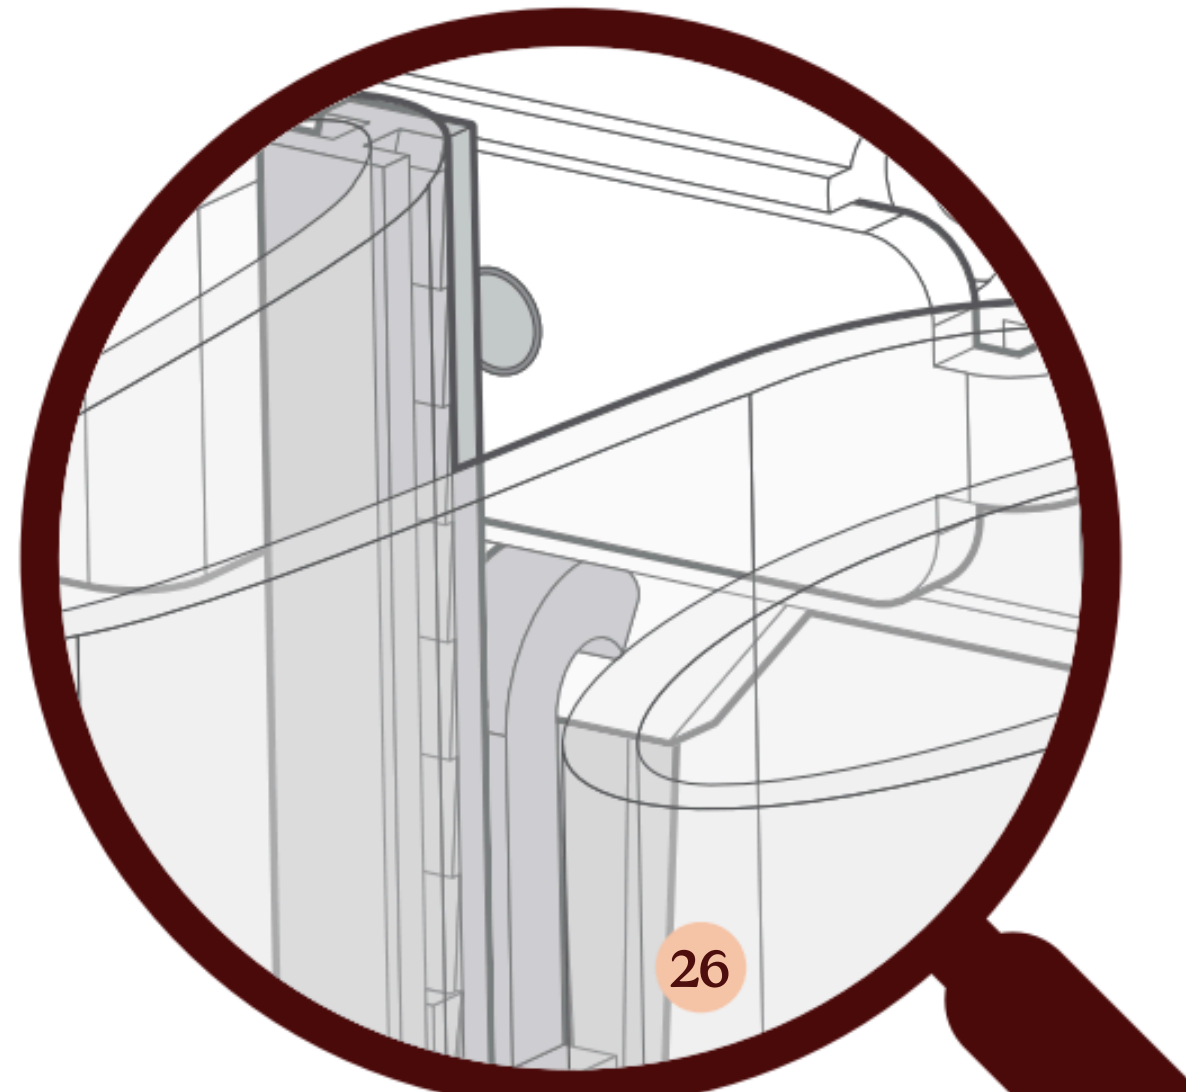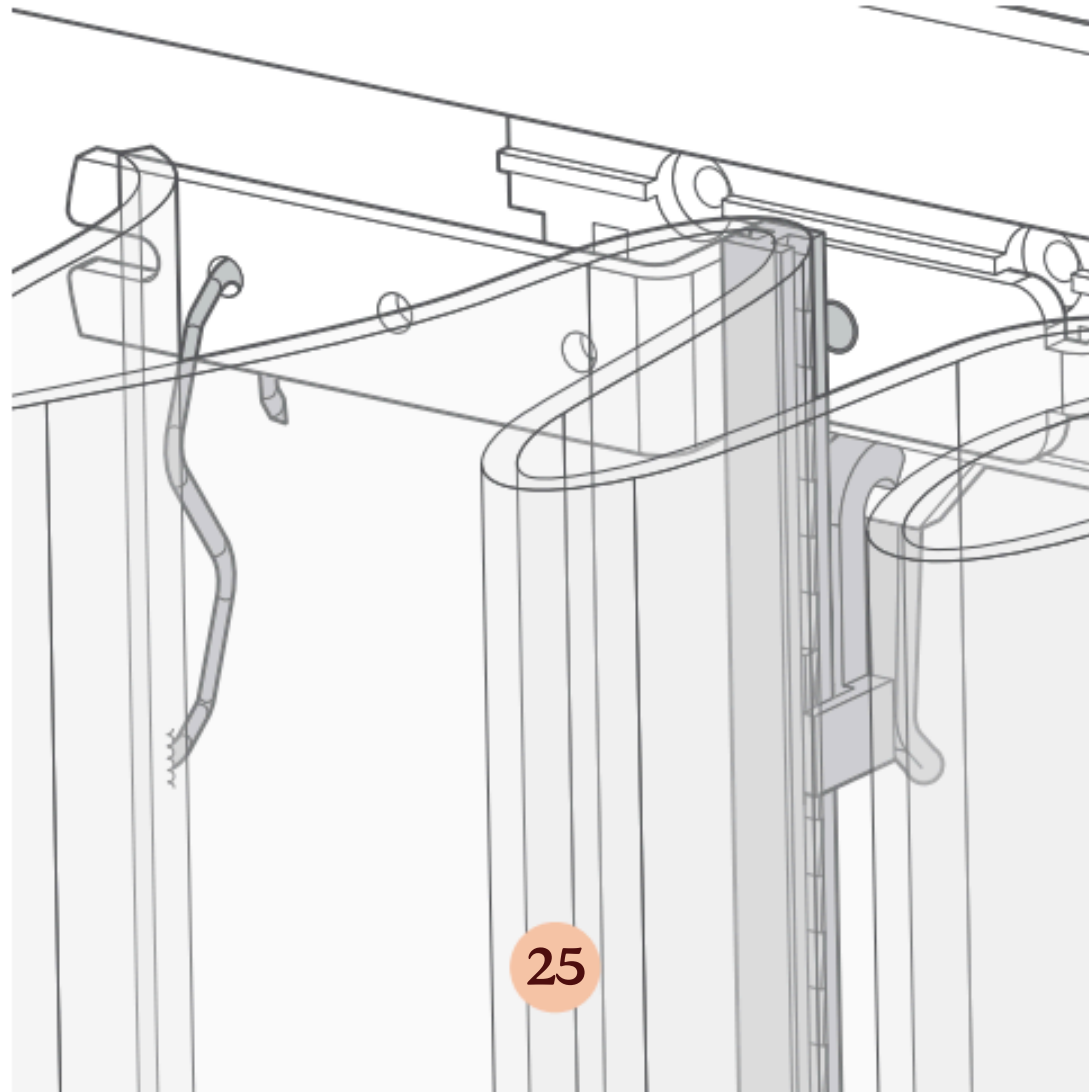


Note that the outermost hooks are metal and inserted directly into the fabric (25). If you adjust the height of the other hooks, don't forget to move these hooks to match. On the front curtain, the first adjustable hook in from the centre should be hooked into the bottom of the main carrier on the underside of the rail (26). The standard height for this hook, if it needs adjusting, is '6 clicks down' (27).


Section 4 *Hanging the Curtains*

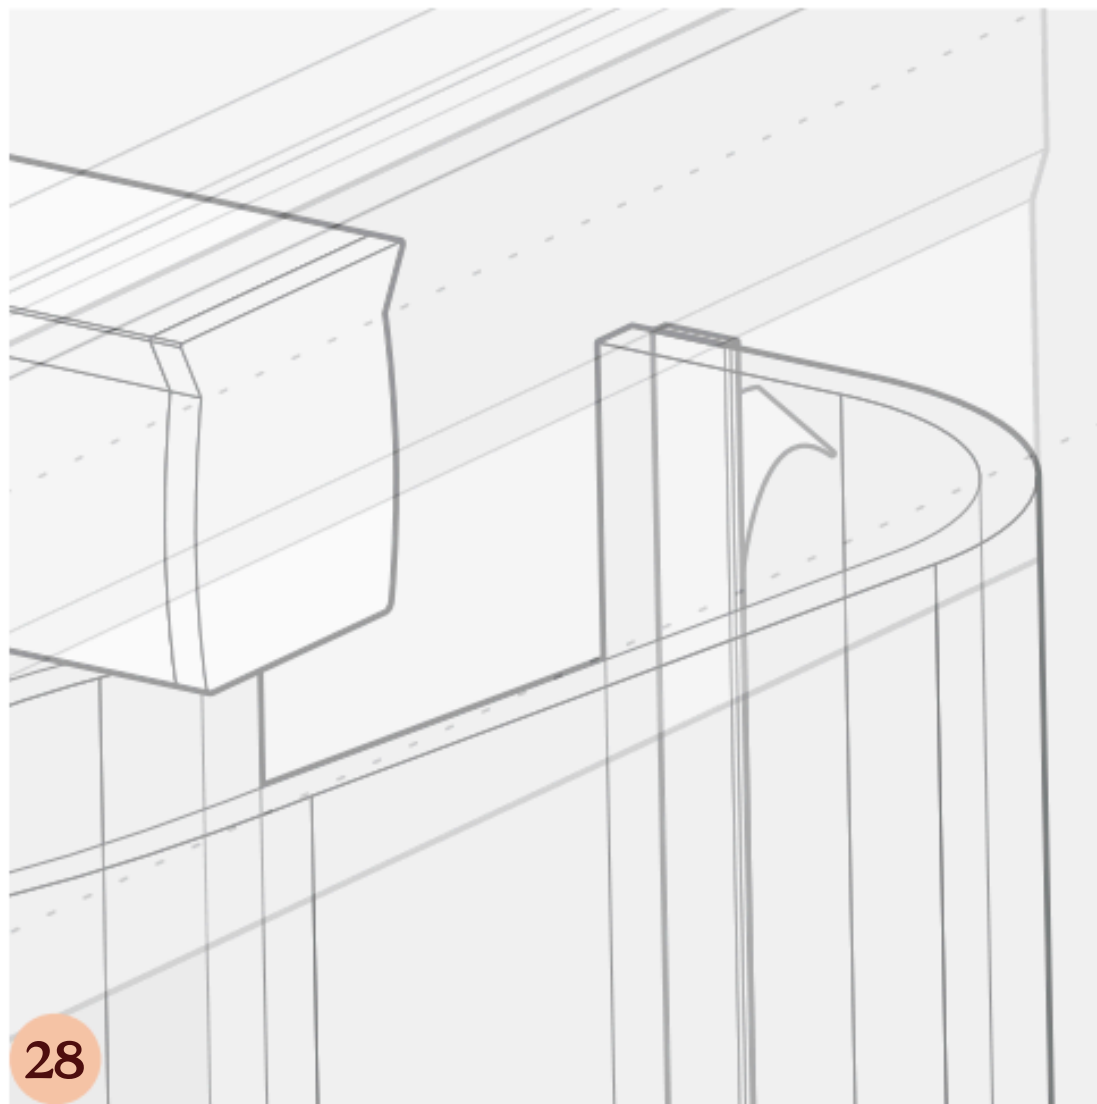

Peel off the adhesive cover for the velcro strips on the outer edge of each curtain (28).

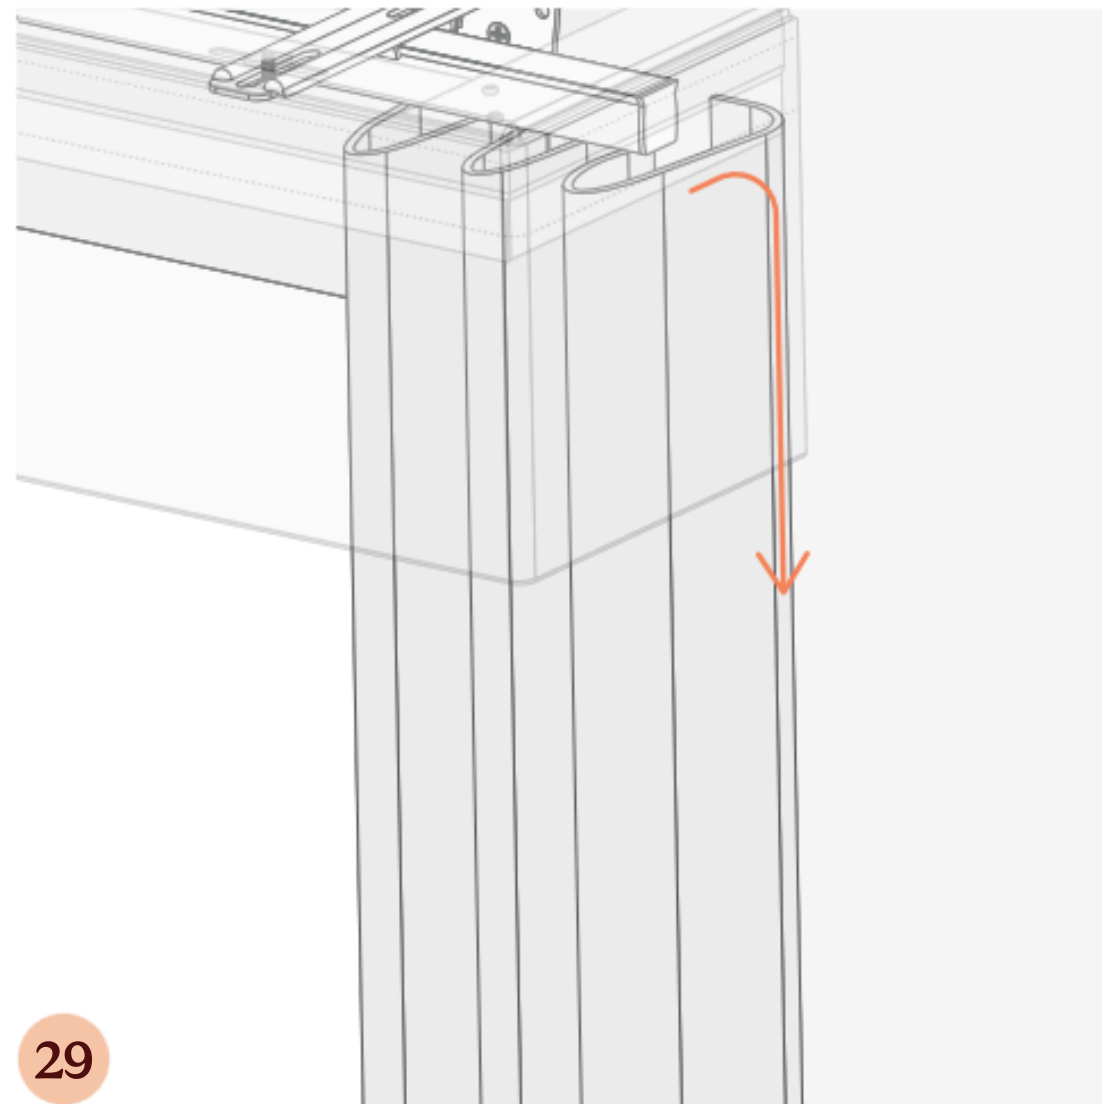

Holding the curtains straight, press the adhesive strip back against the wall (29).

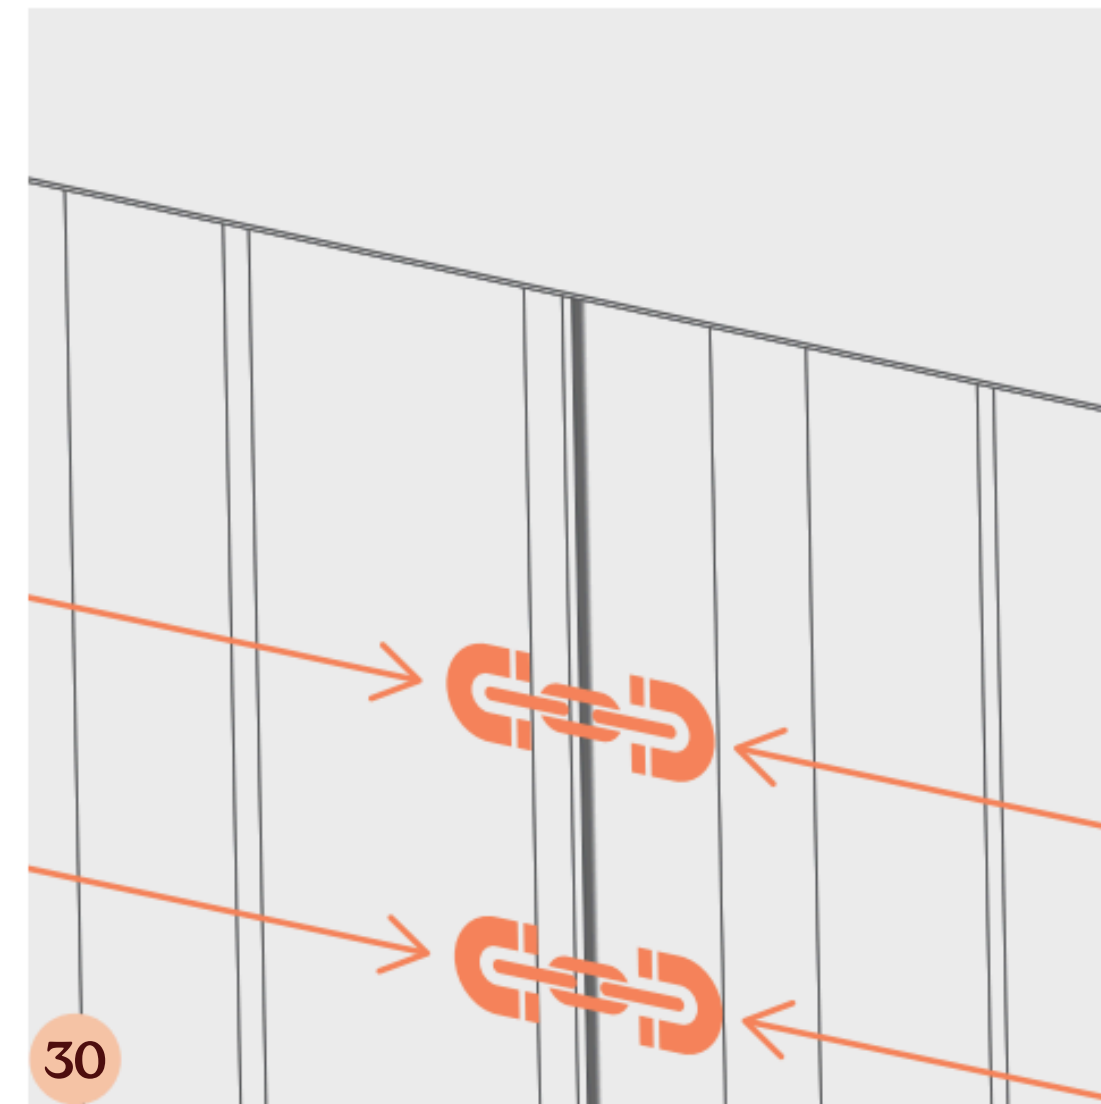

When you pull the curtains closed, magnets sewn into the inner edge will lock them together (30).