



Installation Guide: Click2Fit No-Drill Shutter


PARTS INCLUDED

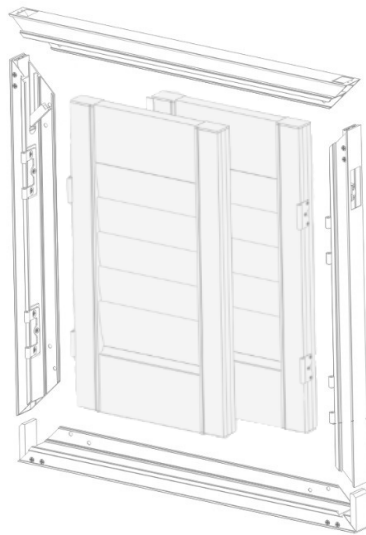

Panels, Frames, and
Frame Covers

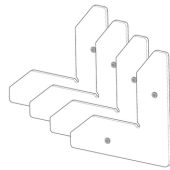


Corner Bracket

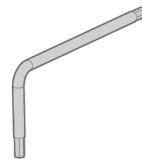

Allen Key



Cutout
Covers




Friction Pads




Pins




Screws
Corner and
Side Frame

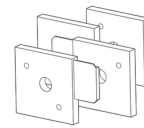

Corner Cover
Base Plates

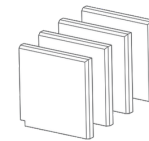


Corner Covers

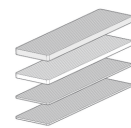


Frame Shims

TOOLS NEEDED



PHILLIPS SCREWDRIVER





FLATHEAD SCREWDRIVER

Assembling the Frame

1

Loosen the screws on the corner brackets. Slot 2 Corner Brackets into the bottom frame piece (this one has a preexisting corner connector on each side). These will slide into the channels on the Left and Right Frame Pieces.

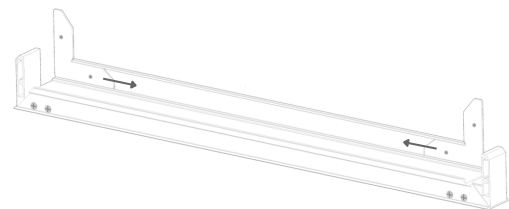
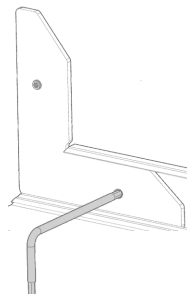


2

Slide the Left and Right Frame Pieces into the same channel that the Corner Bracket were installed.

The Left and Right Panels should slide down to fit onto the preinstalled corner connector.


Install the screws and tighten the corner brackets.

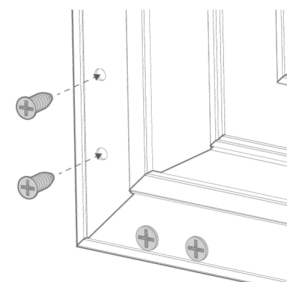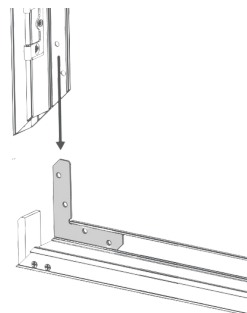

3

Slide the other 2 Corner Bracket into the Top Frame Piece (this should have a hole in the top left and right).


Slide the screws for each corner inward towards the middle of the frame.

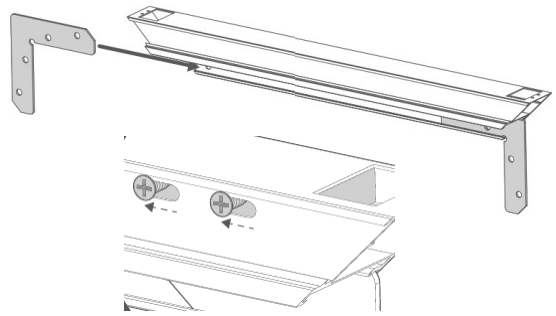

4

Slot the Top Frame into the top of the Left and Right Frame Pieces.


The ends of the Click2Fit push blocks should slot through the rectangular holes.

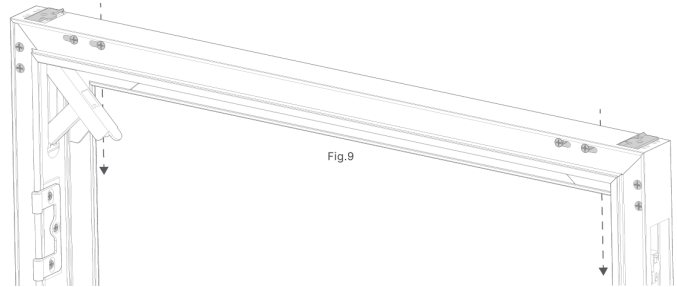

5

Slide the carriage screws away from the middle of the frame and towards the Click2Fit push block.


Tighten the screws to secure it in place.

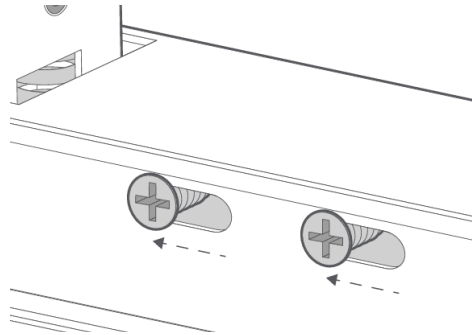

6

Use the Allen Key to tighten the Corner Bracket Bolts to fully secure the Corner Brackets.


While tightening the bolts, hold the frames in place to ensure they are square.

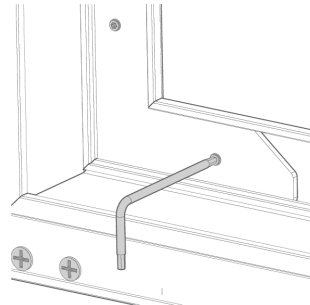

7

Screw the top corners in place using the Philips Screws.


Snap on the friction pads on the preinstalled Click2Fit push blocks. These will keep the shutter secure without damaging the window opening.

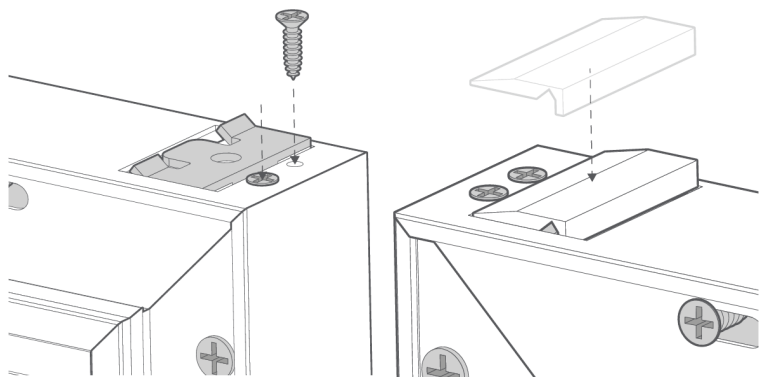

Attaching the Frame Covers

1

Take the top Frame Cover and hook the upper lip on the back of the frame cover under the matching lip on the frame. See the diagram to the right.

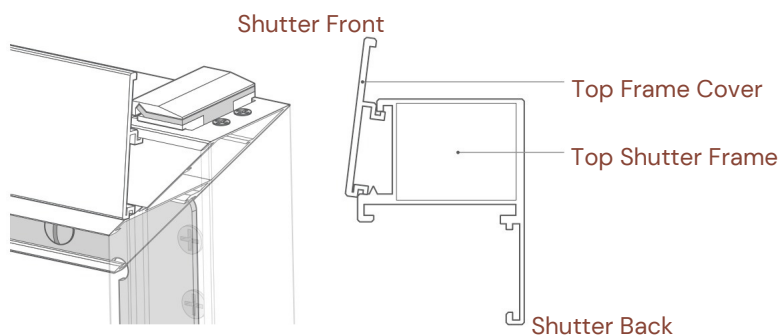


Each of the Frame Covers has a label: Top, Left, Right, and Bottom.

2



Adjust the cover left or right to center it on the frame.

Continue to do this step to the Left, Right, and Bottom Frame Pieces.

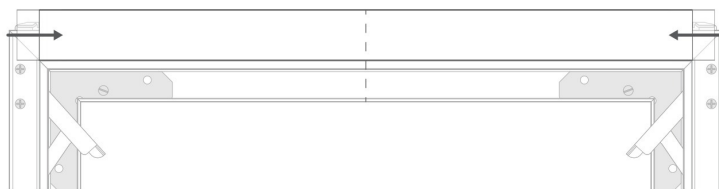


3

Use the Frame Corner Plates (seen below).

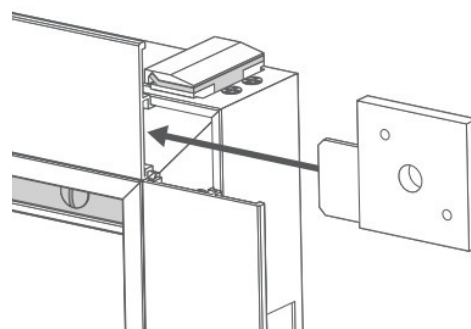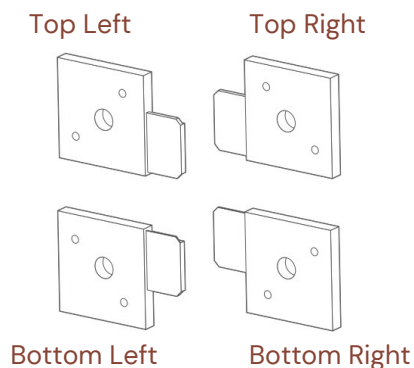


Insert a Corner Plate into each Frame Cover for each respective corner.


Quick pointers

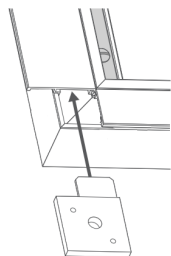

Insert the Corner Plates from below for a shutter with a sill.

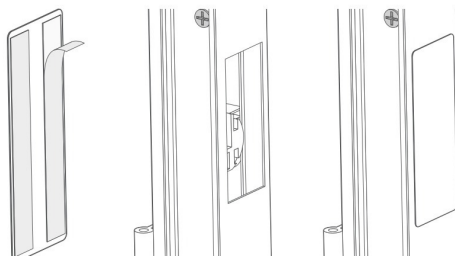




Peel the adhesive off of the Cutout Cover and install it over the hole. This is usually hidden against the wall when installed, so this is optional.

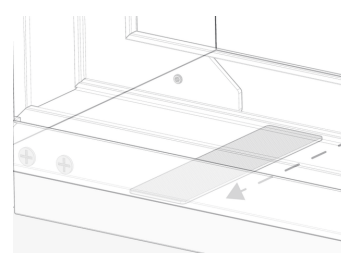

Optional Shims are included to ensure the frame sits level.

Installing the Frame in the Window



Slide the Frame into the window opening. While holding the Frame in place against the window edge, press the lever down and lock it in place. Do this on each side.

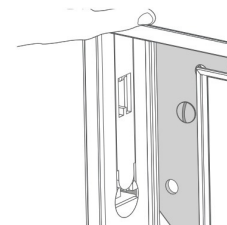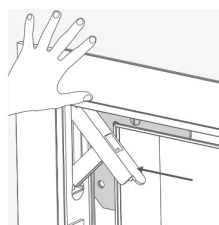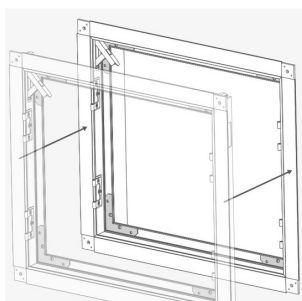

Make sure to have the levers open before sliding the frame into the opening. This may be the point where you would need a second set of hands.

Installing the Panels



With the hinges sticking out towards you, slide a panel into the frame so that the hinges align (the panel hinge should slide into the frame hinge). Slide the Hinge Pins into the hinges to lock them in place.

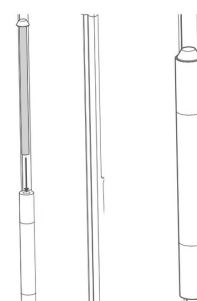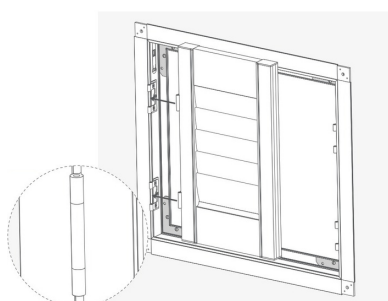

Installing the Corner Covers

Clip a Corner Cover over each Corner Cover Base Plate of the frame.

Test out operation from there.

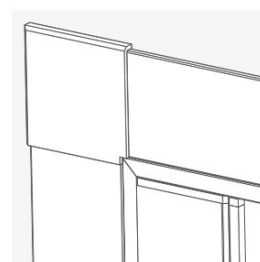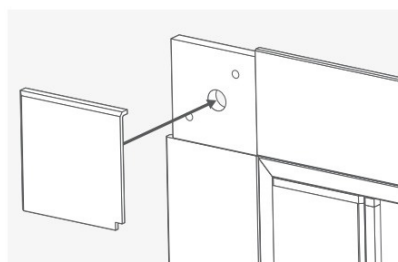

CLEANING INSTRUCTIONS

For regular maintenance, use a duster or a vacuum with a brush attachment and run it over the front and back of the shutter. You may also use a damp washcloth with a mild detergent for tougher dust.