

SelectBlinds

Installation Guide:

Vertical Blinds




Installation
Inside Mount



Installation
Outside Mount

HARDWARE AND PARTS INCLUDED



INSIDE MOUNT
BRACKETS



OUTSIDE MOUNT
BRACKETS



SCREWS

TOOLS REQUIRED



PENCIL




TAPE MEASURE



POWER DRILL



5/64" DRILL BIT




PHILLIPS SCREWDRIVER



PHILLIPS DRILL BIT



LEVEL

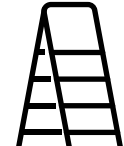

STEP LADDER


Quick pointers

- 1 If you use your own screws instead of those provided, be sure to pre-drill a small hole with a 5/64" drill bit before the final screws go in to attach brackets.
- 2 If you're using wall anchors, pre-drill with a 1/4" drill bit instead, then tap the wall anchors in place before drilling in the screws.




LEVEL 2 INSTALLATION

INSIDE MOUNT

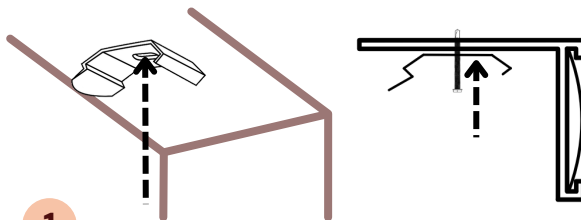

- 1 Ensure the bracket is at least 2" from the sides of the window opening.
- 2 Take a bracket and place it appropriately in the window opening. Use the holes in the top of the bracket to mark screw placement.
- 3 If you're using the valance, install the valance into the window opening first or simultaneously with the bracket install step below.
- 4 Align the brackets with the holes, and use a Phillips drill bit to install the screws.


OUTSIDE MOUNT

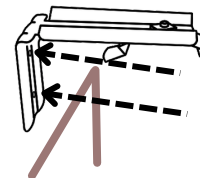

- 1 Make sure the top of the bracket is at least 1 1/2" above the top of the window opening. Make a mark with a pencil.
- 2 Align the top back of a bracket with this mark, and use the holes in the back of the bracket to mark screw placement.
- 3 Align the brackets with the holes, and use a Phillips drill bit to install the screws.


ATTACHING THE HEADRAIL

1

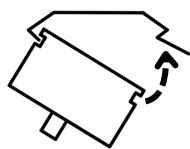

Tilt the headrail back so that the front of the track can settle on the lip on the front of the bracket.

2

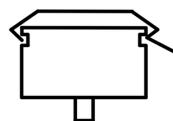


While resting on the front hooks of the bracket, tilt the back of the track up. Press the back of the track up firmly and the bracket will click into place.


ATTACHING THE VALANCE

(Outside Mount)

1

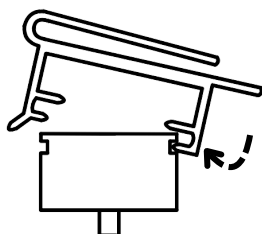

2

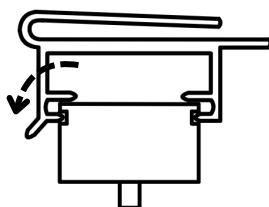


1

Tilt the valance clips forward so that the front of the clips can settle on the lip on the front of the track.


2

Tilt the clip back down so that the back of the clips will snap onto the back lip of the track.

3

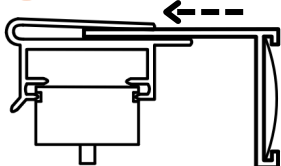

4

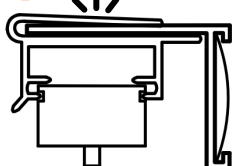



3

Insert the dust cover on the top of the valance into the top slot of the valance clip.

4

Slide it back into the slot, and you'll hear a few clicks locking it in place.

ATTACHING THE VANES

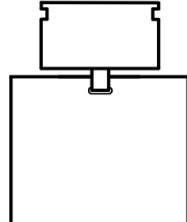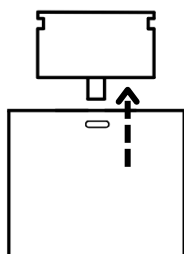

With the hole punch on the vanes at the top, slide each vane into each available stem with them facing the same direction.

Test the tilt function to ensure smooth operation.

CLEANING INSTRUCTIONS

For regular maintenance, use a duster or a vacuum with a brush attachment and run it over the front and back of the blind. You may also use a damp washcloth with a mild detergent for tougher dust.

OPERATION


To rotate the vanes, turn the wand and they will rotate to the position desired. To move the vanes out of the way, make sure you tilt the vanes open.

TROUBLESHOOTING

If the vanes are out of alignment, ratchet the vanes by stacking them so they are fully stacked. Rotate the wand until you hear a series of clicks, then rotate the opposite direction until you hear a series of clicks again. Otherwise, make sure the vanes overlap properly in the same direction.



CHILD SAFETY WARNING



Corded window blinds and shades can be a strangulation risk or cause serious injury to young children and pets. When using corded window treatments, use the following tips to keep them safe:

● NEVER place a crib by a window!

● Move furniture that children can climb on away from the window.

● Always use cord cleats with corded products.

● Secure child-safe tensioners for continuous cord loop chains to the wall or window encasement.


● Keep cords up and away from your child's reach.

Installation Guide: Vertical Blinds

Rounded Luxury Valance


Quick pointers

These instructions are for outside mount only. If you need to install the Luxury Valance for an inside mount, follow the steps on the first page of this install guide.

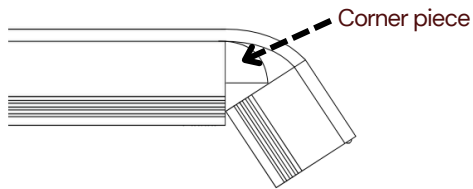


1

Attach the corner piece to the valance. The valance will arrive 1" smaller in width than what was ordered, but that's perfectly fine!

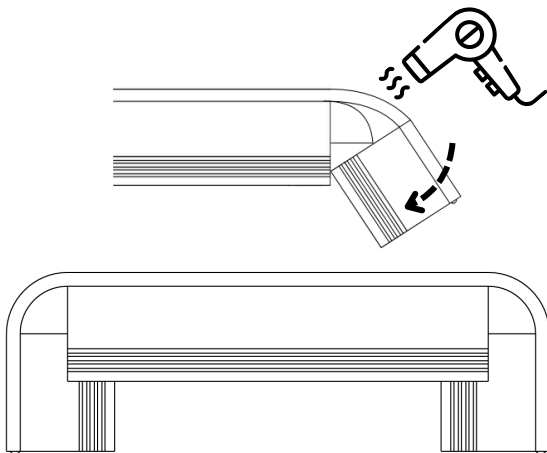

2

Using a heat gun or a hair dryer on a heat setting, slightly heat up the rubber trim to bend it around the corner and inserting it into the channels. Attach the valance returns from there.

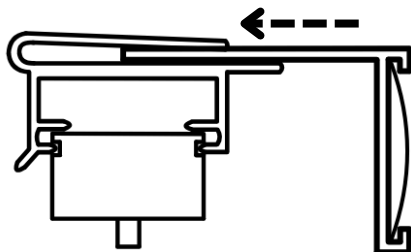

3

Using the valance clips, slot the dust cover into the valance clip top and hear a few clicks to confirm it's lock in.