



No-Drill Cordless Complete Blackout Shades

Install Guide

PARTS INCLUDED




Headrail Light
Block Covers

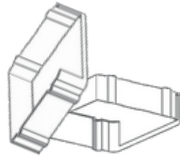

End Caps




Side Tracks

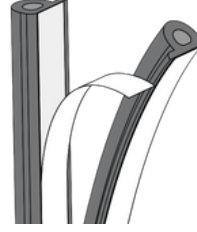


Light Sealing Strip




Installation

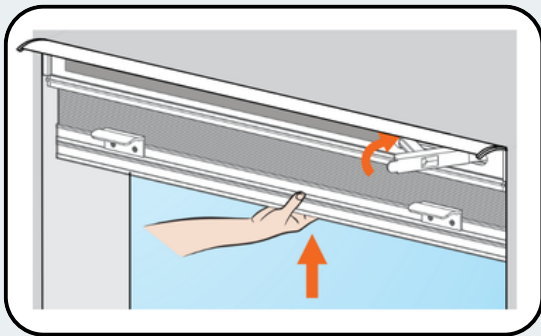


Flip-up the built in Valance, and set the product in the window opening at the top of the window. Please ensure it's no more than 1/4" away from the front of the window opening.

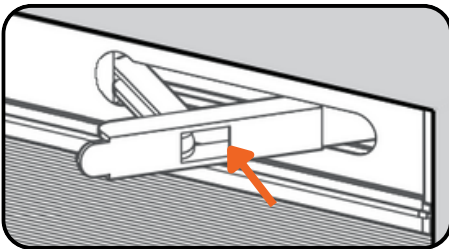


Push the lever in, and lock it in place.

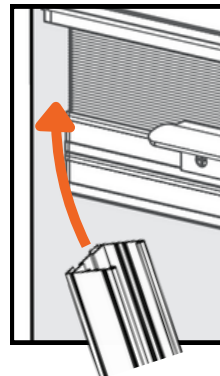


Angle the side channel slightly, so you can slide it up and slot it into the guides that hang down from the headrail.

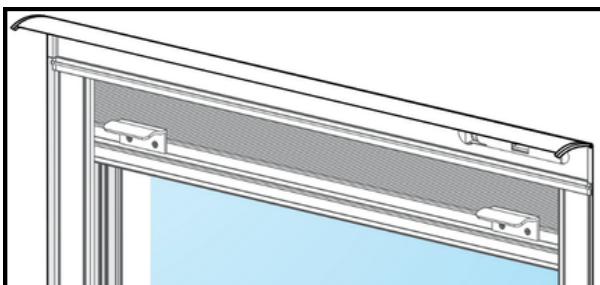

Do this for both sides of the shade.

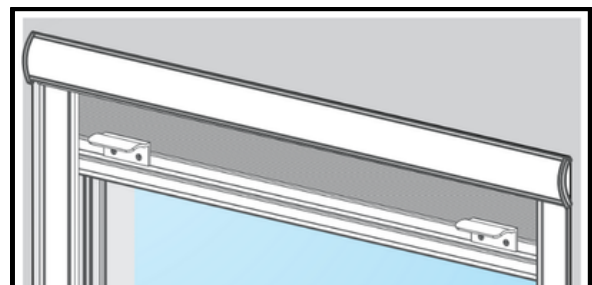

Lower the valance to cover the lever.

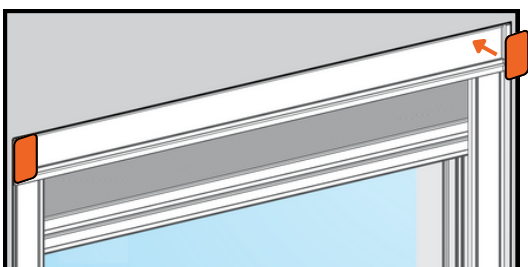


Attach some additionally included light blockers to the back of the headrail.


This will ensure there is no light that can sneak through the top headrail when locked in place.

No-Drill Cordless Complete Blackout Shades


Install Guide

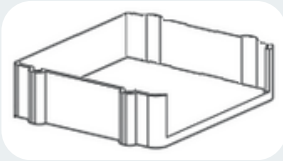

Attach the bottom cap to each of the side tracks to ensure there is no damage to the bottom of the window opening.

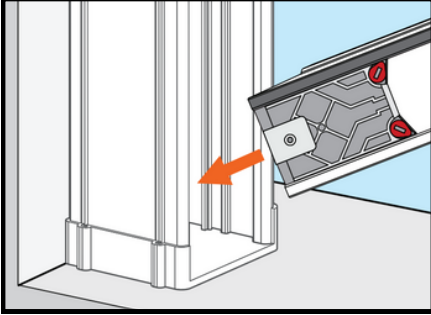

Make sure the side track is set slightly back in the window, about 1/4". Insert the bottom Click2Fit rail with the flange in the front, then rotate it towards you so the bottom lies flat on the bottom of the window sill.

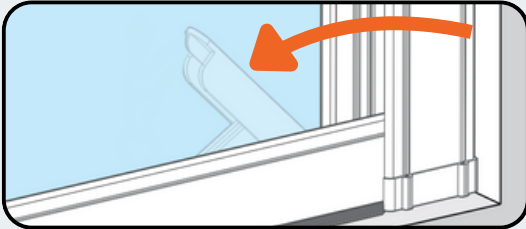


Push the lever down and lock it in place.

Test out the shade and adjust as needed for smooth operation.

Congratulations! You've just installed your No-Drill Cordless Complete Blackout Cellular Shades!

Optional Installation

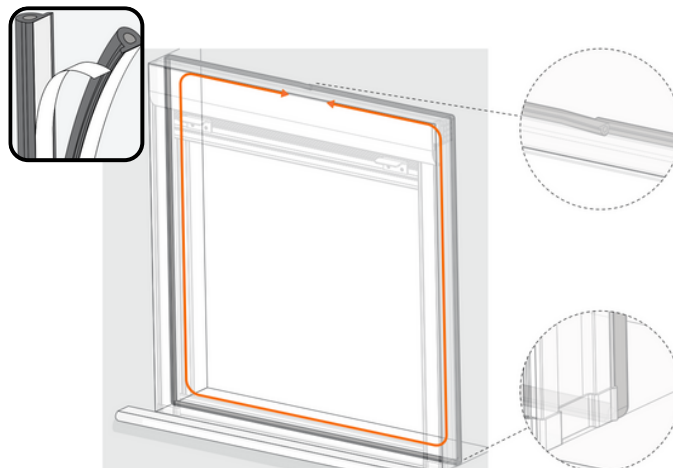

If you have gaps, add the included Light Sealing Strip to the outside edge of the side tracks to block additional light.

Cleaning: To clean the shade fabric, use a feather duster or vacuum lightly using a soft brush attachment.