


Getting Started


A few simple tools are required:

- Measuring tape
- Carpenters Level
- Power drill or Phillips head Screwdriver
- 1/4" Hex head and/or Phillips driver bit

Additional fasteners other than those sent with your shading may be required depending on the mounting surface. Wallboard and plaster require the use of anchors such as expansion or toggle bolts. Brick, tile or stone need special plugs and drill bits. Remember to always pre-drill holes in wood to avoid splitting.

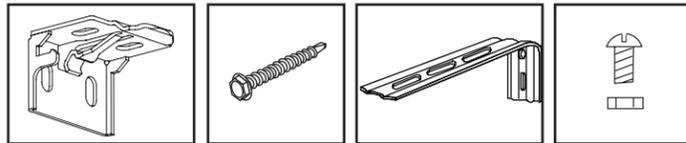

Mounting Bracket
1 1/4" Hex Head Bracket Screw
Headrail Extension and Sidemount Bracket (optional)
Nut & Bolt (optional)

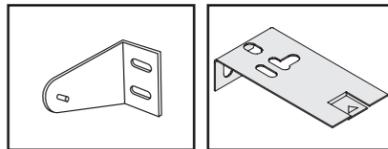

Hold Down Bracket (optional)
Valance Bracket (optional)


Step 1: Bracket Installation

MAKE SURE MOUNTING SURFACE IS LEVEL

If the headrail does not sit level, the fabric will not roll up evenly which could damage the edges of the blind fabric. Use shims if necessary to level brackets.


Shade Width	# of Brackets
Up to 40"	2
>40" - 72"	3
>72" - 84"	4
>84" - 114"	5

INSIDE MOUNT

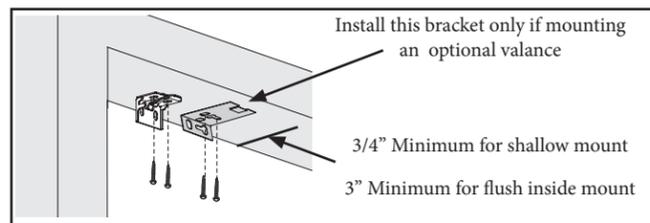


Use shims if necessary to ensure that the headrail is mounted level.

OUTSIDE MOUNT

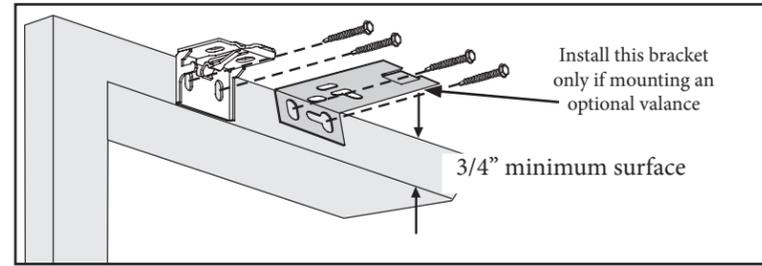


EXTENSION BRACKETS (optional)

Optional Extension Brackets are used to project the back of the blind up to 2 1/2" from the mounting surface. Attach the Mounting Bracket to the Extension Bracket with the nut and bolt provided.

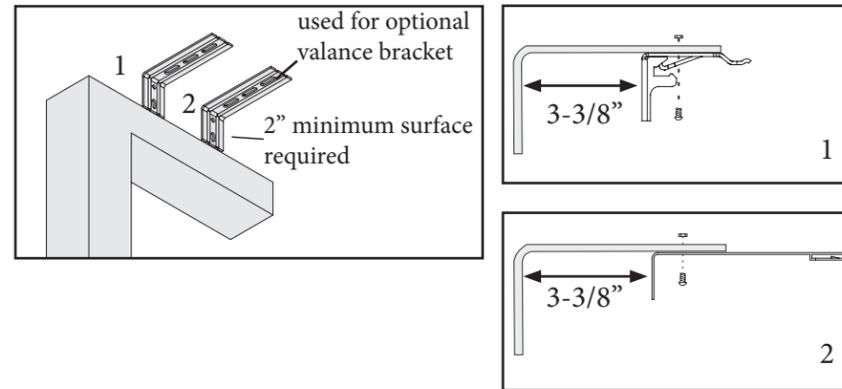

SIDE MOUNT (optional)

Measure from window sill up to desired mounting position on each side of the window frame. Mark position. Mount Side Mount Brackets on each side of window frame as shown. Make sure to confirm that headrail will sit perfectly level. Once Side Mount Brackets are installed and properly positioned, attach the Mounting Brackets using the nuts and bolts provided.

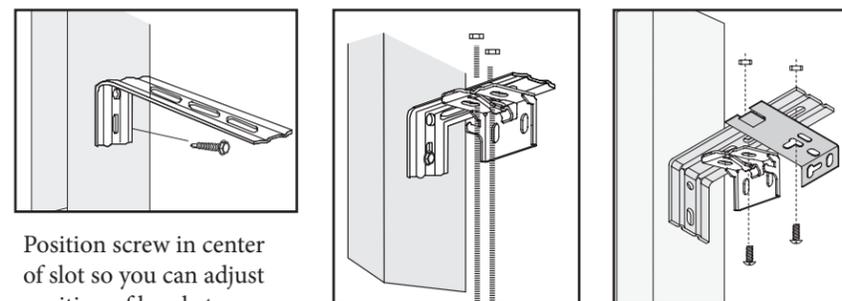


Position screw in center of slot so you can adjust position of bracket as necessary.

Sidemount without valance


Sidemount with optional valance

Step 2: Shade Installation

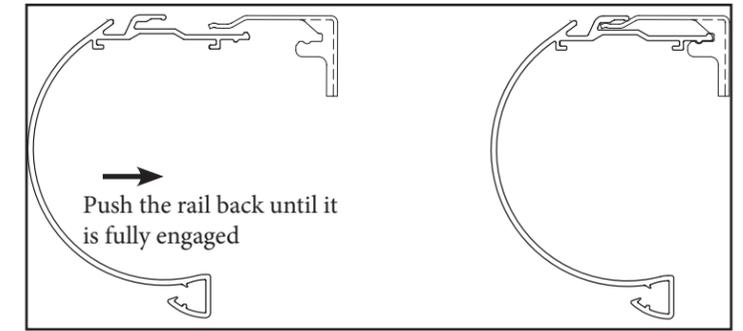

Headrail removal


To remove the shading, fully raise the shade and insert a flat head screwdriver as shown. Twist the screwdriver until the headrail disengages from the bracket.

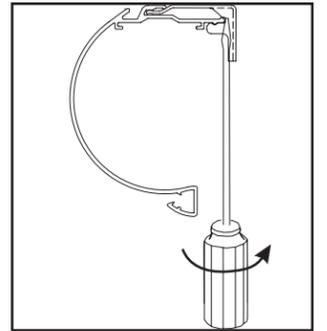

Step 3: Valance Installation (optional)

VALANCE

Align the valance with the valance brackets. Gently push at each bracket location until the valance is fully seated.

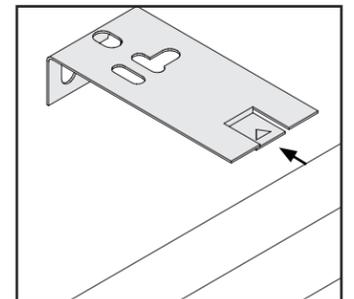

Step 4: Operation

Cord-free Control

The cord-free roman is a standard cordless system with simple and smooth operation. Remember: “Lift to Raise, Lift to Lower”.

“**Lift to Raise**” - To lift the shade, always lift from the center to prevent skewing. When at the desired height, start to lower and a locking mechanism in the cordless system will hold it in position.

“**Lift to Lower**” - To lower the shade, the locking mechanism that holds the shade in place must be released. To release the lock, the shade must be slightly lifted and then guided down to the desired drop.

Note, if shade is allowed to drop on its own, it may not reach full drop and will have to be guided down the rest of the way. This safety feature will ensure that shades, especially ones with heavier fabrics, do not come down too quickly when lowered.

Single Cord Operator

To Raise -


Pull the cord straight down until it reaches full extension.

With each stroke the shade partially raises.

Allow the cord to retract completely into the headrail after each downward stroke.

Use multiple strokes until the shade reaches the desired position.

The shade can be stopped at any point while raising.

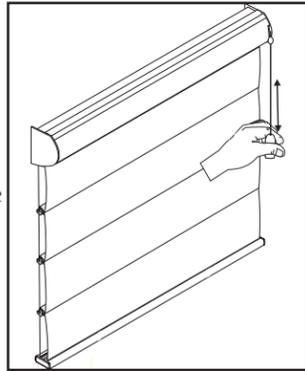

To Lower -

A short tug on the cord will release the locking mechanism and allow the shade to lower.

Step 5: Adjust Cord Length- for Single Cord Shades (if desired)

To shorten the tassel cord -
Slide the tassel up.


Retie the cord at the desired shorter length.

Trim the tassel cord.

Slide the tassel down over the knot.

Step 6: Hold Down Installation (optional)

Optional Hold Down Brackets are mounted with the supplied screws. With the shade at its proper drop, place the pin of each Hold Down into the hole in each End Cap and mark the screw holes. Make sure the pins are level and aligned. Raise the shade, then screw the Hold Down Bracket into the mounting surface.

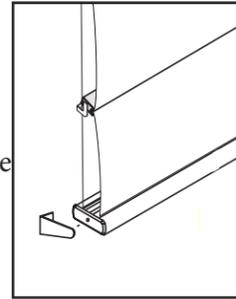


Cleaning and Care

Occasional light vacuuming with a soft bristle attachment or gentle feather dusting is all that is needed to keep integrated-liner roman shades looking fresh and neat. Occasional steaming may be needed for softer fabrics.



Integrated-Liner Roman Shade

Cord-free or Single Cord Operator

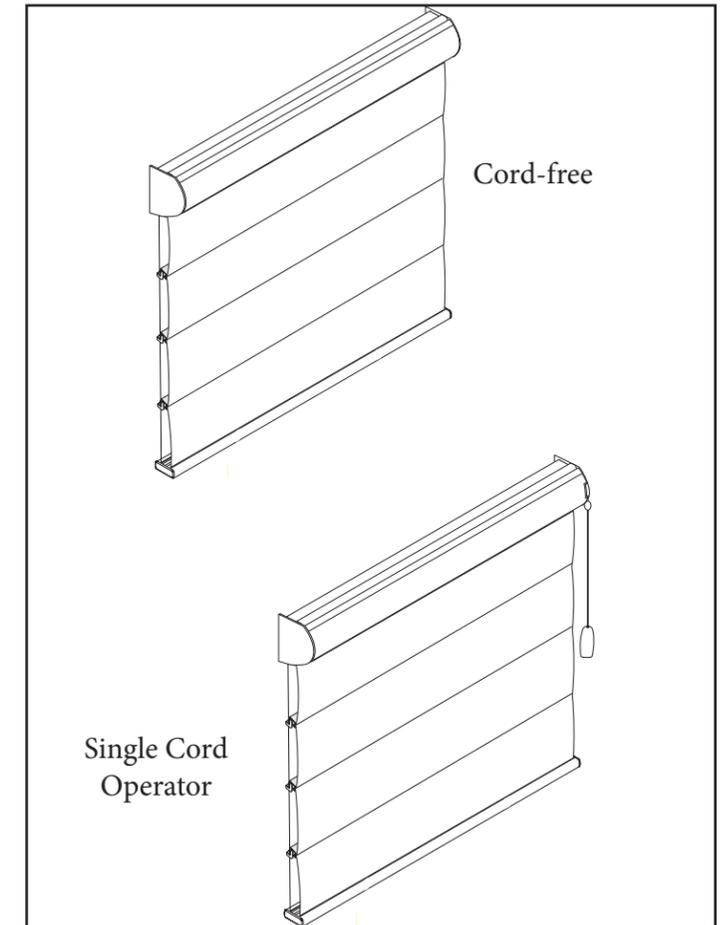

Installation Instructions

Integrated-Liner Roman Shades represent a design breakthrough in style, efficiency and function. The unique fabric hardware system is designed to provide years of reliable service when properly installed. Please take a few minutes to read through these instructions before beginning.