SelectBlinds

Installation Guide: *Panel Tracks*

Standard | No-Drill

HARDWARE AND PARTS INCLUDED



INSIDE MOUNT MOUNTING BRACKETS

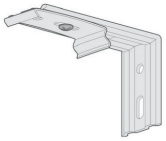

OUTSIDE MOUNT MOUNTING BRACKETS



SCREWS

NOT INCLUDED FOR NO-DRILL INSTALL

TOOLS REQUIRED



PENCIL



TAPE MEASURE



POWER DRILL



5/64" DRILL BIT



LEVEL



PHILLIPS DRILL BIT



PHILLIPS SCREWDRIVER



STEP LADDER

Quick pointers

1. If you use your own screws instead of those provided, be sure to pre-drill a small hole with a 5/64" drill bit before the final screws go in to attach brackets.
2. If you're using wall anchors, pre-drill with a 1/4" drill bit instead, then tap the wall anchors in place before drilling in the screws.

IF YOU PURCHASED THIS WITH THE *BUILT-IN NO-DRILL HEADRAIL*, SKIP TO THE FINAL PAGE OF THIS INSTALL GUIDE.

Standard Install

INSIDE MOUNT

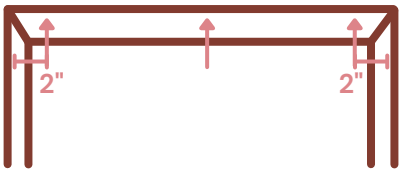

1

Using a measuring tape, make a mark about 2" from the edge of the window opening on the left and right. If you have additional brackets, make additional marks evenly spaced apart.

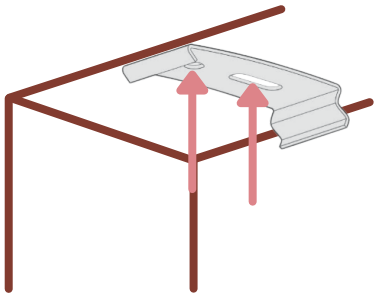

2

Using your existing marks, line up the front of the bracket with the front of the window opening. Mark your screw holes and predrill holes.

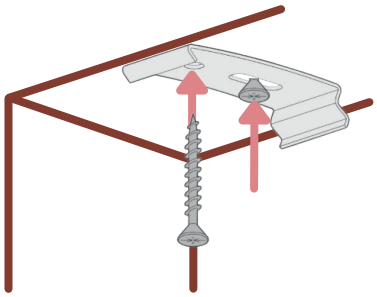

3

Using the predrilled holes, install your screws through the brackets into the top of the window opening.

OUTSIDE MOUNT

Quick pointers

You may need to assemble the outside mount bracket for installation. Included with the mounting brackets are an extension bracket, a nut, and a short screw that you can use to connect the brackets together.

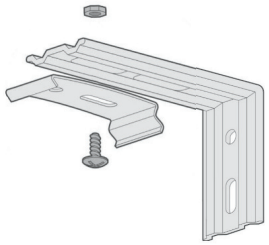

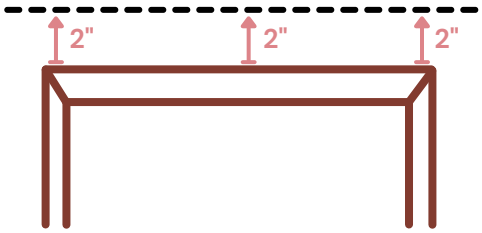

1

Using a pencil, make a mark 2" above the window opening, just above each corner of the window. If you have more than one bracket, make additional marks evenly spaced between the left and right corners. Use a level to make sure each mark is 2" above the window opening.

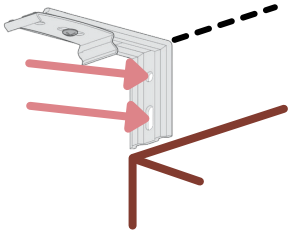

2

Using your existing marks, line up the top of the bracket with the marks. Mark your screw holes and predrill holes.

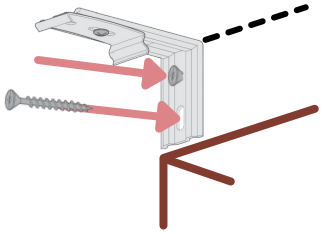

3

Using the predrilled holes, install your screws through the brackets into the wall above the window opening.

Attaching the Track

Quick pointers

For tracks that are 96" wide or more, two tracks with a Joining Plate will be provided. Slide the Joining Plate into the channel on one part of the rail and then into the other part. Insert the provided screws into the holes, securing the plate in place.

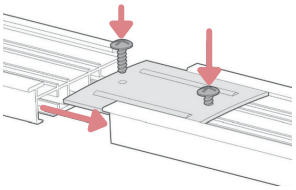

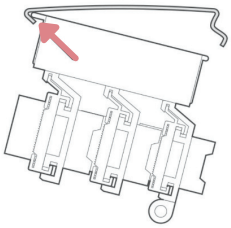

Hook the front lip of the track onto the front of the bracket.

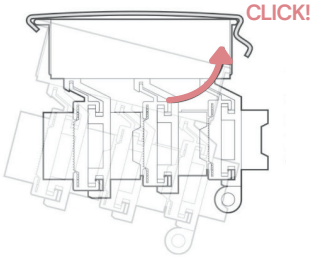

Rotate the track up towards the window opening and push it into the bracket until you hear a click.



"3 Panel" Panel Tracks will need to hook the track onto the bracket like the image above.

Quick pointers

Before installing the No-Drill Headrail, wipe the surface of the top of the window opening with an alcohol wipe and let it dry.

No-Drill Install

1

Peel off a small portion of the backing of the adhesive tape on the top of the No-Drill Headrail. Insert the No-Drill Headrail into the top of the window opening so that it's flush with the top and front of the window opening.



The lever will be on the right side and should be extended out.

2

Rest the front of the headrail in the window opening and rotate the back of the headrail up. Press and hold the headrail in place for a few moments to ensure it holds.



3

Push the lever up while holding the track against the very top of the window opening, flush with the front of the window opening.

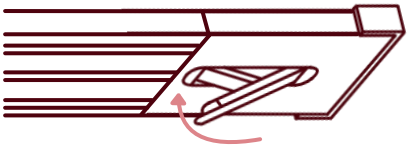

4

The lever will snap into place, and you should hear a click to confirm it is locked. Please allow 24 hours for the adhesive to set before following the next steps.

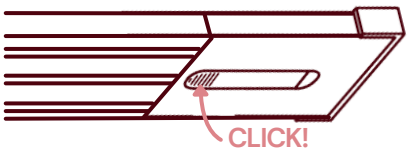

Attaching the Wand and Panels

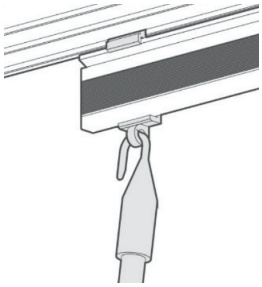

Locate the loop on the front most panel. Slot the wand into the loop with the hook.

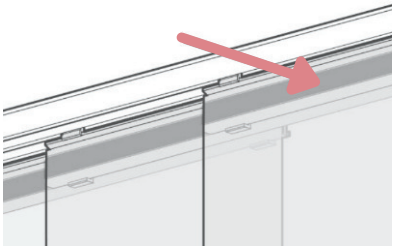

Starting with the back most slider, attach each panel to the velcro on each slider, working your way from back to front.

CLEANING INSTRUCTIONS

1 For regular maintenance, use a duster or a vacuum with a brush attachment and run it over the front and back of the shade.

2 To spot clean stains, use a damp rag with a very mild, gentle detergent or soap. Dab at the affected spots; DO NOT RUB! Let the dampened area air dry and repeat as necessary.

All fabrics are different and some may be easier to clean than others. We recommend cleaning your shades as often as once a month.